


# AML-900 Surface Mount Box



## INSTALLATION INSTRUCTIONS

The AML-900 Surface Mount Box is designed to house the AML-770 series loop isolator module. The box can mount over single gang and double gang electrical boxes, or surface mount on a wall. Three versions of the AML-900 are available: AML-900 A, AML-900 B, and AML-900 C.

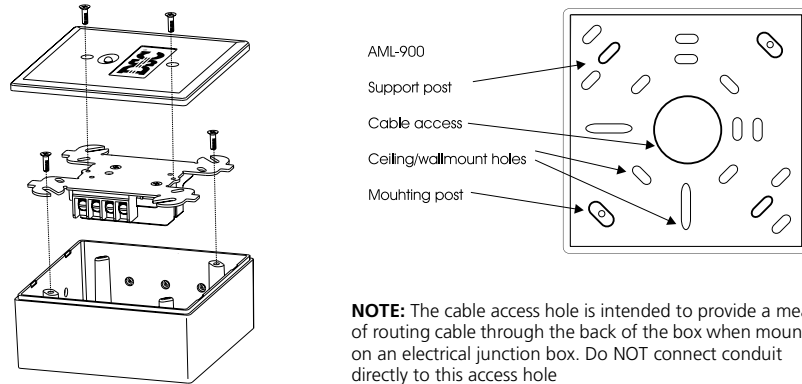

**NOTE:** The cable access hole is intended to provide a means of routing cable through the back of the box when mounted on an electrical junction box. Do NOT connect conduit directly to this access hole

1. Pre-drill a hole in the side of the AML-900 to accommodate conduit if required. Twelve drill centers are provided for conduit on the AML-900 Surface Mount Box.
2. Secure the surface mount box to the wall with the self tapping screws provided, or to a junction box with the screws provided with the module hardware package.
3. Connect conduit hub to the conduit before securing to the AML-900 box.
4. Wire the module according to the module *Installation Sheet*.
5. Secure the module to the surface mount box with the screws provided.
6. Secure the cover plate to the module, using the screws provided with the module.

### Limited Warranty

DSC warrants that for a period of one year from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, DSC shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of DSC, such as lightning, excessive voltage, mechanical shock, water damage or damage arising out of abuse, alteration or improper application of the product.

The foregoing warranty shall apply only to the original buyer, and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of DSC. This warranty contains the entire warranty. DSC neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf, to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall DSC be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

### Important!

**DSC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to but not limited to criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.**




©2001 Digital Security Controls Ltd.  
Toronto • Canada • 1-800-387-3630 • [www.dsc.com](http://www.dsc.com)  
Printed in Canada 29034459 R001

# AML-900 Surface Mount Box



## INSTALLATION INSTRUCTIONS

The AML-900 Surface Mount Box is designed to house the AML-770 series loop isolator module. The box can mount over single gang and double gang electrical boxes, or surface mount on a wall. Three versions of the AML-900 are available: AML-900 A, AML-900 B, and AML-900 C.

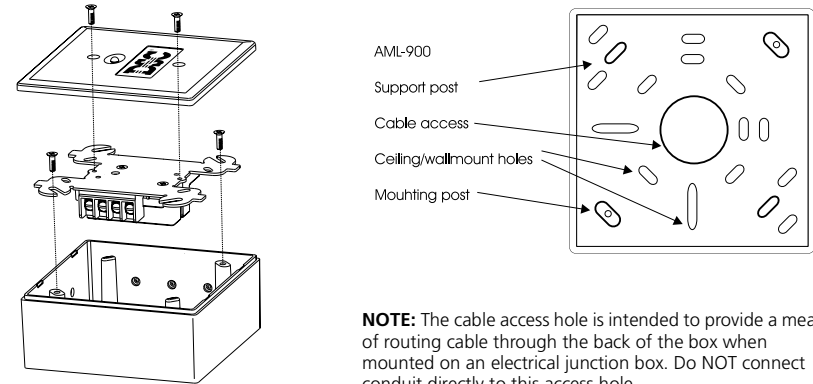

**NOTE:** The cable access hole is intended to provide a means of routing cable through the back of the box when mounted on an electrical junction box. Do NOT connect conduit directly to this access hole.

1. Pre-drill a hole in the side of the AML-900 to accommodate conduit if required. Twelve drill centers are provided for conduit on the AML-900 Surface Mount Box.
2. Secure the surface mount box to the wall with the self tapping screws provided, or to a junction box with the screws provided with the module hardware package.
3. Connect conduit hub to the conduit before securing to the AML-900 box.
4. Wire the module according to the module *Installation Sheet*.
5. Secure the module to the surface mount box with the screws provided.
6. Secure the cover plate to the module, using the screws provided with the module.

### Limited Warranty

DSC warrants that for a period of one year from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, DSC shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of DSC, such as lightning, excessive voltage, mechanical shock, water damage or damage arising out of abuse, alteration or improper application of the product.

The foregoing warranty shall apply only to the original buyer, and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of DSC. This warranty contains the entire warranty. DSC neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf, to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall DSC be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

### Important!

**DSC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to but not limited to criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.**



©2001 Digital Security Controls Ltd.  
Toronto • Canada • 1-800-387-3630 • [www.dsc.com](http://www.dsc.com)  
Printed in Canada 29034459 R001