

WLS929 Installer Sheet



Changing Function Keymats

The WLS929 is shipped with a pre-printed function keymat with default function keys. This unit is also shipped with a blank function keymat and function key stickers. If the user does not wish to use the functions as printed on the keymat of the WLS929 you can change this. To change the keymat please follow these steps:

1. Open up the unit by inserting a flathead screwdriver into the slot at the wide end of the plastic. Carefully twist the screwdriver to separate the top and bottom plastic.
2. Remove the Printed Circuit Board (PCB) by gripping the exposed battery clips and lifting upward, ensuring you do not touch the coils or the antenna.
3. Set the PCB down carefully.
4. Pull out the keymat inside the unit and replace it with the blank keymat.
5. Set the board back in the plastic, in the same manner it was lifted out, ensuring that the PCB's 'half circle' antenna is facing up.
6. Snap the plastic casings together.
7. Program the function buttons as desired using the *Installation Manual* of the product with which you are using the WLS929.
8. Place the corresponding stickers for each function key on the back of the WLS929.



Do not touch the antenna or coils when handling the PCB as this may damage the unit.

