



# Installation Manual

PC5400 ADT-DVACS Version 3.0TAFNZ

**• W A R N I N G •**

Please refer to the System Installation Manual for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.





---

# Table of Contents

<b>Introduction</b>	<b>3</b>
Features .....	3
Module Specifications .....	3
Installation .....	3
<b>PC5400 Hookup Diagram</b>	<b>4</b>
<b>Programming Section Descriptions</b>	<b>5</b>
<b>Programming Worksheets</b>	<b>6</b>
PC580, PC1555, PC5008, PC5010, PC5015, PC5020	
Programming Sections .....	7
<b>Appendix A: ADT DVACS Transmission Table</b>	<b>30</b>
<b>Appendix B: Special Events for PC5010 v1.03 ADTU</b>	<b>34</b>
<b>Appendix C: ADT DVACS Zone Reporting Types</b>	<b>35</b>



---

# Introduction

## Features

Allows compatible alarm control panels to be connected to a DVACS communications network.

## Module Specifications

- 4 wire (QUAD) hook-up to Keybus
- Normal current draw of 35mA
- Tamper and Trouble reporting codes
- Maximum cable length: 61m (200 ft)

## PC5400 connected to a DVACS network

- Automatic programming for DVACS reporting codes.
- Monitoring for DVACS line fault.
- Module self diagnostics.

## Compatible Panels

- PC580
- PC1555
- PC5008
- PC5010
- PC5015
- PC5020

## Installation

### Mounting the Cabinet

When mounting a new cabinet for the PC5400, select a dry location near the F1/F2 subset for DVACS communications.

### To mount the PC5400:

1. Press the four white circuit board standoffs into the raised mounting holes from the back of the cabinet.
2. Hold the cabinet in position and pull the wires into the cabinet.
3. Mount the cabinet securely to the wall using the mounting screws provided. Use the appropriate wall anchors when securing the panel to the drywall, plaster, concrete, brick or other similar surfaces.
4. With the cabinet mounted press the PC5400 module onto the standoffs.

### Wiring

Refer to the Hook-up Diagram included in this manual.


### RED, BLK, YEL and GRN Terminals

Connect the RED, BLK, YEL and GRN terminals to the RED, BLK, YEL and GRN terminals on the control panel. Refer to the control panel *Installation Manual* for complete instructions on Keybus wiring.

### T1 and T2

Connect T1 and T2 to a normally closed switch that will be used to monitor tampers. If no tamper switch is desired place a wire between T1 and T2.

# PC5400 Hookup Diagram

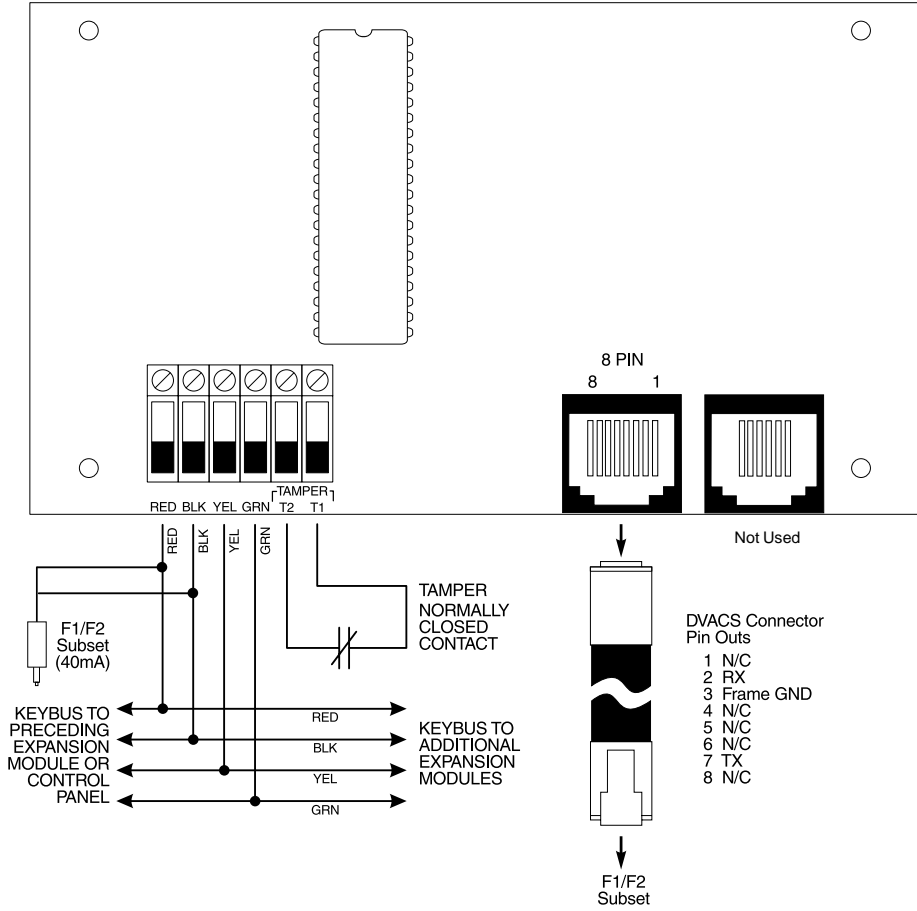

---

## Programming Section Descriptions

If you will be connecting the PC5400 to a PC580, PC1555, PC5008, PC5010, PC5015 or PC5020 control panel, access the PC5400 programming sections at a system keypad by entering [\*][8][Installer's Code][803]. Then enter the 2-digit number of the section you want to program.

### Section [06], Option [2]: AC Communications

To change from standard DVACS (150 Baud) to AC communications protocol (300 Baud) program this option as ON.

### Section [07]: Subsystem Number

Program the DVACS Subsystem number in this section.

### Section [08]: Group Number

Program the DVACS Group number in this section.

### Section [09]: Panel DVACS Identifier Code

Program the DVACS ID code in this section.

### Sections [10-17], [28-30] and [35]: DVACS Reporting Codes

Program the DVACS reporting codes in these sections (see Appendix A: ADT DVACS Transmission Table):

- To have the PC5400 transmit a pre-programmed code from the internal table, leave the programming at the default value FF.
- To prevent the PC5400 from reporting an event, program the code as 00.
- To have the PC5400 transmit a different code, program a value from 01-FE.

### Sections [18-27]: Transmission Options

To prevent the PC5400 from transmitting a group of reporting codes (e.g. zone troubles or zone trouble restorals) program the appropriate option as OFF. All options are ON by default.

### Sections [31-34]: Zone Definitions

Make sure that the zone definitions match those programmed in the control panel.

### Sections [36-99]: Zone Assignments

The programming in these sections tells the PC5400 which partitions each zone is assigned to (on control panels which are capable of partitioning) and/or which zones are in active use.

If the PC5400 is connected to a control panel using partitions, make sure that the zone/partition assignments match those programmed in the control panel.

*If the PC5400 is connected to a control panel without partitions, you must still program these sections: for each used zone on the control panel, turn ON the option that assigns the zone to partition 1.*

**NOTE:** If you change any of the above options from the default settings, test the PC5400 to make sure it is operating as desired.

# Programming Worksheets

If you will be connecting the PC5400 to a PC580, PC1555, PC5008, PC5010, PC5015 or PC5020 control panel, access the PC5400 programming sections at a system keypad by entering [\*][8][Installer's Code][803]. Then enter the 2-digit number of the section you want to program. See page 7 for PC580, PC1555, PC5008, PC5010, PC5015 or PC5020 programming sections.

## Program the following sections for all control panels:

### [06] Miscellaneous Options

#### Default

OFF  *Option 1*

OFF  *Option 2*

OFF  *Option 3-8*

#### Option ON

For Future Use

AC Communications

For Future Use

#### Option OFF

DVACS Communications

### [07] Subsystem Number

#### Default

00   (Valid entries are 00-99)

### [08] Group Number

#### Default

00   (Valid entries are 00-99)

### [09] Panel Identifier

#### Default

00   (Valid entries are 00-63)

## PC580, PC1555, PC5008, PC5010, PC5015, PC5020 Programming Sections

### [10] Zone 1-16 Reporting Codes

#### Default

FF   Zone 1

FF   Zone 2

FF   Zone 3

FF   Zone 4

FF   Zone 5

FF   Zone 6

FF   Zone 7

FF   Zone 8

#### Default

FF   Zone 9

FF   Zone 10

FF   Zone 11

FF   Zone 12

FF   Zone 13

FF   Zone 14

FF   Zone 15

FF   Zone 16

### [11] Zone 17-32 Reporting Codes

#### Default

FF   Zone 17

FF   Zone 18

FF   Zone 19

FF   Zone 20

FF   Zone 21

FF   Zone 22

FF   Zone 23

FF   Zone 24

#### Default

FF   Zone 25

FF   Zone 26

FF   Zone 27

FF   Zone 28

FF   Zone 29

FF   Zone 30

FF   Zone 31

FF   Zone 32



---

**[12] Zone 33-48 Reporting Codes**

**Default**

FF [ ][ ] Zone 33  
FF [ ][ ] Zone 34  
FF [ ][ ] Zone 35  
FF [ ][ ] Zone 36  
FF [ ][ ] Zone 37  
FF [ ][ ] Zone 38  
FF [ ][ ] Zone 39  
FF [ ][ ] Zone 40

**Default**

FF [ ][ ] Zone 41  
FF [ ][ ] Zone 42  
FF [ ][ ] Zone 43  
FF [ ][ ] Zone 44  
FF [ ][ ] Zone 45  
FF [ ][ ] Zone 46  
FF [ ][ ] Zone 47  
FF [ ][ ] Zone 48

**[13] Zone 49-64 Reporting Codes**

**Default**

FF [ ][ ] Zone 49  
FF [ ][ ] Zone 50  
FF [ ][ ] Zone 51  
FF [ ][ ] Zone 52  
FF [ ][ ] Zone 53  
FF [ ][ ] Zone 54  
FF [ ][ ] Zone 55  
FF [ ][ ] Zone 56

**Default**

FF [ ][ ] Zone 57  
FF [ ][ ] Zone 58  
FF [ ][ ] Zone 59  
FF [ ][ ] Zone 60  
FF [ ][ ] Zone 61  
FF [ ][ ] Zone 62  
FF [ ][ ] Zone 63  
FF [ ][ ] Zone 64

**[14] Keypad 1-8 Reporting Codes**

**Default**

FF [ ][ ] Keypad 1  
FF [ ][ ] Keypad 2  
FF [ ][ ] Keypad 3  
FF [ ][ ] Keypad 4

**Default**

FF [ ][ ] Keypad 5  
FF [ ][ ] Keypad 6  
FF [ ][ ] Keypad 7  
FF [ ][ ] Keypad 8

**[15] Zone Expander 1-7 Reporting Codes**

**Default**

FF [ ][ ] Expander 1  
FF [ ][ ] Expander 2  
FF [ ][ ] Expander 3  
FF [ ][ ] Expander 4

**Default**

FF [ ][ ] Expander 5  
FF [ ][ ] Expander 6  
FF [ ][ ] Expander 7  
FF [ ][ ] PC5100

**[16] Miscellaneous Reporting Codes**

**Default**

FF [ ][ ] 2 Wire Smoke  
FF [ ][ ] Aux Power Supply  
FF [ ][ ] Phone #1 FTC  
FF [ ][ ] Phone #2 FTC

**Default**

FF [ ][ ] Keypad [F,A,P]  
FF [ ][ ] TLM Trouble  
FF [ ][ ] Bell Supervisory  
FF [ ][ ] **For Future Use**

---

**[17] Module Reporting Codes**

**Default**

FF   PC5132  
FF   PC5208  
FF   PC5204  
FF   PC5400

**Default**

FF   ESCORT5580  
FF   PC59xx  
FF   Downlook Module  
FF   Alternate Communicator

**[18] First Transmission Options**

**Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Zone Alarms  
Zone Alarm Restorals  
Zone Troubles  
Zone Trouble Restorals  
Zone Tampers  
Zone Tamper Restorals  
Zone Low Battery  
Zone Bypass

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Common Partial Closing

**[19] Second Transmission Options**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Keypad Fire  
Keypad Auxiliary  
Keypad Panic  
Duress  
Keypad Supervisory  
Keypad Supervisory Restore  
Keypad Tamper  
Keypad Tamper Restore

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

**[20] Third Transmission Options**

**Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Zone Expander Supervisory  
Zone Expander Superv. Restore  
Zone Expander Tamper  
Zone Expander Tamper Restore  
PC5132 Supervisory  
PC5132 Supervisory Restore  
PC5132 Tamper  
PC5132 Tamper Restore

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

---

**[21] Fourth Transmission Options****Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

PC5400 Supervisory  
PC5400 Supervisory Restore  
PC5400 Tamper  
PC5400 Tamper Restore  
Downlook Module Supervisory  
DLK Mod. Supervisory Restore  
PC5204 Output 1 Fail  
PC5204 Output 1 Restore

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

**[22] Fifth Transmission Options****Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

PC520X Supervisory  
PC520X Supervisory Restore  
PC520X Tamper  
PC520X Tamper Restore  
PC520X AC Failure  
PC520X AC Restore  
PC520X Battery Trouble  
PC520X Battery Restore

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

**[23] Sixth Transmission Options****Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

PC5208 Supervisory  
PC5208 Supervisory Restore  
PC5208 Tamper  
PC5208 Tamper Restore  
PC59xx Supervisory  
PC59xx Supervisory Restore  
ESCORT5580 Supervisory  
ESCORT5580 Supervisory Restore

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

**[24] Seventh Transmission Options****Default**

ON  *Option 1*  
OFF  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Closing By User  
Recent Closing  
**For Future Use**  
Automatic Closing  
Quick Arm  
Closing By Maintenance Code  
Closing By Keypad Zone  
Closing By Downloading

**Option Off**

Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled  
Disabled

---

**[25] Eighth Transmission Options**

<b>Default</b>		<b>Option On</b>	<b>Option Off</b>	
ON	<input type="checkbox"/>	<i>Option 1</i>	Opening By User	Disabled
OFF	<input type="checkbox"/>	<i>Option 2</i>	Auto Arm Cancellation	Disabled
ON	<input type="checkbox"/>	<i>Option 3</i>	Opening By Maintenance Code	Disabled
ON	<input type="checkbox"/>	<i>Option 4</i>	Opening By Keyswitch Zone	Disabled
ON	<input type="checkbox"/>	<i>Option 5</i>	Opening By Downloading	Disabled
OFF	<input type="checkbox"/>	<i>Option 6</i>	Opening After Alarm	Disabled
ON	<input type="checkbox"/>	<i>Option 7</i>	Late to Close	Disabled
ON	<input type="checkbox"/>	<i>Option 8</i>	Downlook Module Remote Trigger	Disabled

**[26] Ninth Transmission Options**

<b>Default</b>		<b>Option On</b>	<b>Option Off</b>	
ON	<input type="checkbox"/>	<i>Option 1</i>	Battery Trouble	Disabled
ON	<input type="checkbox"/>	<i>Option 2</i>	AC Failure	Disabled
ON	<input type="checkbox"/>	<i>Option 3</i>	Fire Trouble	Disabled
ON	<input type="checkbox"/>	<i>Option 4</i>	Keybus Failure	Disabled
ON	<input type="checkbox"/>	<i>Option 5</i>	Police Code	Disabled
ON	<input type="checkbox"/>	<i>Option 6</i>	Delinquency	Disabled
ON	<input type="checkbox"/>	<i>Option 7</i>	PC5100 Supervisory	Disabled
ON	<input type="checkbox"/>	<i>Option 8</i>	PC5100 Supervisory Restore	Disabled

**[27] Tenth Transmission Options**

<b>Default</b>		<b>Option On</b>	<b>Option Off</b>	
ON	<input type="checkbox"/>	<i>Option 1</i>	PC520X Trouble	Disabled
ON	<input type="checkbox"/>	<i>Option 2</i>	PC520X Trouble Restore	Disabled
ON	<input type="checkbox"/>	<i>Option 3</i>	Alternate Communicator Supervisory	Disabled
ON	<input type="checkbox"/>	<i>Option 4</i>	Alternate Comm. Superv. Restore	Disabled
ON	<input type="checkbox"/>	<i>Option 5</i>	Alternate Communicator Tamper	Disabled
ON	<input type="checkbox"/>	<i>Option 6</i>	Alternate Comm. Tamper Restore	Disabled
ON	<input type="checkbox"/>	<i>Option 7</i>	PC5100 Tamper	Disabled
ON	<input type="checkbox"/>	<i>Option 8</i>	PC5100 Tamper Restore	Disabled

**[28] Handheld Keypad Low Battery / PC5200 Reporting Codes**

<b>Default</b>		<b>Default</b>		
FF	<input type="checkbox"/>	Handheld Keypad 1	FF <input type="checkbox"/>	PC5200 1
FF	<input type="checkbox"/>	Handheld Keypad 2	FF <input type="checkbox"/>	PC5200 2
FF	<input type="checkbox"/>	Handheld Keypad 3	FF <input type="checkbox"/>	PC5200 3
FF	<input type="checkbox"/>	Handheld Keypad 4	FF <input type="checkbox"/>	PC5200 4

**[29] Wireless Key 1-8 Low Battery Reporting Codes**

**Default**

FF [ ][ ] Wireless Key 1  
FF [ ][ ] Wireless Key 2  
FF [ ][ ] Wireless Key 3  
FF [ ][ ] Wireless Key 4

**Default**

FF [ ][ ] Wireless Key 5  
FF [ ][ ] Wireless Key 6  
FF [ ][ ] Wireless Key 7  
FF [ ][ ] Wireless Key 8

**[30] Wireless Key 9-16 Low Battery Reporting Codes**

**Default**

FF [ ][ ] Wireless Key 9  
FF [ ][ ] Wireless Key 10  
FF [ ][ ] Wireless Key 11  
FF [ ][ ] Wireless Key 12

**Default**

FF [ ][ ] Wireless Key 13  
FF [ ][ ] Wireless Key 14  
FF [ ][ ] Wireless Key 15  
FF [ ][ ] Wireless Key 16

**ZONE DEFINITIONS**

**00** Null Zone (Not Used)  
**01** Delay 1  
**02** Delay 2  
**03** Instant  
**04** Interior  
**05** Interior, Home-Away  
**06** Delay, Home-Away  
**07** Delayed 24-Hour Fire (Hardwired)  
**08** Standard 24-Hour Fire (Hardwired)  
**09** 24-Hour Supervisory (LINKS)  
**10** 24-Hour Supervisory Buzzer

**11** 24-Hour Burglary  
**12** 24-Hour Holdup  
**13** 24-Hour Gas  
**14** 24-Hour Heat  
**15** 24-Hour Medical  
**16** 24-Hour Panic  
**17** 24-Hour Emergency  
**18** 24-Hour Sprinkler  
**19** 24-Hour Water  
**20** 24-Hour Freeze  
**21** 24-Hour Latching Tamper

**22** Momentary Keyswitch Arm  
**23** Maintained Keyswitch Arm  
**24** LINKS Answer  
**25\*** Interior Delay  
**26\*\*** 24-Hour Non-Alarm  
**27\*\*\*** Delayed 24-Hour Waterflow  
**28\*\*\*** Instant 24-Hour Waterflow  
**29\*\*\*** Auto Verified Fire  
**30\*\*\*** Fire Supervisory  
**31\*\*\*** Day Zone  
**87** Delayed 24-Hour Fire (Wireless)  
**88** Standard 24-Hour Fire (Wireless)

\*25 for v2.1 and higher control panels only

\*\*26 for v2.2 and higher control panels only

\*\*\*27-31 for PC5020 v3.1 and higher versions only

**[31] Zone 1-16 Definitions**

**Default**

01 [ ][ ] Zone 1  
03 [ ][ ] Zone 2  
03 [ ][ ] Zone 3  
03 [ ][ ] Zone 4  
04 [ ][ ] Zone 5  
04 [ ][ ] Zone 6  
04 [ ][ ] Zone 7  
04 [ ][ ] Zone 8

**Default**

00 [ ][ ] Zone 9  
00 [ ][ ] Zone 10  
00 [ ][ ] Zone 11  
00 [ ][ ] Zone 12  
00 [ ][ ] Zone 13  
00 [ ][ ] Zone 14  
00 [ ][ ] Zone 15  
00 [ ][ ] Zone 16

---

**[32] Zone 17-32 Definitions**

**Default**

00 [ ][ ] Zone 17  
00 [ ][ ] Zone 18  
00 [ ][ ] Zone 19  
00 [ ][ ] Zone 20  
00 [ ][ ] Zone 21  
00 [ ][ ] Zone 22  
00 [ ][ ] Zone 23  
00 [ ][ ] Zone 24

**Default**

00 [ ][ ] Zone 25  
00 [ ][ ] Zone 26  
00 [ ][ ] Zone 27  
00 [ ][ ] Zone 28  
00 [ ][ ] Zone 29  
00 [ ][ ] Zone 30  
00 [ ][ ] Zone 31  
00 [ ][ ] Zone 32

**[33] Zone 33-48 Definitions**

**Default**

00 [ ][ ] Zone 33  
00 [ ][ ] Zone 34  
00 [ ][ ] Zone 35  
00 [ ][ ] Zone 36  
00 [ ][ ] Zone 37  
00 [ ][ ] Zone 38  
00 [ ][ ] Zone 39  
00 [ ][ ] Zone 40

**Default**

00 [ ][ ] Zone 41  
00 [ ][ ] Zone 42  
00 [ ][ ] Zone 43  
00 [ ][ ] Zone 44  
00 [ ][ ] Zone 45  
00 [ ][ ] Zone 46  
00 [ ][ ] Zone 47  
00 [ ][ ] Zone 48

**[34] Zone 49-64 Definitions**

**Default**

00 [ ][ ] Zone 49  
00 [ ][ ] Zone 50  
00 [ ][ ] Zone 51  
00 [ ][ ] Zone 52  
00 [ ][ ] Zone 53  
00 [ ][ ] Zone 54  
00 [ ][ ] Zone 55  
00 [ ][ ] Zone 56

**Default**

00 [ ][ ] Zone 57  
00 [ ][ ] Zone 58  
00 [ ][ ] Zone 59  
00 [ ][ ] Zone 60  
00 [ ][ ] Zone 61  
00 [ ][ ] Zone 62  
00 [ ][ ] Zone 63  
00 [ ][ ] Zone 64

**[35] PC5700 Reporting Codes**

**Default**

FF [ ][ ] PC5700 Ground Fault / Restore  
FF [ ][ ] PC5700 TLM Line 1 Trouble / Restore  
FF [ ][ ] PC5700 TLM Line 2 Trouble / Restore

---

**[36] Partition 1 Zone Assignments (1-8)**

**Default**

ON  **Option 1**  
ON  **Option 2**  
ON  **Option 3**  
ON  **Option 4**  
ON  **Option 5**  
ON  **Option 6**  
ON  **Option 7**  
ON  **Option 8**

**Option On**

Zone 1 is on Partition 1  
Zone 2 is on Partition 1  
Zone 3 is on Partition 1  
Zone 4 is on Partition 1  
Zone 5 is on Partition 1  
Zone 6 is on Partition 1  
Zone 7 is on Partition 1  
Zone 8 is on Partition 1

**Option Off**

Zone 1 is not on Partition 1  
Zone 2 is not on Partition 1  
Zone 3 is not on Partition 1  
Zone 4 is not on Partition 1  
Zone 5 is not on Partition 1  
Zone 6 is not on Partition 1  
Zone 7 is not on Partition 1  
Zone 8 is not on Partition 1

**[37] Partition 1 Zone Assignments (9-16)**

**Default**

OFF  **Option 1**  
OFF  **Option 2**  
OFF  **Option 3**  
OFF  **Option 4**  
OFF  **Option 5**  
OFF  **Option 6**  
OFF  **Option 7**  
OFF  **Option 8**

**Option On**

Zone 9 is on Partition 1  
Zone 10 is on Partition 1  
Zone 11 is on Partition 1  
Zone 12 is on Partition 1  
Zone 13 is on Partition 1  
Zone 14 is on Partition 1  
Zone 15 is on Partition 1  
Zone 16 is on Partition 1

**Option Off**

Zone 9 is not on Partition 1  
Zone 10 is not on Partition 1  
Zone 11 is not on Partition 1  
Zone 12 is not on Partition 1  
Zone 13 is not on Partition 1  
Zone 14 is not on Partition 1  
Zone 15 is not on Partition 1  
Zone 16 is not on Partition 1

**[38] Partition 1 Zone Assignments (17-24)**

**Default**

OFF  **Option 1**  
OFF  **Option 2**  
OFF  **Option 3**  
OFF  **Option 4**  
OFF  **Option 5**  
OFF  **Option 6**  
OFF  **Option 7**  
OFF  **Option 8**

**Option On**

Zone 17 is on Partition 1  
Zone 18 is on Partition 1  
Zone 19 is on Partition 1  
Zone 20 is on Partition 1  
Zone 21 is on Partition 1  
Zone 22 is on Partition 1  
Zone 23 is on Partition 1  
Zone 24 is on Partition 1

**Option Off**

Zone 17 is not on Partition 1  
Zone 18 is not on Partition 1  
Zone 19 is not on Partition 1  
Zone 20 is not on Partition 1  
Zone 21 is not on Partition 1  
Zone 22 is not on Partition 1  
Zone 23 is not on Partition 1  
Zone 24 is not on Partition 1

**[39] Partition 1 Zone Assignments (25-32)**

**Default**

OFF  **Option 1**  
OFF  **Option 2**  
OFF  **Option 3**  
OFF  **Option 4**  
OFF  **Option 5**  
OFF  **Option 6**  
OFF  **Option 7**  
OFF  **Option 8**

**Option On**

Zone 25 is on Partition 1  
Zone 26 is on Partition 1  
Zone 27 is on Partition 1  
Zone 28 is on Partition 1  
Zone 29 is on Partition 1  
Zone 30 is on Partition 1  
Zone 31 is on Partition 1  
Zone 32 is on Partition 1

**Option Off**

Zone 25 is not on Partition 1  
Zone 26 is not on Partition 1  
Zone 27 is not on Partition 1  
Zone 28 is not on Partition 1  
Zone 29 is not on Partition 1  
Zone 30 is not on Partition 1  
Zone 31 is not on Partition 1  
Zone 32 is not on Partition 1

**[40] Partition 1 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 1
- Zone 34 is on Partition 1
- Zone 35 is on Partition 1
- Zone 36 is on Partition 1
- Zone 37 is on Partition 1
- Zone 38 is on Partition 1
- Zone 39 is on Partition 1
- Zone 40 is on Partition 1

**Option Off**

- Zone 33 is not on Partition 1
- Zone 34 is not on Partition 1
- Zone 35 is not on Partition 1
- Zone 36 is not on Partition 1
- Zone 37 is not on Partition 1
- Zone 38 is not on Partition 1
- Zone 39 is not on Partition 1
- Zone 40 is not on Partition 1

**[41] Partition 1 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 1
- Zone 42 is on Partition 1
- Zone 43 is on Partition 1
- Zone 44 is on Partition 1
- Zone 45 is on Partition 1
- Zone 46 is on Partition 1
- Zone 47 is on Partition 1
- Zone 48 is on Partition 1

**Option Off**

- Zone 41 is not on Partition 1
- Zone 42 is not on Partition 1
- Zone 43 is not on Partition 1
- Zone 44 is not on Partition 1
- Zone 45 is not on Partition 1
- Zone 46 is not on Partition 1
- Zone 47 is not on Partition 1
- Zone 48 is not on Partition 1

**[42] Partition 1 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 1
- Zone 50 is on Partition 1
- Zone 51 is on Partition 1
- Zone 52 is on Partition 1
- Zone 53 is on Partition 1
- Zone 54 is on Partition 1
- Zone 55 is on Partition 1
- Zone 56 is on Partition 1

**Option Off**

- Zone 49 is not on Partition 1
- Zone 50 is not on Partition 1
- Zone 51 is not on Partition 1
- Zone 52 is not on Partition 1
- Zone 53 is not on Partition 1
- Zone 54 is not on Partition 1
- Zone 55 is not on Partition 1
- Zone 56 is not on Partition 1

**[43] Partition 1 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 1
- Zone 58 is on Partition 1
- Zone 59 is on Partition 1
- Zone 60 is on Partition 1
- Zone 61 is on Partition 1
- Zone 62 is on Partition 1
- Zone 63 is on Partition 1
- Zone 64 is on Partition 1

**Option Off**

- Zone 57 is not on Partition 1
- Zone 58 is not on Partition 1
- Zone 59 is not on Partition 1
- Zone 60 is not on Partition 1
- Zone 61 is not on Partition 1
- Zone 62 is not on Partition 1
- Zone 63 is not on Partition 1
- Zone 64 is not on Partition 1



---

**[44] Partition 2 Zone Assignments (1-8)**

**Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Zone 1 is on Partition 2  
Zone 2 is on Partition 2  
Zone 3 is on Partition 2  
Zone 4 is on Partition 2  
Zone 5 is on Partition 2  
Zone 6 is on Partition 2  
Zone 7 is on Partition 2  
Zone 8 is on Partition 2

**Option Off**

Zone 1 is not on Partition 2  
Zone 2 is not on Partition 2  
Zone 3 is not on Partition 2  
Zone 4 is not on Partition 2  
Zone 5 is not on Partition 2  
Zone 6 is not on Partition 2  
Zone 7 is not on Partition 2  
Zone 8 is not on Partition 2

**[45] Partition 2 Zone Assignments (9-16)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 9 is on Partition 2  
Zone 10 is on Partition 2  
Zone 11 is on Partition 2  
Zone 12 is on Partition 2  
Zone 13 is on Partition 2  
Zone 14 is on Partition 2  
Zone 15 is on Partition 2  
Zone 16 is on Partition 2

**Option Off**

Zone 9 is not on Partition 2  
Zone 10 is not on Partition 2  
Zone 11 is not on Partition 2  
Zone 12 is not on Partition 2  
Zone 13 is not on Partition 2  
Zone 14 is not on Partition 2  
Zone 15 is not on Partition 2  
Zone 16 is not on Partition 2

**[46] Partition 2 Zone Assignments (17-24)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 17 is on Partition 2  
Zone 18 is on Partition 2  
Zone 19 is on Partition 2  
Zone 20 is on Partition 2  
Zone 21 is on Partition 2  
Zone 22 is on Partition 2  
Zone 23 is on Partition 2  
Zone 24 is on Partition 2

**Option Off**

Zone 17 is not on Partition 2  
Zone 18 is not on Partition 2  
Zone 19 is not on Partition 2  
Zone 20 is not on Partition 2  
Zone 21 is not on Partition 2  
Zone 22 is not on Partition 2  
Zone 23 is not on Partition 2  
Zone 24 is not on Partition 2

**[47] Partition 2 Zone Assignments (25-32)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 25 is on Partition 2  
Zone 26 is on Partition 2  
Zone 27 is on Partition 2  
Zone 28 is on Partition 2  
Zone 29 is on Partition 2  
Zone 30 is on Partition 2  
Zone 31 is on Partition 2  
Zone 32 is on Partition 2

**Option Off**

Zone 25 is not on Partition 2  
Zone 26 is not on Partition 2  
Zone 27 is not on Partition 2  
Zone 28 is not on Partition 2  
Zone 29 is not on Partition 2  
Zone 30 is not on Partition 2  
Zone 31 is not on Partition 2  
Zone 32 is not on Partition 2

**[48] Partition 2 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 2
- Zone 34 is on Partition 2
- Zone 35 is on Partition 2
- Zone 36 is on Partition 2
- Zone 37 is on Partition 2
- Zone 38 is on Partition 2
- Zone 39 is on Partition 2
- Zone 40 is on Partition 2

**Option Off**

- Zone 33 is not on Partition 2
- Zone 34 is not on Partition 2
- Zone 35 is not on Partition 2
- Zone 36 is not on Partition 2
- Zone 37 is not on Partition 2
- Zone 38 is not on Partition 2
- Zone 39 is not on Partition 2
- Zone 40 is not on Partition 2

**[49] Partition 2 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 2
- Zone 42 is on Partition 2
- Zone 43 is on Partition 2
- Zone 44 is on Partition 2
- Zone 45 is on Partition 2
- Zone 46 is on Partition 2
- Zone 47 is on Partition 2
- Zone 48 is on Partition 2

**Option Off**

- Zone 41 is not on Partition 2
- Zone 42 is not on Partition 2
- Zone 43 is not on Partition 2
- Zone 44 is not on Partition 2
- Zone 45 is not on Partition 2
- Zone 46 is not on Partition 2
- Zone 47 is not on Partition 2
- Zone 48 is not on Partition 2

**[50] Partition 2 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 2
- Zone 50 is on Partition 2
- Zone 51 is on Partition 2
- Zone 52 is on Partition 2
- Zone 53 is on Partition 2
- Zone 54 is on Partition 2
- Zone 55 is on Partition 2
- Zone 56 is on Partition 2

**Option Off**

- Zone 49 is not on Partition 2
- Zone 50 is not on Partition 2
- Zone 51 is not on Partition 2
- Zone 52 is not on Partition 2
- Zone 53 is not on Partition 2
- Zone 54 is not on Partition 2
- Zone 55 is not on Partition 2
- Zone 56 is not on Partition 2

**[51] Partition 2 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 2
- Zone 58 is on Partition 2
- Zone 59 is on Partition 2
- Zone 60 is on Partition 2
- Zone 61 is on Partition 2
- Zone 62 is on Partition 2
- Zone 63 is on Partition 2
- Zone 64 is on Partition 2

**Option Off**

- Zone 57 is not on Partition 2
- Zone 58 is not on Partition 2
- Zone 59 is not on Partition 2
- Zone 60 is not on Partition 2
- Zone 61 is not on Partition 2
- Zone 62 is not on Partition 2
- Zone 63 is not on Partition 2
- Zone 64 is not on Partition 2

**[52] Partition 3 Zone Assignments (1-8)**

**Default**

- ON  *Option 1*
- ON  *Option 2*
- ON  *Option 3*
- ON  *Option 4*
- ON  *Option 5*
- ON  *Option 6*
- ON  *Option 7*
- ON  *Option 8*

**Option On**

- Zone 1 is on Partition 3
- Zone 2 is on Partition 3
- Zone 3 is on Partition 3
- Zone 4 is on Partition 3
- Zone 5 is on Partition 3
- Zone 6 is on Partition 3
- Zone 7 is on Partition 3
- Zone 8 is on Partition 3

**Option Off**

- Zone 1 is not on Partition 3
- Zone 2 is not on Partition 3
- Zone 3 is not on Partition 3
- Zone 4 is not on Partition 3
- Zone 5 is not on Partition 3
- Zone 6 is not on Partition 3
- Zone 7 is not on Partition 3
- Zone 8 is not on Partition 3

**[53] Partition 3 Zone Assignments (9-16)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 9 is on Partition 3
- Zone 10 is on Partition 3
- Zone 11 is on Partition 3
- Zone 12 is on Partition 3
- Zone 13 is on Partition 3
- Zone 14 is on Partition 3
- Zone 15 is on Partition 3
- Zone 16 is on Partition 3

**Option Off**

- Zone 9 is not on Partition 3
- Zone 10 is not on Partition 3
- Zone 11 is not on Partition 3
- Zone 12 is not on Partition 3
- Zone 13 is not on Partition 3
- Zone 14 is not on Partition 3
- Zone 15 is not on Partition 3
- Zone 16 is not on Partition 3

**[54] Partition 3 Zone Assignments (17-24)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 17 is on Partition 3
- Zone 18 is on Partition 3
- Zone 19 is on Partition 3
- Zone 20 is on Partition 3
- Zone 21 is on Partition 3
- Zone 22 is on Partition 3
- Zone 23 is on Partition 3
- Zone 24 is on Partition 3

**Option Off**

- Zone 17 is not on Partition 3
- Zone 18 is not on Partition 3
- Zone 19 is not on Partition 3
- Zone 20 is not on Partition 3
- Zone 21 is not on Partition 3
- Zone 22 is not on Partition 3
- Zone 23 is not on Partition 3
- Zone 24 is not on Partition 3

**[55] Partition 3 Zone Assignments (25-32)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 25 is on Partition 3
- Zone 26 is on Partition 3
- Zone 27 is on Partition 3
- Zone 28 is on Partition 3
- Zone 29 is on Partition 3
- Zone 30 is on Partition 3
- Zone 31 is on Partition 3
- Zone 32 is on Partition 3

**Option Off**

- Zone 25 is not on Partition 3
- Zone 26 is not on Partition 3
- Zone 27 is not on Partition 3
- Zone 28 is not on Partition 3
- Zone 29 is not on Partition 3
- Zone 30 is not on Partition 3
- Zone 31 is not on Partition 3
- Zone 32 is not on Partition 3

**[56] Partition 3 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 3
- Zone 34 is on Partition 3
- Zone 35 is on Partition 3
- Zone 36 is on Partition 3
- Zone 37 is on Partition 3
- Zone 38 is on Partition 3
- Zone 39 is on Partition 3
- Zone 40 is on Partition 3

**Option Off**

- Zone 33 is not on Partition 3
- Zone 34 is not on Partition 3
- Zone 35 is not on Partition 3
- Zone 36 is not on Partition 3
- Zone 37 is not on Partition 3
- Zone 38 is not on Partition 3
- Zone 39 is not on Partition 3
- Zone 40 is not on Partition 3

**[57] Partition 3 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 3
- Zone 42 is on Partition 3
- Zone 43 is on Partition 3
- Zone 44 is on Partition 3
- Zone 45 is on Partition 3
- Zone 46 is on Partition 3
- Zone 47 is on Partition 3
- Zone 48 is on Partition 3

**Option Off**

- Zone 41 is not on Partition 3
- Zone 42 is not on Partition 3
- Zone 43 is not on Partition 3
- Zone 44 is not on Partition 3
- Zone 45 is not on Partition 3
- Zone 46 is not on Partition 3
- Zone 47 is not on Partition 3
- Zone 48 is not on Partition 3

**[58] Partition 3 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 3
- Zone 50 is on Partition 3
- Zone 51 is on Partition 3
- Zone 52 is on Partition 3
- Zone 53 is on Partition 3
- Zone 54 is on Partition 3
- Zone 55 is on Partition 3
- Zone 56 is on Partition 3

**Option Off**

- Zone 49 is not on Partition 3
- Zone 50 is not on Partition 3
- Zone 51 is not on Partition 3
- Zone 52 is not on Partition 3
- Zone 53 is not on Partition 3
- Zone 54 is not on Partition 3
- Zone 55 is not on Partition 3
- Zone 56 is not on Partition 3

**[59] Partition 3 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 3
- Zone 58 is on Partition 3
- Zone 59 is on Partition 3
- Zone 60 is on Partition 3
- Zone 61 is on Partition 3
- Zone 62 is on Partition 3
- Zone 63 is on Partition 3
- Zone 64 is on Partition 3

**Option Off**

- Zone 57 is not on Partition 3
- Zone 58 is not on Partition 3
- Zone 59 is not on Partition 3
- Zone 60 is not on Partition 3
- Zone 61 is not on Partition 3
- Zone 62 is not on Partition 3
- Zone 63 is not on Partition 3
- Zone 64 is not on Partition 3

**[60] Partition 4 Zone Assignments (1-8)**

**Default**

- ON  **Option 1**
- ON  **Option 2**
- ON  **Option 3**
- ON  **Option 4**
- ON  **Option 5**
- ON  **Option 6**
- ON  **Option 7**
- ON  **Option 8**

**Option On**

- Zone 1 is on Partition 4
- Zone 2 is on Partition 4
- Zone 3 is on Partition 4
- Zone 4 is on Partition 4
- Zone 5 is on Partition 4
- Zone 6 is on Partition 4
- Zone 7 is on Partition 4
- Zone 8 is on Partition 4

**Option Off**

- Zone 1 is not on Partition 4
- Zone 2 is not on Partition 4
- Zone 3 is not on Partition 4
- Zone 4 is not on Partition 4
- Zone 5 is not on Partition 4
- Zone 6 is not on Partition 4
- Zone 7 is not on Partition 4
- Zone 8 is not on Partition 4

**[61] Partition 4 Zone Assignments (9-16)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 9 is on Partition 4
- Zone 10 is on Partition 4
- Zone 11 is on Partition 4
- Zone 12 is on Partition 4
- Zone 13 is on Partition 4
- Zone 14 is on Partition 4
- Zone 15 is on Partition 4
- Zone 16 is on Partition 4

**Option Off**

- Zone 9 is not on Partition 4
- Zone 10 is not on Partition 4
- Zone 11 is not on Partition 4
- Zone 12 is not on Partition 4
- Zone 13 is not on Partition 4
- Zone 14 is not on Partition 4
- Zone 15 is not on Partition 4
- Zone 16 is not on Partition 4

**[62] Partition 4 Zone Assignments (17-24)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 17 is on Partition 4
- Zone 18 is on Partition 4
- Zone 19 is on Partition 4
- Zone 20 is on Partition 4
- Zone 21 is on Partition 4
- Zone 22 is on Partition 4
- Zone 23 is on Partition 4
- Zone 24 is on Partition 4

**Option Off**

- Zone 17 is not on Partition 4
- Zone 18 is not on Partition 4
- Zone 19 is not on Partition 4
- Zone 20 is not on Partition 4
- Zone 21 is not on Partition 4
- Zone 22 is not on Partition 4
- Zone 23 is not on Partition 4
- Zone 24 is not on Partition 4

**[63] Partition 4 Zone Assignments (25-32)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 25 is on Partition 4
- Zone 26 is on Partition 4
- Zone 27 is on Partition 4
- Zone 28 is on Partition 4
- Zone 29 is on Partition 4
- Zone 30 is on Partition 4
- Zone 31 is on Partition 4
- Zone 32 is on Partition 4

**Option Off**

- Zone 25 is not on Partition 4
- Zone 26 is not on Partition 4
- Zone 27 is not on Partition 4
- Zone 28 is not on Partition 4
- Zone 29 is not on Partition 4
- Zone 30 is not on Partition 4
- Zone 31 is not on Partition 4
- Zone 32 is not on Partition 4

**[64] Partition 4 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 4
- Zone 34 is on Partition 4
- Zone 35 is on Partition 4
- Zone 36 is on Partition 4
- Zone 37 is on Partition 4
- Zone 38 is on Partition 4
- Zone 39 is on Partition 4
- Zone 40 is on Partition 4

**Option Off**

- Zone 33 is not on Partition 4
- Zone 34 is not on Partition 4
- Zone 35 is not on Partition 4
- Zone 36 is not on Partition 4
- Zone 37 is not on Partition 4
- Zone 38 is not on Partition 4
- Zone 39 is not on Partition 4
- Zone 40 is not on Partition 4

**[65] Partition 4 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 4
- Zone 42 is on Partition 4
- Zone 43 is on Partition 4
- Zone 44 is on Partition 4
- Zone 45 is on Partition 4
- Zone 46 is on Partition 4
- Zone 47 is on Partition 4
- Zone 48 is on Partition 4

**Option Off**

- Zone 41 is not on Partition 4
- Zone 42 is not on Partition 4
- Zone 43 is not on Partition 4
- Zone 44 is not on Partition 4
- Zone 45 is not on Partition 4
- Zone 46 is not on Partition 4
- Zone 47 is not on Partition 4
- Zone 48 is not on Partition 4

**[66] Partition 4 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 4
- Zone 50 is on Partition 4
- Zone 51 is on Partition 4
- Zone 52 is on Partition 4
- Zone 53 is on Partition 4
- Zone 54 is on Partition 4
- Zone 55 is on Partition 4
- Zone 56 is on Partition 4

**Option Off**

- Zone 49 is not on Partition 4
- Zone 50 is not on Partition 4
- Zone 51 is not on Partition 4
- Zone 52 is not on Partition 4
- Zone 53 is not on Partition 4
- Zone 54 is not on Partition 4
- Zone 55 is not on Partition 4
- Zone 56 is not on Partition 4

**[67] Partition 4 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 4
- Zone 58 is on Partition 4
- Zone 59 is on Partition 4
- Zone 60 is on Partition 4
- Zone 61 is on Partition 4
- Zone 62 is on Partition 4
- Zone 63 is on Partition 4
- Zone 64 is on Partition 4

**Option Off**

- Zone 57 is not on Partition 4
- Zone 58 is not on Partition 4
- Zone 59 is not on Partition 4
- Zone 60 is not on Partition 4
- Zone 61 is not on Partition 4
- Zone 62 is not on Partition 4
- Zone 63 is not on Partition 4
- Zone 64 is not on Partition 4

**[68] Partition 5 Zone Assignments (1-8)**

**Default**

- ON  *Option 1*
- ON  *Option 2*
- ON  *Option 3*
- ON  *Option 4*
- ON  *Option 5*
- ON  *Option 6*
- ON  *Option 7*
- ON  *Option 8*

**Option On**

- Zone 1 is on Partition 5
- Zone 2 is on Partition 5
- Zone 3 is on Partition 5
- Zone 4 is on Partition 5
- Zone 5 is on Partition 5
- Zone 6 is on Partition 5
- Zone 7 is on Partition 5
- Zone 8 is on Partition 5

**Option Off**

- Zone 1 is not on Partition 5
- Zone 2 is not on Partition 5
- Zone 3 is not on Partition 5
- Zone 4 is not on Partition 5
- Zone 5 is not on Partition 5
- Zone 6 is not on Partition 5
- Zone 7 is not on Partition 5
- Zone 8 is not on Partition 5

**[69] Partition 5 Zone Assignments (9-16)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 9 is on Partition 5
- Zone 10 is on Partition 5
- Zone 11 is on Partition 5
- Zone 12 is on Partition 5
- Zone 13 is on Partition 5
- Zone 14 is on Partition 5
- Zone 15 is on Partition 5
- Zone 16 is on Partition 5

**Option Off**

- Zone 9 is not on Partition 5
- Zone 10 is not on Partition 5
- Zone 11 is not on Partition 5
- Zone 12 is not on Partition 5
- Zone 13 is not on Partition 5
- Zone 14 is not on Partition 5
- Zone 15 is not on Partition 5
- Zone 16 is not on Partition 5

**[70] Partition 5 Zone Assignments (17-24)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 17 is on Partition 5
- Zone 18 is on Partition 5
- Zone 19 is on Partition 5
- Zone 20 is on Partition 5
- Zone 21 is on Partition 5
- Zone 22 is on Partition 5
- Zone 23 is on Partition 5
- Zone 24 is on Partition 5

**Option Off**

- Zone 17 is not on Partition 5
- Zone 18 is not on Partition 5
- Zone 19 is not on Partition 5
- Zone 20 is not on Partition 5
- Zone 21 is not on Partition 5
- Zone 22 is not on Partition 5
- Zone 23 is not on Partition 5
- Zone 24 is not on Partition 5

**[71] Partition 5 Zone Assignments (25-32)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 25 is on Partition 5
- Zone 26 is on Partition 5
- Zone 27 is on Partition 5
- Zone 28 is on Partition 5
- Zone 29 is on Partition 5
- Zone 30 is on Partition 5
- Zone 31 is on Partition 5
- Zone 32 is on Partition 5

**Option Off**

- Zone 25 is not on Partition 5
- Zone 26 is not on Partition 5
- Zone 27 is not on Partition 5
- Zone 28 is not on Partition 5
- Zone 29 is not on Partition 5
- Zone 30 is not on Partition 5
- Zone 31 is not on Partition 5
- Zone 32 is not on Partition 5

**[72] Partition 5 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 5
- Zone 34 is on Partition 5
- Zone 35 is on Partition 5
- Zone 36 is on Partition 5
- Zone 37 is on Partition 5
- Zone 38 is on Partition 5
- Zone 39 is on Partition 5
- Zone 40 is on Partition 5

**Option Off**

- Zone 33 is not on Partition 5
- Zone 34 is not on Partition 5
- Zone 35 is not on Partition 5
- Zone 36 is not on Partition 5
- Zone 37 is not on Partition 5
- Zone 38 is not on Partition 5
- Zone 39 is not on Partition 5
- Zone 40 is not on Partition 5

**[73] Partition 5 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 5
- Zone 42 is on Partition 5
- Zone 43 is on Partition 5
- Zone 44 is on Partition 5
- Zone 45 is on Partition 5
- Zone 46 is on Partition 5
- Zone 47 is on Partition 5
- Zone 48 is on Partition 5

**Option Off**

- Zone 41 is not on Partition 5
- Zone 42 is not on Partition 5
- Zone 43 is not on Partition 5
- Zone 44 is not on Partition 5
- Zone 45 is not on Partition 5
- Zone 46 is not on Partition 5
- Zone 47 is not on Partition 5
- Zone 48 is not on Partition 5

**[74] Partition 5 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 5
- Zone 50 is on Partition 5
- Zone 51 is on Partition 5
- Zone 52 is on Partition 5
- Zone 53 is on Partition 5
- Zone 54 is on Partition 5
- Zone 55 is on Partition 5
- Zone 56 is on Partition 5

**Option Off**

- Zone 49 is not on Partition 5
- Zone 50 is not on Partition 5
- Zone 51 is not on Partition 5
- Zone 52 is not on Partition 5
- Zone 53 is not on Partition 5
- Zone 54 is not on Partition 5
- Zone 55 is not on Partition 5
- Zone 56 is not on Partition 5

**[75] Partition 5 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 5
- Zone 58 is on Partition 5
- Zone 59 is on Partition 5
- Zone 60 is on Partition 5
- Zone 61 is on Partition 5
- Zone 62 is on Partition 5
- Zone 63 is on Partition 5
- Zone 64 is on Partition 5

**Option Off**

- Zone 57 is not on Partition 5
- Zone 58 is not on Partition 5
- Zone 59 is not on Partition 5
- Zone 60 is not on Partition 5
- Zone 61 is not on Partition 5
- Zone 62 is not on Partition 5
- Zone 63 is not on Partition 5
- Zone 64 is not on Partition 5



**[76] Partition 6 Zone Assignments (1-8)**

**Default**

- ON  **Option 1**
- ON  **Option 2**
- ON  **Option 3**
- ON  **Option 4**
- ON  **Option 5**
- ON  **Option 6**
- ON  **Option 7**
- ON  **Option 8**

**Option On**

- Zone 1 is on Partition 6
- Zone 2 is on Partition 6
- Zone 3 is on Partition 6
- Zone 4 is on Partition 6
- Zone 5 is on Partition 6
- Zone 6 is on Partition 6
- Zone 7 is on Partition 6
- Zone 8 is on Partition 6

**Option Off**

- Zone 1 is not on Partition 6
- Zone 2 is not on Partition 6
- Zone 3 is not on Partition 6
- Zone 4 is not on Partition 6
- Zone 5 is not on Partition 6
- Zone 6 is not on Partition 6
- Zone 7 is not on Partition 6
- Zone 8 is not on Partition 6

**[77] Partition 6 Zone Assignments (9-16)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 9 is on Partition 6
- Zone 10 is on Partition 6
- Zone 11 is on Partition 6
- Zone 12 is on Partition 6
- Zone 13 is on Partition 6
- Zone 14 is on Partition 6
- Zone 15 is on Partition 6
- Zone 16 is on Partition 6

**Option Off**

- Zone 9 is not on Partition 6
- Zone 10 is not on Partition 6
- Zone 11 is not on Partition 6
- Zone 12 is not on Partition 6
- Zone 13 is not on Partition 6
- Zone 14 is not on Partition 6
- Zone 15 is not on Partition 6
- Zone 16 is not on Partition 6

**[78] Partition 6 Zone Assignments (17-24)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 17 is on Partition 6
- Zone 18 is on Partition 6
- Zone 19 is on Partition 6
- Zone 20 is on Partition 6
- Zone 21 is on Partition 6
- Zone 22 is on Partition 6
- Zone 23 is on Partition 6
- Zone 24 is on Partition 6

**Option Off**

- Zone 17 is not on Partition 6
- Zone 18 is not on Partition 6
- Zone 19 is not on Partition 6
- Zone 20 is not on Partition 6
- Zone 21 is not on Partition 6
- Zone 22 is not on Partition 6
- Zone 23 is not on Partition 6
- Zone 24 is not on Partition 6

**[79] Partition 6 Zone Assignments (25-32)**

**Default**

- OFF  **Option 1**
- OFF  **Option 2**
- OFF  **Option 3**
- OFF  **Option 4**
- OFF  **Option 5**
- OFF  **Option 6**
- OFF  **Option 7**
- OFF  **Option 8**

**Option On**

- Zone 25 is on Partition 6
- Zone 26 is on Partition 6
- Zone 27 is on Partition 6
- Zone 28 is on Partition 6
- Zone 29 is on Partition 6
- Zone 30 is on Partition 6
- Zone 31 is on Partition 6
- Zone 32 is on Partition 6

**Option Off**

- Zone 25 is not on Partition 6
- Zone 26 is not on Partition 6
- Zone 27 is not on Partition 6
- Zone 28 is not on Partition 6
- Zone 29 is not on Partition 6
- Zone 30 is not on Partition 6
- Zone 31 is not on Partition 6
- Zone 32 is not on Partition 6

**[80] Partition 6 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 6
- Zone 34 is on Partition 6
- Zone 35 is on Partition 6
- Zone 36 is on Partition 6
- Zone 37 is on Partition 6
- Zone 38 is on Partition 6
- Zone 39 is on Partition 6
- Zone 40 is on Partition 6

**Option Off**

- Zone 33 is not on Partition 6
- Zone 34 is not on Partition 6
- Zone 35 is not on Partition 6
- Zone 36 is not on Partition 6
- Zone 37 is not on Partition 6
- Zone 38 is not on Partition 6
- Zone 39 is not on Partition 6
- Zone 40 is not on Partition 6

**[81] Partition 6 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 6
- Zone 42 is on Partition 6
- Zone 43 is on Partition 6
- Zone 44 is on Partition 6
- Zone 45 is on Partition 6
- Zone 46 is on Partition 6
- Zone 47 is on Partition 6
- Zone 48 is on Partition 6

**Option Off**

- Zone 41 is not on Partition 6
- Zone 42 is not on Partition 6
- Zone 43 is not on Partition 6
- Zone 44 is not on Partition 6
- Zone 45 is not on Partition 6
- Zone 46 is not on Partition 6
- Zone 47 is not on Partition 6
- Zone 48 is not on Partition 6

**[82] Partition 6 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 6
- Zone 50 is on Partition 6
- Zone 51 is on Partition 6
- Zone 52 is on Partition 6
- Zone 53 is on Partition 6
- Zone 54 is on Partition 6
- Zone 55 is on Partition 6
- Zone 56 is on Partition 6

**Option Off**

- Zone 49 is not on Partition 6
- Zone 50 is not on Partition 6
- Zone 51 is not on Partition 6
- Zone 52 is not on Partition 6
- Zone 53 is not on Partition 6
- Zone 54 is not on Partition 6
- Zone 55 is not on Partition 6
- Zone 56 is not on Partition 6

**[83] Partition 6 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 6
- Zone 58 is on Partition 6
- Zone 59 is on Partition 6
- Zone 60 is on Partition 6
- Zone 61 is on Partition 6
- Zone 62 is on Partition 6
- Zone 63 is on Partition 6
- Zone 64 is on Partition 6

**Option Off**

- Zone 57 is not on Partition 6
- Zone 58 is not on Partition 6
- Zone 59 is not on Partition 6
- Zone 60 is not on Partition 6
- Zone 61 is not on Partition 6
- Zone 62 is not on Partition 6
- Zone 63 is not on Partition 6
- Zone 64 is not on Partition 6

---

**[84] Partition 7 Zone Assignments (1-8)**

**Default**

ON  *Option 1*  
ON  *Option 2*  
ON  *Option 3*  
ON  *Option 4*  
ON  *Option 5*  
ON  *Option 6*  
ON  *Option 7*  
ON  *Option 8*

**Option On**

Zone 1 is on Partition 7  
Zone 2 is on Partition 7  
Zone 3 is on Partition 7  
Zone 4 is on Partition 7  
Zone 5 is on Partition 7  
Zone 6 is on Partition 7  
Zone 7 is on Partition 7  
Zone 8 is on Partition 7

**Option Off**

Zone 1 is not on Partition 7  
Zone 2 is not on Partition 7  
Zone 3 is not on Partition 7  
Zone 4 is not on Partition 7  
Zone 5 is not on Partition 7  
Zone 6 is not on Partition 7  
Zone 7 is not on Partition 7  
Zone 8 is not on Partition 7

**[85] Partition 7 Zone Assignments (9-16)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 9 is on Partition 7  
Zone 10 is on Partition 7  
Zone 11 is on Partition 7  
Zone 12 is on Partition 7  
Zone 13 is on Partition 7  
Zone 14 is on Partition 7  
Zone 15 is on Partition 7  
Zone 16 is on Partition 7

**Option Off**

Zone 9 is not on Partition 7  
Zone 10 is not on Partition 7  
Zone 11 is not on Partition 7  
Zone 12 is not on Partition 7  
Zone 13 is not on Partition 7  
Zone 14 is not on Partition 7  
Zone 15 is not on Partition 7  
Zone 16 is not on Partition 7

**[86] Partition 7 Zone Assignments (17-24)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 17 is on Partition 7  
Zone 18 is on Partition 7  
Zone 19 is on Partition 7  
Zone 20 is on Partition 7  
Zone 21 is on Partition 7  
Zone 22 is on Partition 7  
Zone 23 is on Partition 7  
Zone 24 is on Partition 7

**Option Off**

Zone 17 is not on Partition 7  
Zone 18 is not on Partition 7  
Zone 19 is not on Partition 7  
Zone 20 is not on Partition 7  
Zone 21 is not on Partition 7  
Zone 22 is not on Partition 7  
Zone 23 is not on Partition 7  
Zone 24 is not on Partition 7

**[87] Partition 7 Zone Assignments (25-32)**

**Default**

OFF  *Option 1*  
OFF  *Option 2*  
OFF  *Option 3*  
OFF  *Option 4*  
OFF  *Option 5*  
OFF  *Option 6*  
OFF  *Option 7*  
OFF  *Option 8*

**Option On**

Zone 25 is on Partition 7  
Zone 26 is on Partition 7  
Zone 27 is on Partition 7  
Zone 28 is on Partition 7  
Zone 29 is on Partition 7  
Zone 30 is on Partition 7  
Zone 31 is on Partition 7  
Zone 32 is on Partition 7

**Option Off**

Zone 25 is not on Partition 7  
Zone 26 is not on Partition 7  
Zone 27 is not on Partition 7  
Zone 28 is not on Partition 7  
Zone 29 is not on Partition 7  
Zone 30 is not on Partition 7  
Zone 31 is not on Partition 7  
Zone 32 is not on Partition 7

**[88] Partition 7 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 7
- Zone 34 is on Partition 7
- Zone 35 is on Partition 7
- Zone 36 is on Partition 7
- Zone 37 is on Partition 7
- Zone 38 is on Partition 7
- Zone 39 is on Partition 7
- Zone 40 is on Partition 7

**Option Off**

- Zone 33 is not on Partition 7
- Zone 34 is not on Partition 7
- Zone 35 is not on Partition 7
- Zone 36 is not on Partition 7
- Zone 37 is not on Partition 7
- Zone 38 is not on Partition 7
- Zone 39 is not on Partition 7
- Zone 40 is not on Partition 7

**[89] Partition 7 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 7
- Zone 42 is on Partition 7
- Zone 43 is on Partition 7
- Zone 44 is on Partition 7
- Zone 45 is on Partition 7
- Zone 46 is on Partition 7
- Zone 47 is on Partition 7
- Zone 48 is on Partition 7

**Option Off**

- Zone 41 is not on Partition 7
- Zone 42 is not on Partition 7
- Zone 43 is not on Partition 7
- Zone 44 is not on Partition 7
- Zone 45 is not on Partition 7
- Zone 46 is not on Partition 7
- Zone 47 is not on Partition 7
- Zone 48 is not on Partition 7

**[90] Partition 7 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 7
- Zone 50 is on Partition 7
- Zone 51 is on Partition 7
- Zone 52 is on Partition 7
- Zone 53 is on Partition 7
- Zone 54 is on Partition 7
- Zone 55 is on Partition 7
- Zone 56 is on Partition 7

**Option Off**

- Zone 49 is not on Partition 7
- Zone 50 is not on Partition 7
- Zone 51 is not on Partition 7
- Zone 52 is not on Partition 7
- Zone 53 is not on Partition 7
- Zone 54 is not on Partition 7
- Zone 55 is not on Partition 7
- Zone 56 is not on Partition 7

**[91] Partition 7 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 7
- Zone 58 is on Partition 7
- Zone 59 is on Partition 7
- Zone 60 is on Partition 7
- Zone 61 is on Partition 7
- Zone 62 is on Partition 7
- Zone 63 is on Partition 7
- Zone 64 is on Partition 7

**Option Off**

- Zone 57 is not on Partition 7
- Zone 58 is not on Partition 7
- Zone 59 is not on Partition 7
- Zone 60 is not on Partition 7
- Zone 61 is not on Partition 7
- Zone 62 is not on Partition 7
- Zone 63 is not on Partition 7
- Zone 64 is not on Partition 7

**[92] Partition 8 Zone Assignments (1-8)**

**Default**

- ON  *Option 1*
- ON  *Option 2*
- ON  *Option 3*
- ON  *Option 4*
- ON  *Option 5*
- ON  *Option 6*
- ON  *Option 7*
- ON  *Option 8*

**Option On**

- Zone 1 is on Partition 8
- Zone 2 is on Partition 8
- Zone 3 is on Partition 8
- Zone 4 is on Partition 8
- Zone 5 is on Partition 8
- Zone 6 is on Partition 8
- Zone 7 is on Partition 8
- Zone 8 is on Partition 8

**Option Off**

- Zone 1 is not on Partition 8
- Zone 2 is not on Partition 8
- Zone 3 is not on Partition 8
- Zone 4 is not on Partition 8
- Zone 5 is not on Partition 8
- Zone 6 is not on Partition 8
- Zone 7 is not on Partition 8
- Zone 8 is not on Partition 8

**[93] Partition 8 Zone Assignments (9-16)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 9 is on Partition 8
- Zone 10 is on Partition 8
- Zone 11 is on Partition 8
- Zone 12 is on Partition 8
- Zone 13 is on Partition 8
- Zone 14 is on Partition 8
- Zone 15 is on Partition 8
- Zone 16 is on Partition 8

**Option Off**

- Zone 9 is not on Partition 8
- Zone 10 is not on Partition 8
- Zone 11 is not on Partition 8
- Zone 12 is not on Partition 8
- Zone 13 is not on Partition 8
- Zone 14 is not on Partition 8
- Zone 15 is not on Partition 8
- Zone 16 is not on Partition 8

**[94] Partition 8 Zone Assignments (17-24)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 17 is on Partition 8
- Zone 18 is on Partition 8
- Zone 19 is on Partition 8
- Zone 20 is on Partition 8
- Zone 21 is on Partition 8
- Zone 22 is on Partition 8
- Zone 23 is on Partition 8
- Zone 24 is on Partition 8

**Option Off**

- Zone 17 is not on Partition 8
- Zone 18 is not on Partition 8
- Zone 19 is not on Partition 8
- Zone 20 is not on Partition 8
- Zone 21 is not on Partition 8
- Zone 22 is not on Partition 8
- Zone 23 is not on Partition 8
- Zone 24 is not on Partition 8

**[95] Partition 8 Zone Assignments (25-32)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 25 is on Partition 8
- Zone 26 is on Partition 8
- Zone 27 is on Partition 8
- Zone 28 is on Partition 8
- Zone 29 is on Partition 8
- Zone 30 is on Partition 8
- Zone 31 is on Partition 8
- Zone 32 is on Partition 8

**Option Off**

- Zone 25 is not on Partition 8
- Zone 26 is not on Partition 8
- Zone 27 is not on Partition 8
- Zone 28 is not on Partition 8
- Zone 29 is not on Partition 8
- Zone 30 is not on Partition 8
- Zone 31 is not on Partition 8
- Zone 32 is not on Partition 8

**[96] Partition 8 Zone Assignments (33-40)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 33 is on Partition 8
- Zone 34 is on Partition 8
- Zone 35 is on Partition 8
- Zone 36 is on Partition 8
- Zone 37 is on Partition 8
- Zone 38 is on Partition 8
- Zone 39 is on Partition 8
- Zone 40 is on Partition 8

**Option Off**

- Zone 33 is not on Partition 8
- Zone 34 is not on Partition 8
- Zone 35 is not on Partition 8
- Zone 36 is not on Partition 8
- Zone 37 is not on Partition 8
- Zone 38 is not on Partition 8
- Zone 39 is not on Partition 8
- Zone 40 is not on Partition 8

**[97] Partition 8 Zone Assignments (41-48)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 41 is on Partition 8
- Zone 42 is on Partition 8
- Zone 43 is on Partition 8
- Zone 44 is on Partition 8
- Zone 45 is on Partition 8
- Zone 46 is on Partition 8
- Zone 47 is on Partition 8
- Zone 48 is on Partition 8

**Option Off**

- Zone 41 is not on Partition 8
- Zone 42 is not on Partition 8
- Zone 43 is not on Partition 8
- Zone 44 is not on Partition 8
- Zone 45 is not on Partition 8
- Zone 46 is not on Partition 8
- Zone 47 is not on Partition 8
- Zone 48 is not on Partition 8

**[98] Partition 8 Zone Assignments (49-56)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 49 is on Partition 8
- Zone 50 is on Partition 8
- Zone 51 is on Partition 8
- Zone 52 is on Partition 8
- Zone 53 is on Partition 8
- Zone 54 is on Partition 8
- Zone 55 is on Partition 8
- Zone 56 is on Partition 8

**Option Off**

- Zone 49 is not on Partition 8
- Zone 50 is not on Partition 8
- Zone 51 is not on Partition 8
- Zone 52 is not on Partition 8
- Zone 53 is not on Partition 8
- Zone 54 is not on Partition 8
- Zone 55 is not on Partition 8
- Zone 56 is not on Partition 8

**[99] Partition 8 Zone Assignments (57-64)**

**Default**

- OFF  *Option 1*
- OFF  *Option 2*
- OFF  *Option 3*
- OFF  *Option 4*
- OFF  *Option 5*
- OFF  *Option 6*
- OFF  *Option 7*
- OFF  *Option 8*

**Option On**

- Zone 57 is on Partition 8
- Zone 58 is on Partition 8
- Zone 59 is on Partition 8
- Zone 60 is on Partition 8
- Zone 61 is on Partition 8
- Zone 62 is on Partition 8
- Zone 63 is on Partition 8
- Zone 64 is on Partition 8

**Option Off**

- Zone 57 is not on Partition 8
- Zone 58 is not on Partition 8
- Zone 59 is not on Partition 8
- Zone 60 is not on Partition 8
- Zone 61 is not on Partition 8
- Zone 62 is not on Partition 8
- Zone 63 is not on Partition 8
- Zone 64 is not on Partition 8

# Appendix A: ADT DVACS Transmission Table

**Note: XX represents 1-64 (Zones, Users)**

**Note: Please refer to Zone Reporting Type**

Event Description -----	ADT Transmission -----	Comments
Zone xx Alarm (Burglary) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Alarm (Fire) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Alarm (Medical) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Alarm (Holdup) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Alarm (Supervisory) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Alarm (Other) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Restore (Burglary) -----	BRxx -----	
Zone xx Restore (Fire) -----	FRxx -----	<b>Note: Alarm, Trouble and Tamper Restore have the same format. A special procedure should be implemented to send only one restore.</b>
Zone xx Restore (Medical) -----	MRxx -----	
Zone xx Restore (Holdup) -----	HRxx -----	
Zone xx Restore (Supervisory) -----	SRxx -----	
Zone xx Restore (Other) -----	URxx -----	
Zone xx Low Batt (Burglary) -----	BLxx -----	
Zone xx Low Batt (Fire) -----	FLxx -----	
Zone xx Low Batt (Medical) -----	MLxx -----	
Zone xx Low Batt (Holdup) -----	HLxx -----	
Zone xx Low Batt (Supervisory) -----	SLxx -----	
Zone xx Low Batt (Other) -----	ULxx -----	
Zone xx Tamper (Burglary) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper (Fire--Sprinkler Only) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper (Medical) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper (Holdup) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper (Supervisory) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper (Other) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Tamper Restore (Burglary) -----	BRxx -----	
Zone xx Tamper Restore (Fire) -----	FRxx -----	FRxx (for Sprinkler only)
Zone xx Tamper Restore (Medical) -----	MRxx -----	
Zone xx Tamper Restore (Holdup) -----	HRxx -----	
Zone xx Tamper Restore (Supervisory) -----	SRxx -----	
Zone xx Tamper Restore (Other) -----	URxx -----	
Zone xx Trouble (Burglary) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble (Fire) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble (Medical) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble (Holdup) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble (Supervisory) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble (Other) -----	See "ADT DVACS ZONE REPORTING TYPES"	
Zone xx Trouble Restore (Burglary) -----	BRxx -----	
Zone xx Trouble Restore (Fire) -----	FRxx -----	Delayed and Standard: FR only
Zone xx Trouble Restore (Sprinkler) -----	FRxx -----	
Zone xx Trouble Restore (Medical) -----	MRxx -----	
Zone xx Trouble Restore (Holdup) -----	HRxx -----	
Zone xx Trouble Restore (Supervisory) -----	SRxx -----	
Zone xx Trouble Restore (Other) -----	URxx -----	

Event Description -----	ADT Transmission -----	Comments
Zone xx Bypass (Burglary)• -----	id##BBxx -----	<ul style="list-style-type: none"> <li>• option for zone bypasses OR Partial Closing governs these transmissions</li> <li>• ## = user, XX = zone Section 18 option 8 PC50XX</li> </ul>
Zone xx Bypass (Fire)• -----	id##FBxx -----	
Zone xx Bypass (Medical)• -----	id##MBxx -----	
Zone xx Bypass (Holdup)• -----	id##HBxx -----	
Zone xx Bypass (Supervisory)• -----	id##SBxx -----	
Zone xx Bypass (Other)• -----	id##UBxx -----	
Duress Alarm -----	idxxHHp -----	xx=33 p= Partition #
Keypad Fire Alarm -----	IF0★1ST -----	
Keypad Auxiliary Alarm -----	IM0★1ST -----	
Keypad Panic Alarm -----	IE0★1ST -----	
PGM2 Aux. Input Alarm -----	UAXx★1ST -----	
PGM2 Aux. Alarm Restoral -----	URxx -----	Default xx = 73
Closing By User Code ## -----	id##CLp -----	p = 1- 8 (Partition)
Partial Closing -----	CGp -----	<ul style="list-style-type: none"> <li>• option for zone bypasses OR Partial Closing governs this transmission</li> </ul>
Recent Closing -----	CLp -----	Equivalent Alarm on Exit
Automatic Closing -----	CAp -----	
Quick Arm (★0), Away Arm -----	id0CLp -----	
Closing By Maintenance Code -----	id38CLp -----	38 - Maintenance Number
Closing By Keyswitch Zone -----	id44CLp -----	44 - Keyswitch Number
Closing By Downloading -----	id45CLp -----	45 - Download Number
Opening By User Code ## -----	id##OPp -----	
Auto Arm Cancellation -----	CEp -----	
Opening By Maintenance Code -----	id38OPp -----	38 - Maintenance Number
Opening By Keyswitch Zone -----	id44OPp -----	44 - Keyswitch Number
Opening By Downloading -----	id45OPp -----	45 - Download Number
Opening After Alarm -----	id##OPp -----	
Keybus Fault -----	YC -----	
Keybus Fault Restore -----	YO -----	
Battery Trouble Alarm -----	YT2 -----	
Battery Trouble Restoral -----	YR2 -----	
AC Failure Trouble Alarm -----	AA -----	
AC Failure Trouble Restoral -----	AH -----	
Bell Circuit Trouble Alarm -----	NT0★2ST -----	
Bell Circuit Trouble Restoral -----	NR0 -----	
Fire Trouble Alarm -----	FT -----	
Fire Trouble Restoral -----	FR -----	
Critical Shutdown -----	YT1 -----	
TLM Trouble -----	LT0 -----	
Phone Number 1 FTC -----	LT1 -----	
Phone Number 2 FTC -----	LT2 -----	
TLM Restoral -----	LR0 -----	
Phone Number 1 FTC Restoral -----	LR1 -----	
Phone Number 2 FTC Restoral -----	LR2 -----	



<b>Event Description</b>	<b>ADT Transmission</b>	<b>Comments</b>
Aux. Power Supply Trb. Alarm	UTxx	Default xx = 76
Aux. Power Supply Trb. Restore	URxx	
DLS Lead In	RB1	
DLS Lead Out	RS1	
Installer Lead In	id39SI	Only 1 Installer, always 39
Installer Lead Out	id39SO	
ADT On Premise (by maintenance)	id38SI	
ADT Off Premise (by maintenance)	id38SO	
Keypad x Supervisory	ITx★8ST	x = 1 - 8
Keypad x Supervisory Restoral	IRx	
Keypad x Tamper	IAx★4ST	
Keypad x Tamper Restoral	IRx	Same as Supervisory Restore
Zone Expander x Supervisory	ETx★8ST	x = 1 - 7
Zone Expander x Supervisory Restoral	ERx	
Zone Expander x Tamper	EAx★4ST	
Zone Expander x Tamper Restoral	ERx	Same as Supervisory Restore
PC5132 Supervisory	ETx★8ST	Default x = 8
PC5132 Supervisory Restore	ERx	
PC5132 Tamper	EAx★4ST	
PC5132 Tamper Restore	ERx	Same as Supervisory Restore
PC59XX Supervisory	UTx★8ST	Default x = 78
PC59XX Supervisory Restore	URx	
ESCORT5580 Supervisory	UTx★8ST	Default x = 79
ESCORT5580 Supervisory Restore	URx	
PC5208 Supervisory	UTxx★8ST	Same as Untyped Zones Trouble
PC5208 Supervisory Restore	URxx	Default xx = 74, After last zone #
PC5208 Tamper	UTxx★4ST	
PC5208 Tamper Restore	URxx	Same as Supervisory Restore
PC5204 Supervisory	UTxx★8ST	Default xx = 75
PC5204 Supervisory Restore	URxx	
PC5204 Tamper	UTxx★4ST	
PC5204 Tamper Restore	URxx	
PC5204 AC Fail	UTxx	
PC5204 AC Restore	URxx	
PC5204 Batt Trouble	UTxx★16ST	
PC5204 Batt Restore	URxx	
PC5204 Output 1 Fail	UTxx	
PC5204 Output 1 Restore	URxx	
PC5204 Circuit Trouble	UTxx★2ST	
PC5204 Circuit Restore	URxx	
PC5400DV Tamper	UTx★4ST	Default x = 77
PC5400DV Tamper Restore	URx	
PC5400DV Supervisory Alarm	UTx★8ST	
PC5400DV Supervisory Restore	URx	
Alternate Communicator Tamper	UTxx★4ST	Default xx=81
Alternate Comm. Tamper Restore	URxx	
Alternate Comm. Supervisory Alarm	UTxx★8ST	
Alternate Comm. Supervisory Restore	URxx	

Event Description	ADT Transmission	Comments
Downlook Module Supervisory	UTxx★8ST	PC5015 Only - Default xx = 80
Downlook Module Supervisory Restore	URxx	PC5015 Only
Downlook Module Remote Trigger	RV	PC5015 Only
Late To Close	OTp	p = Partition (1-8); PC5015/5020
Cross Zone Police Code	BVp	p = Partition (1-8)
Delinquency Code	ITp	p = Partition (1-8)
Handheld Keypad Low Battery	IAxx★16ST	xx = 9-12
Handheld Keypad Low Batt. Restore	IRxx	
Wireless Key Low Battery	IAxx★16ST	xx = 17-32
Wireless Key Low Batt. Restore	IRxx	
PC5200 Supervisory	UTxx★8ST	xx = 83-86 (modules 1-4)
PC5200 Supervisory Restore	URxx	
PC5200 Tamper	UTxx★4ST	
PC5200 Tamper Restore	URxx	
PC5200 AC Fail	UTxx	
PC5200 AC Restore	URxx	
PC5200 Battery Trouble	UTxx★16ST	
PC5200 Battery Restore	URxx	
PC5100 Supervisory	ETxx★8ST	xx = 82
PC5100 Supervisory Restore	ERxx	
PC5100 Tamper	EAXx★4ST	xx = 82
PC5100 Tamper Restore	ERxx	
PC5700 Ground Fault	SSxx	xx = 82
PC5700 Ground Fault Restore	SRxx	
PC5700 TLM Trouble Line 1	LTx	x = 3
PC5700 TLM Restore Line 1	LRx	
PC5700 TLM Trouble Line 2	LTx	x = 4
PC5700 TLM Restore Line 2	LRx	

**The following events are not supported by ADT and will not be transmitted to the central station:**

Expansion Mod. Supervisory Alm.	DLS Message Cleared
Expansion Mod. Supervisory Rst.	Event Buffer 75% Full
Special Closing	Quick Exit
Special Opening	Utility Output /Command Output #1
Home Arm Mode	Sensor Reset/Command Output #2
No Entry Arm Mode(★+9+Access Cd)	Command Output #3
Zone xx Low Bt. Restore (All Zone Definitions)	Command Output #4
Remote ESCORT Access	Default Successful
Cold Start	Default Failed
Periodic Test Transmission	Swinger Shutdown
Links1000 Test Transmission	Re-Activating Home Away Zones
System Test	[★][5] By Access Code ## (40 - 42)
Keypad Lockout	[★][6] By Access Code ## (40 - 42)
DLS Message Received	

---

## Appendix B: Special Events for PC5010 v1.03 ADTU

### PC5010 v1.03 ADTU Event Description ---- ADT Transmission ----- Comments

No Close Partition 1 -----	OT1 -----	no tx options
No Close Partition 2 -----	OT2 -----	no tx options
Change Closing Time -----	idxxCEp -----	no tx options, xx = user
Sick Sensor -----	BTxx★32ST -----	xx = Alarm Rep Code, no tx options

### Events NOT Transmitted when using the PC5400 with the PC5010 v1.03 ADTU

2-Wire Smoke Alarm -----	FAxx★1ST -----	
2-Wire Smoke Alarm Restoral -----	FRxx -----	Default xx = 33
Phone Number 1 FTC -----	LT1 -----	
Phone Number 2 FTC -----	LT2 -----	
Phone Number 1 FTC Restoral -----	LR1 -----	
Phone Number 2 FTC Restoral -----	LR2 -----	

# Appendix C: ADT DVACS Zone Reporting Types

INPUT POINT ASSIGNMENT	DUAL-EOL / ZONE DOUBLER					
	DEVICE ACTIVATED (OPENS CONTACTS)		OPEN LOOP		SHORT ON LOOP	
	ARMED	DISARMED	ARMED	DISARMED	ARMED	DISARMED
00 NULL	-	-	-	-	-	-
01 DELAY 1	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
02 DELAY 2	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
03 INSTANT	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
04 INTERIOR	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
05 INTERIOR HOME/AWAY	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
06 DELAY HOME/AWAY	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
07 DELAY 24HR FIRE	FT	FT	FT	FT	FA*1ST	FA*1ST
08 STANDARD 24 HR FIRE	FT	FT	FT	FT	FA*1ST	FA*1ST
09 24HR SUPV BUZZER	ST*1ST	ST*1ST	ST*1ST	ST*1ST	SS*2ST	SS*2ST
10 24HR SUPERVISORY	SS*2ST	SS*2ST	ST*2ST	ST*2ST	ST*1ST	ST*1S
11 24HR BA	BA*2ST	BA*2ST	BA*2ST	BT*2ST	BA*1ST	BT*1ST
12 24HR HOLDUP	HA*2ST	HA*2ST	HT*2ST	HT*2ST	HT*1ST	HT*1ST
13 24HR GAS	UA*2ST	UA*2ST	UT*2ST	UT*2ST	UT*1ST	UT*1ST
14 24HR HEAT	UA*2ST	UA*2ST	UT*2ST	UT*2ST	UT*1ST	UT*1ST
15 24HR MEDICAL	MA*2ST	MA*2ST	MT*2ST	MT*2ST	MT*1ST	MT*1ST
16 24HR PANIC	BA*2ST	BA*2ST	BT*2ST	BT*2ST	BT*1ST	BT*1ST
17 24HR EMERGENCY	MA*2ST	MA*2ST	MT*2ST	MT*2ST	MT*1ST	MT*1ST
18 24HR SPRINKLER	FA*2ST	FA*2ST	FT*2ST	FT*2ST	FT*1ST	FT*1ST
19 24HR WATER	SS*2ST	SS*2ST	ST*2ST	ST*2ST	ST*1ST	ST*1ST
20 24HR FREEZE	UA*2ST	UA*2ST	UT*2ST	UT*2ST	UT*1ST	UT*1ST
21 24HR LATCHING TAMPER	BA*2ST	BA*2ST	BT*2ST	BT*2ST	BT*1ST	BT*1ST
22 MOMENTARY KEYSWITCH	-	-	BT*2ST	BT*2ST	BT*1ST	BT*1ST
23 MAINTAINED KEYSWITCH	-	-	BT*2ST	BT*2ST	BT*1ST	BT*1ST
24 LINKS ANSWER	-	-	-	-	-	-
25 INTERIOR DELAY	BA*2ST	1	BA*2ST	BT*2ST	BA*1ST	BT*1ST
26 24HR NON-ALARM	UA*2ST	UA*2ST	UT*2ST	UT*2ST	UT*1ST	UT*1ST
27 DELAY 24HR WATER	FT	FT	FT	FT	SA*1ST	SA*1ST
28 INSTANT 24HR WATER	FT	FT	FT	FT	SA*1ST	SA*1ST
29 AUTO-VERIFIED FIRE	FT	FT	FT	FT	FA*1ST	FA*1ST
30 FIRE SUPERVISORY	FT	FT	FT	FT	FS*1ST	FS*1ST
31 DAY ZONE	BA*2ST	1	BA*2ST	BA*2ST	BA*2ST	BT*2ST
87 DELAY 24HR FA (Wireless)	FT	FT	FT	FT	FA*1ST	FA*1ST
88 STAND 24HR FA (Wireless)	FT	FT	FT	FT	FA*1ST	FA*1ST

**1 - Ignored by Control**

...continued

## Appendix C: ADT DVACS Zone Reporting Types

INPUT POINT ASSIGNMENT	NORMALLY CLOSED		CROSS		SINGLE EOLR		OPEN	
	ARMED	DISARMED	ARMED	DISARMED	ARMED	DISARMED	ARMED	DISARMED
00 NULL	-	-	-	-	-	-	-	-
01 DELAY 1	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
02 DELAY 2	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
03 INSTANT	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
04 INTERIOR	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
05 INTERIOR HOME/AWAY	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
06 DELAY HOME/AWAY	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
07 DELAY 24HR FIRE	-	-	FA*1ST	FA*1ST	FT	FT	FT	FT
08 STANDARD 24 HR FIRE	-	-	FA*1ST	FA*1ST	FT	FT	FT	FT
09 24HR SUPV BUZZER	-	-	SS*2ST	SS*2ST	ST*1ST	ST*1ST	ST*1ST	ST*1ST
10 24HR SUPERVISORY	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST
11 24HR BA	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST
12 24HR HOLDUP	HA*2ST	HA*2ST	HA*2ST	HA*2ST	HA*2ST	HA*2ST	HA*2ST	HA*2ST
13 24HR GAS	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST
14 24HR HEAT	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST
15 24HR MEDICAL	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST
16 24HR PANIC	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST
17 24HR EMERGENCY	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST	MA*2ST
18 24HR SPRINKLER	FA*2ST	FA*2ST	FA*2ST	FA*2ST	FA*2ST	FA*2ST	FA*2ST	FA*2ST
19 24HR WATER	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST	SS*2ST
20 24HR FREEZE	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST
21 24HR LATCHING TAMPER	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST	BA*2ST
22 MOMENTARY KEYSWITCH	-	-	-	-	-	-	-	-
23 MAINTAINED KEYSWITCH	-	-	-	-	-	-	-	-
24 LINKS ANSWER	-	-	-	-	-	-	-	-
25 INTERIOR DELAY	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
26 24HR NON-ALARM	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST	UA*2ST
27 DELAY 24HR WATER			SA*1ST	SA*1ST	FT	FT	FT	FT
28 INSTANT 24HR WATER			SA*1ST	SA*1ST	FT	FT	FT	FT
29 AUTO-VERIFIED FIRE			FA*1ST	FA*1ST	FT	FT	FT	FT
30 FIRE SUPERVISORY			FS*1ST	FS*1ST	FT	FT	FT	FT
31 DAY ZONE	BA*2ST	1	BA*2ST	1	BA*2ST	1	BA*2ST	1
87 DELAY 24HR FA (Wireless)	-	-	FA*1ST	FA*1ST	FT	FT	FT	FT
88 STAND 24HR FA (Wireless)	-	-	FA*1ST	FA*1ST	FT	FT	FT	FT

**1 - Ignored by Control**

## LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defect in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

**WARNING:** Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

## FCC COMPLIANCE STATEMENT

**CAUTION:** Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment generates and uses radio frequency energy and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for Class B device in accordance with the specifications in Subpart "B" of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in any residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to television or radio reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna
- Relocate the alarm control with respect to the receiver
- Move the alarm control away from the receiver
- Connect the alarm control into a different outlet so that alarm control and receiver are on different circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.





**1-800-387-3630**

© 2001 Digital Security Controls Ltd.  
Toronto, Canada • [www.dsc.com](http://www.dsc.com)  
29005749 R003 Printed in Canada