HIKVISION

Title:	How to Set Indoor Station or Door Station Call Master	Version:	v1.0	Date:	10/26/2018
	Station				
Product:	Video Intercom				1 of 6

Preparation

- This guide takes DS-KH8301-WT and DS-KD3002VM as examples to introduce how to set Indoor Station or Door Station Call Master Station.
- 2. Software: iVMS-4200 V2.7.2.7.

How to Set Indoor Station or Door Station Call Master Station

Steps:

1. Set Indoor Station

 Configure Master Station: For master station, please go to Network > Linked Network Configuration, input SIP Server IP Address as this master station's own IP address, click Save. This step will let master station to register on its own build-in SIP server.

	Remote Configuration	
👝 🍘 System	Configuring the Network and Sip Parameters	
Device Information	Linked Network Configuration	
🎡 General	Device Type: Master Station	
@ Time	SIP Server IP Address: 10.9.98.47	
System Maintenance	Security Control Panel IP Address: 0.0.0.0	
User	Security Control Panel Port No.: 0	
@ RS485	Save	
🖭 🌀 Intercom		
🖃 🚳 Network		
Local Network Configuration		
Linked Network Configuration		
Advanced Settings		
🕑 🚳 Video Display		

2) Select Indoor Station, click **Remote Configuration**.



Title:	How to Set Indoor Station or Door Station Call Master Station	Version:	v1.0	Date:	10/26/2018
Product:	Video Intercom			Page:	2 of 6

File System View Tool Help		iVMS-4:	:00	admin 🤅	09:37:04	● _ = ×
📕 Access Control 🛛 📙 Sta	atus Monitor 🛛 🚔	Device Managemer	ıt 📲			
🚥 Device 🖬 Group						
Device Type	Device for Manageme	ent (3)				Refresh All
Hikvision Device	+ Add 🛛 Modify	🗙 Delete 🛛 🏶 Re	mote Configur	談 QR Code 🌒	Activate 🏦 Upgr	Filter
Clould P2P Device	Device T Nicknam	e 🔨 Connecti	Network Param.	Device Serial No.		Secu
🔛 Third-party Encoding D	Access C 10.9.98.5	5 TCP/IP	10.9.98.55:8000	DS-K2604201809	13V020004EN201	345279 Weal
🚪 Upgrade Server	Indoor St 10.9.98.48	B TCP/IP	10.9.98.48:8000	DS-KH8301-WT0	120180123WRC04	711526 Weal
Stream Media Server	Door Sta 10.9.98.85	5 TCP/IP	10.9.98.85:8000	DS-KD3002-VM0	120180125WR179	145621 Weal
	*					•
	Online Device (0)				😯 Refresh I	Every 60s 🛛 👋
	+ Add to Client	HAdd All 🛛 🖾 Mod	fy Netinfo 🛛 🦘 R	leset Password	Activate	ilter
	IP Device	e Type 🛛 🛛 Firr	nware Version	Security	Server Port Dev	ice Serial No. 1
Hikvision Device: Encoding Device/Door Station/Decoder/ Storage Server/Indoor Station/ Master Station/Security Control Panel/Access Controller	•)			•
🙆 👃 🖾 🍁						,≉

 Go to Network > Linked Network Configuration, input Master Station IP Address and SIP Server IP Address as master station's own IP address, click Save.

	Remote Configuration	×
🖃 🗞 System	Configuring the Network and Sip Parameters	5
Device Information	Linked Network Configuration	
 System Device Information General Time System Maintenance User RS485 Intercom Network Local Network Configurati Linked Network Configurati Advanced Settings Video Display 	Configuring the Network and Sip Parameters Linked Network Configuration Device Type: Indoor Station Master Station IP Address: 10.9.98.47 (Main) Door Station IP Address: 10.9.98.47 Security Control Panel IP Address: 0.0.0 Security Control Panel Port No: 0 Doorphone IP Address: 10.9.98.56 Main Door Station Type: Main Door Station Save	



Station Product: Video Intercom Page: 3 of 6	Title:	How to Set Indoor Station or Door Station Call Master	Version:	v1.0	Date:	10/26/2018
Product: Video Intercom Page: 3 of 6		Station				
	Product:	Video Intercom			Page:	3 of 6



Long Press: Hold SOS to trigger a SOS alarm and upload the alarm message to the master station.

Туре	Alarm Source	Time	Opera
Emaigeney Merim	A Polis	anisme.	c
Timur genny Aldem	hana.	100 miles	C
Emergency Marm	1 तलत	12 minutes ago	c
Bas Detector	শ্ৰাগ্ৰন্থ	St minutes ago	c
Gas Detector	শ-শ-শ-শ		c
Gas Detector	1-1-1-1		e

Short Press: Press button ,master station would receive Answer request from indoor station.



Title:	How to Set Indoor Station or Door Station Call Master Station	Version:	v1.0	Date:	10/26/2018
Product:	Video Intercom			Page:	4 of 6



2. Set Door Station

 Go to Network > Linked Network Configuration, input Master Station IP Address and SIP Server IP Address as master station's own IP address, click Save.

	Remote Configuration
🖃 🚳 System	Configuring the Network and Sip Parameters
Device Information	Linked Network Configuration
🎡 General	Device Time: Dear Station
💮 Time	Menter Chiling ID Address I 40.0.00.47
System Maintenance	SIE Searce IP Address: 10.9.98.47
🎡 User	Sir Server in Address: 10.3.36.47
	Security Control Panel Part No : 0
🖭 🚳 Intercom	Security Control Panel Fort No 0
🖃 🚳 Network	Save
Local Network Configurati	
🌼 Linked Network Configura	
FTP Settings	
Advanced Settings	
密 🚳 Video Display	
	Sound
	Saved.

HIKVISION

Title:	How to Set Indoor Station or Door Station Call Master Version: Station		v1.0	Date:	10/26/2018
Product:	Video Intercom		Page:	5 of 6	

2) Hold the **button** in red rectangle to call master station.



HIKVISION

Title:	How to Set Indoor Station or Door Station Call Master	Version:	v1.0	Date:	10/26/2018
Product:	Video Intercom		Page:	6 of 6	

First Choice for Security Professionals

HIKVISION Technical Support