

| | | | | | |
|-----------------|--|-----------------|------|--------------|-----------|
| Title: | How to Upgrade Wi-Fi doorbell Firmware | Version: | v1.0 | Date: | 11/8/2018 |
| Product: | Video Intercom | | | Page: | 1 of 3 |

Instructions

There are 3 methods you can choose to upgrade Wi-Fi doorbell firmware:


1. Upgrade in Hik-Connect app
2. Upgrade with SD card
3. Upgrade with iVMS-4200

How to Upgrade Wi-Fi doorbell Firmware

Upgrade Methods

1. Upgrade in Hik-connect App

- 1) It is required to add Wi-Fi doorbell to your Hik-Connect account in advance, and make sure the status of Hik-Connect is online.
- 2) Hik-Connect will automatically detect new available firmware for Wi-Fi door bell, you can upgrade in: **Device Setting-> Device Version.**

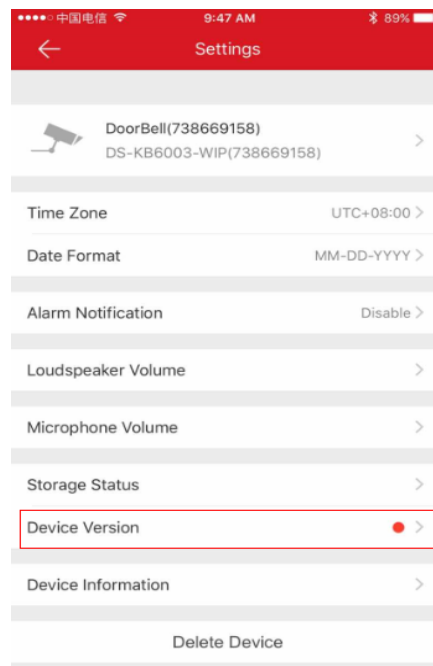


2. Upgrade with SD Card

Put the new firmware ('digicap.dav' file) into SD card root directory, insert card to Wi-Fi door bell, restart device, device will automatically upgrade and reboot.

| | | | | | |
|-----------------|--|-----------------|------|--------------|-----------|
| Title: | How to Upgrade Wi-Fi doorbell Firmware | Version: | v1.0 | Date: | 11/8/2018 |
| Product: | Video Intercom | | | Page: | 2 of 3 |

3. Upgrade with iVMS-4200

- 1) Make sure your computer and your Wi-Fi doorbell are in same network, using activate password to add device into iVMS-4200. If you haven't set activate password for Wi-Fi doorbell before, the default password is 'admin + Verification Code' (Format such as: 'adminHLPVTL').
- 2) You can upgrade in: **Remote Configuration -> System -> System Maintenance:**

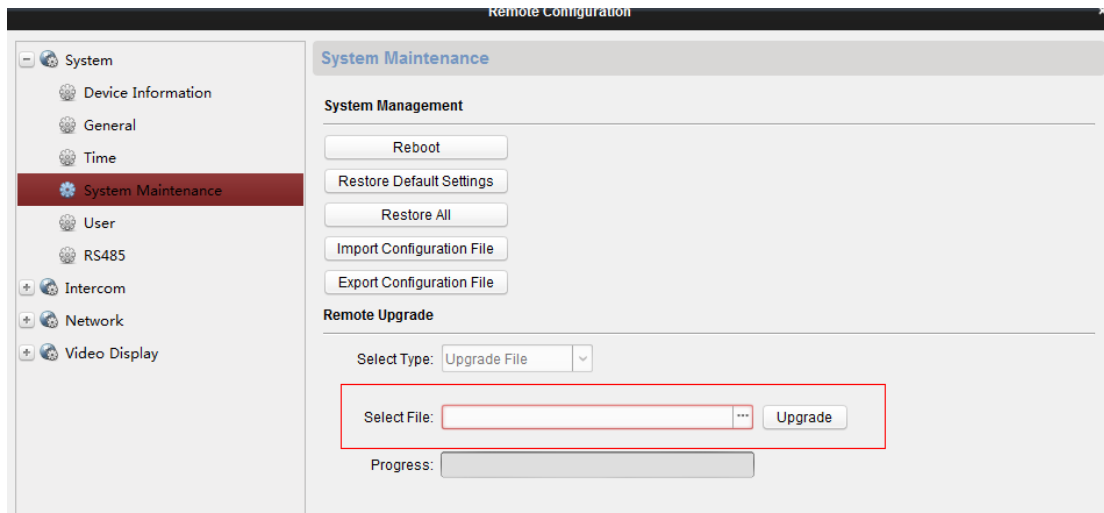

| | | | | | |
|-----------------|--|-----------------|------|--------------|-----------|
| Title: | How to Upgrade Wi-Fi doorbell Firmware | Version: | v1.0 | Date: | 11/8/2018 |
| Product: | Video Intercom | | | Page: | 3 of 3 |

First Choice for Security Professionals **HIKVISION** Technical Support