

How to add IP camera to the indoor station

(Through the indoor station iVMS-4200 interface)

Title:	How to add IP camera to the indoor station	Version:	v1.0	Date:	2020/11/24
Product:	duct: Video Intercom		Page:	1 of 3	

Preparation

1. This guide takes

Type	Model	Version
Indoor station	DS-KH8520-WTE1	V2.1.10_200713
IPC	2CD2763G1-IZS	V5.6.5_200316

As examples to introduce register IPC to indoor station.


2. Software: iVMS-4200 Version 3.4.0.9


How to add IP camera to the indoor station

(Through the indoor station iVMS-4200 interface)

1. Add Devices on iVMS-4200

1) Search for online devices and add the door station on iVMS-4200, enter username and password, and then confirm that the device is online.

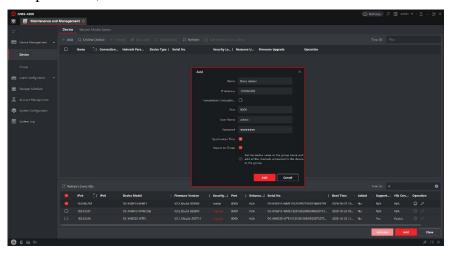


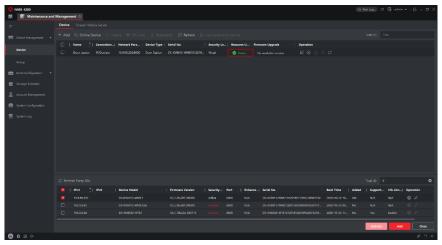


Title:	How to add IP camera to the indoor station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	2 of 3

2. Add IP Camera to Indoor Station


Choose the Indoor Station → Remote Configuration, then go to Intercom → IP Camera Information, add the camera's Device Name, IP Address. Set Port as 554, Channel No as 1. Set Manufacturer Protocol as HIK Protocol. Input user name, password and save.

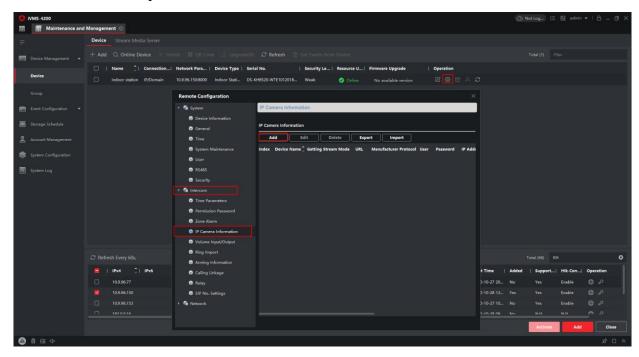

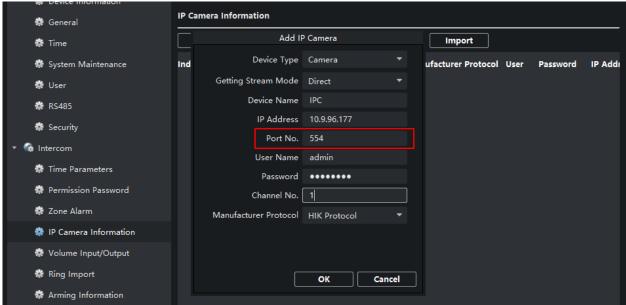

Title:	How to add IP camera to the indoor station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	3 of 3

Note: The resolution of the IP camera should less than or equal to **1280*720 resolutions**, the decoding type should be **H.264**.

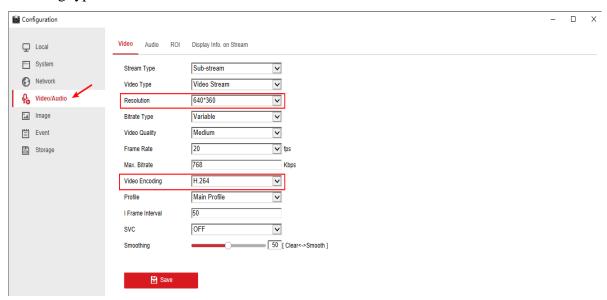

Note: You can access NVR channel by filling the corresponding channel number in Channel NO and **disable** the Stream Encryption function due to the video intercom architecture doesn't support it.



3. Watch the Live View on Indoor Station

1) Choose **Live View→Network Camera→IPC**, then you can watch the live view.

