

How to add Ringtone on Indoor Station

Title:	How to add Ringtone on Indoor Station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	1 of 3

Preparation

1. This guide takes		
Туре	Model	Version
Indoor station	DS-KH8520-WTE1	V2.1.10_200713

As examples to introduce add Ringtone on Indoor Station

2. Software: iVMS-4200 Version 3.4.0.9

How to add Ringtone on Indoor Station

1. Add Devices on iVMS-4200

1) Search for online devices and add the door station on iVMS-4200, enter username and password, and then confirm that the device is online.



Title:	How to add Ringtone on Indoor Station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	2 of 3

2. Add Ringtone on Indoor Station

1) Choose the Indoor station, then go to remote configuration \rightarrow Intercom \rightarrow Ring Import \rightarrow \clubsuit .



2) Upload prepared ringtones, and you will see the page shown below.

🔹 鐍 System	Ring Cor	nfiguration					
Device Information							
🏶 General	Index	Name	Size	Туре	Add	Delete	
🏟 Time		Indiana cut	228284	wav	+	×	
🏶 System Maintenance	2				+	×	
🏶 User					+	×	
🏶 RS485					+	×	
🏶 Security							
👻 🚱 Intercom							
🏶 Time Parameters							
👾 Permission Password							
🏶 Zone Alarm							
🏶 IP Camera Information							
🏶 Volume Input/Output							
🏶 Ring Import							
🏶 Arming Information							
🏶 Calling Linkage							
🏶 Relay							
🌸 SIP No. Settings							
🕨 鐍 Network							

NOTE: The uploaded audio file needs to meet the following **conditions**:

- 1) Format: .wav;
- 2) Capacity: \leq 300K;
- 3) Sampling rate: 8KHz;
- 4) Mono;
- 5) 128Kbps

Title:	How to add Ringtone on Indoor Station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	3 of 3

3. Set the ringtone on the device

1) Go to **Settings** on the home page.



Then go to Call settings, choose Ringtone, and select the uploaded ringtone. You can hear this ringtone when the indoor station is called.

Pingtone			
Kingcone		call_ringtone1 >	
Ringtone duration		⊖ 30s ⊕	((.
Calling duration		⊖ 30s ⊕	俭
Call Forwarding		⊖ os ⊕	
Volume Settings		>	ŝ
Other Settings		>	=
PLANK.	HIKVISION		
	HIKUSION Ringtone		1
	MIKVISION Ringtone call_ringtone1		
	Ringtone call_ringtone1 call_ringtone2	1	
Calling duration	Ringtone call_ringtone1 call_ringtone2 call_ringtone3		
Colling duranch Eall Forwarding	Ringtone call_ringtone1 call_ringtone3 call_ringtone3		
Couling duration Call Forwarding Volume Settings	Ringtone call_ringtone1 call_ringtone2 call_ringtone3 indiana.cut		

