



How to Link IP Camera when Calling on SIP Phone

| | | | | | |
|-----------------|---|-----------------|------|--------------|------------|
| Title: | How to Link IP Camera when Calling on SIP Phone | Version: | V1.0 | Date: | 11/16/2022 |
| Product: | Video Intercom | | | Page: | 1 of 1 |

Preparation

1. The IP camera must support RTSP protocol for live view.
 2. Suitable model: DS-KP8000-HE1/ DS-KP8000-WHE1/ DS-KP8200-HE1/ DS-KP9301-HE1
- Note: maximum support 1920*1080 and H.264 IP camera, if the video stream resolution is higher or H.265 encoding, it will live view failed on the SIP phone.

How to Link IP Camera when Calling on SIP Phone

Login SIP phone web interface, enter *Line--Action Plan* and configure the linkage

Parameter explanation:

Number: Number or IP on the other side (supports the same number expression as dial plan)

Type: When to live view the camera video, **Early** means before answer the call, **Connected** means after.

Direction: Both, incoming call or outgoing call

Line: Select the line which you want to link the IP camera live view


Username and Password: keep them empty, we will include them in the url

URL: input the RTSP command, for example

Main stream: rtsp://admin:admin123@172.18.9.200:554/Streaming/Channels/101

Sub stream: rtsp://admin:admin123@172.18.9.200:554/Streaming/Channels/102


Action: live view camera linkage select Video

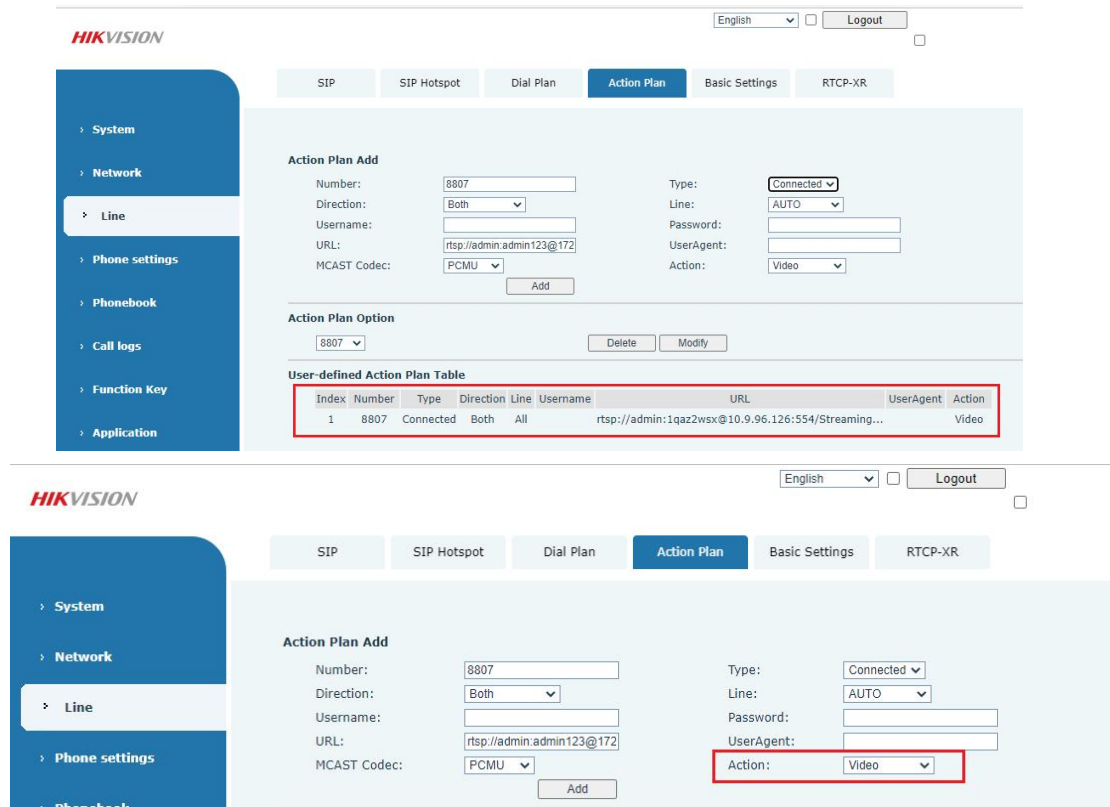

If you set the type as **Connected**, when number 8807 device call the SIP phone or call 8807 from SIP phone, after answer the call, you can see the linked IP camera on the screen.


Note: DS-KP8000-(W)HE1 and DS-KP8200-HE1 support connected mode only.

| | | | | | |
|-----------------|---|-----------------|------|--------------|------------|
| Title: | How to Link IP Camera when Calling on SIP Phone | Version: | V1.0 | Date: | 11/16/2022 |
| Product: | Video Intercom | | | Page: | 3 of 2 |

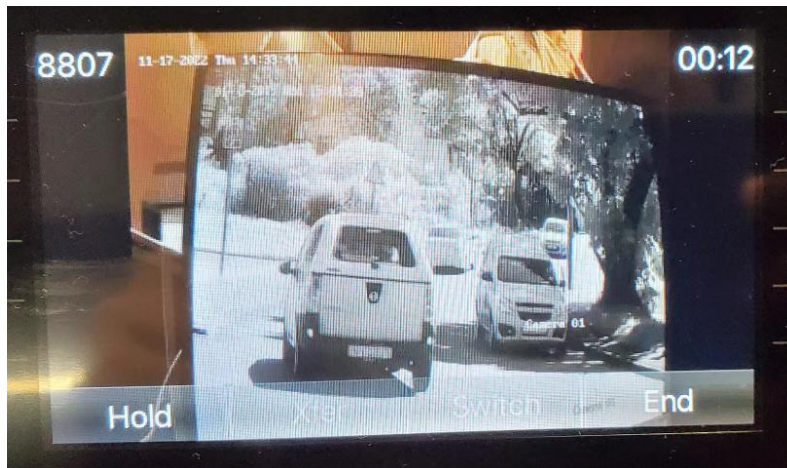

If you set the type as **Early**, when the call comes or call number 8807, no matter answer or not, you can see the linked IP camera on the SIP phone.



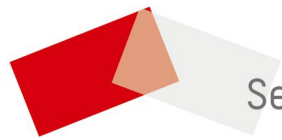

See Far, Go Further