

Title:	DS-PHA How to Configure RS485 Wireless Receiver DS-PM-RSWR	Version:	v1.1	Date:	06/15/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	1 of 3

Preparation

1. PHA Series Hybrid Security Control Panel
2. Internet Explorer
3. RS485 Wireless Receiver DS-PM-RSWR above V2.0.0_build190801

DS-PHA How to Configure RS485 Wireless Receiver DS-PM-RSWR

If you want add wireless Peripherals (wireless detector, wireless keyfob, wireless siren) to the DS-PHA Panel, you need connect Wireless receiver DS-PM-RSWR at first. Then you can add the peripherals with web browser.

1. Login web interface

- 1) Login with admin account or installer account.
- 2) Select **Device Management** → **Module Information** → **Module Type** → **RS-485 Wireless Receiver** to check the wireless receiver address and status.

The screenshot displays the Hikvision web interface. On the left is a navigation menu with 'Module Information' highlighted. The main content area is titled 'Module Information' and features a dropdown menu for 'Module Type' set to 'RS-485 Wireless Receiver'. Below this is a table with the following data:


Module	Module Address No.	Module Type	Module Information	Module Version	Status	Operation
1	1	RS-485 Wireless Receiver	DS-PM-RSWR-A	2.1.00-2020.2.21. mode...	Online	

2. Add Wireless Peripherals


- 1) Login with installer account.
- 2) Select **System** → **System Options** → **Adding Trough** , click **Enter Enrollment Mode**, and select which wireless device you need add.

Note: If 868 wireless receiver need add wireless siren, receiver DIP address need change to 9.

Title:	DS-PHA How to Configure RS485 Wireless Receiver DS-PM-RSWR	Version:	v1.1	Date:	06/15/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	2 of 3

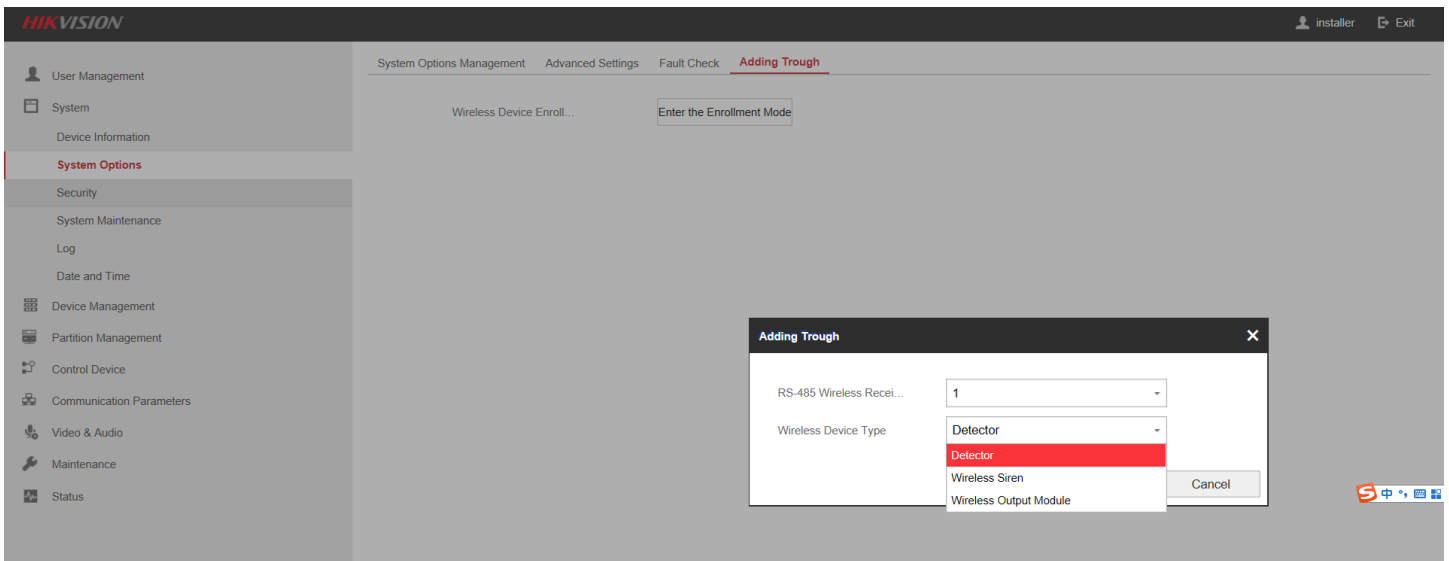


- 3) Or you can add with serial number directly. Select **Device Management** → **Zone** → **Zone Settings**, Enable **Enroll Wireless Detector**, enter **Serial No** and select **Module Name**, then click save.

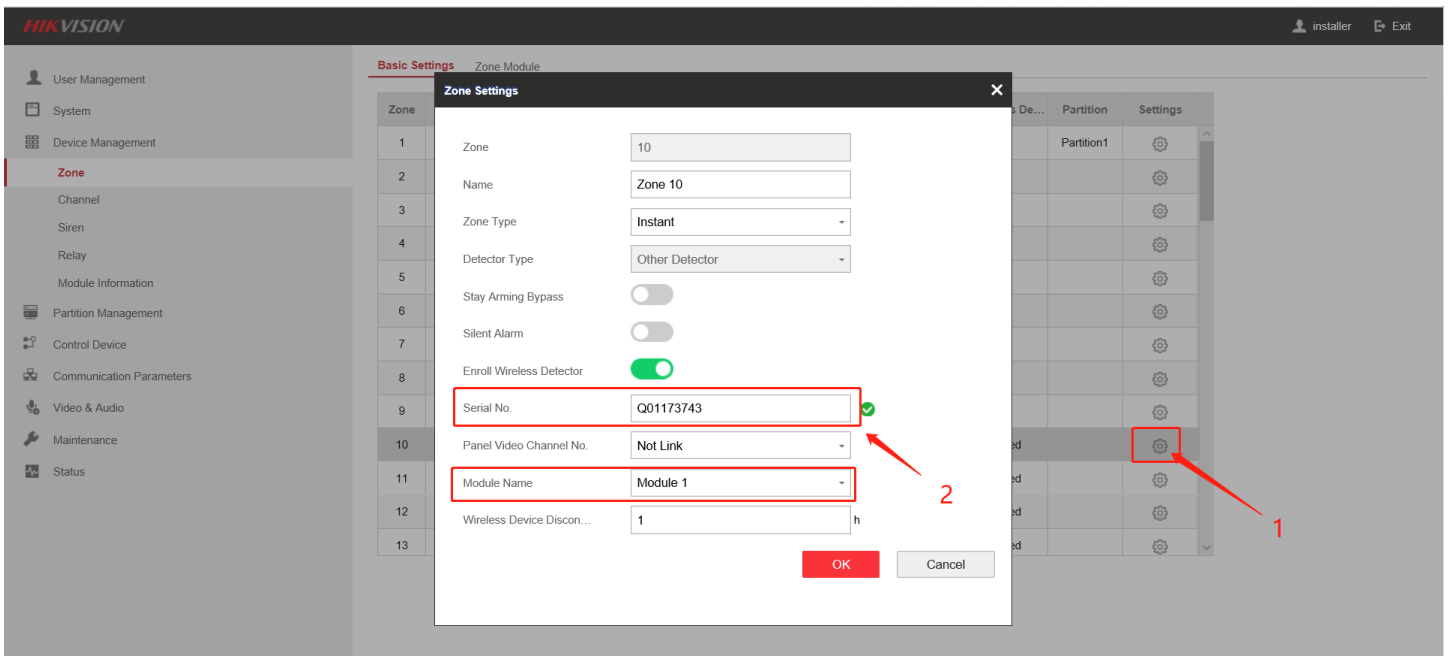

3. Add Wireless Keyfob

- 1) Login with installer account.
- 2) Select **User Management** → **Keyfob**, click **+Add**, and select **Linked Device Type** and **Linked Device**, then click ok to start adding.
- 3) Press any key on the keyfob to add.

Title:	DS-PHA How to Configure RS485 Wireless Receiver DS-PM-RSWR	Version:	v1.1	Date:	06/15/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	3 of 3

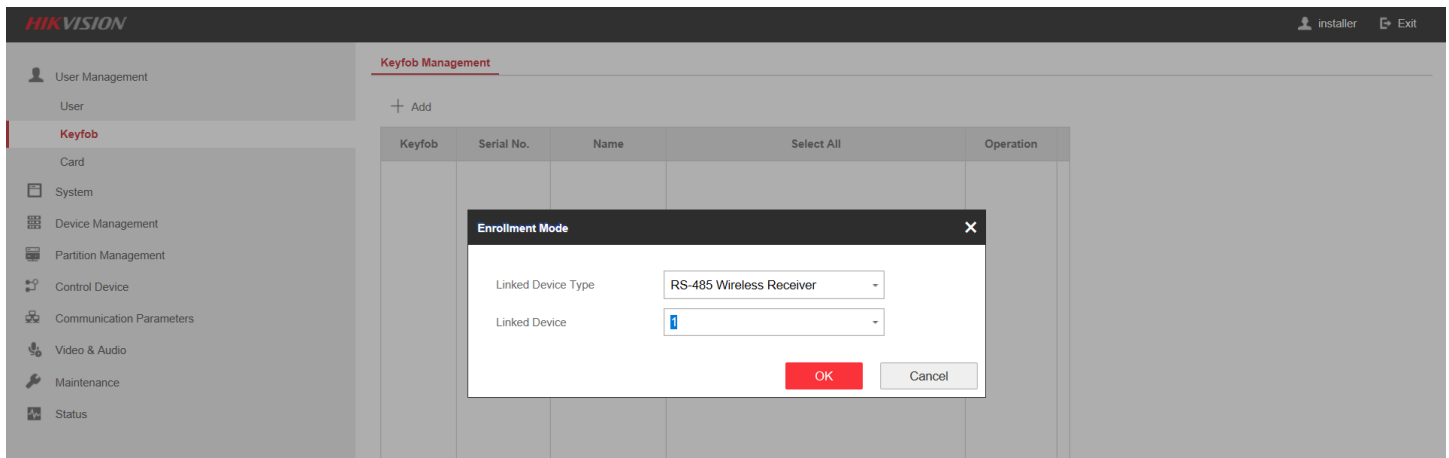

See Far, Go Further
HIKVISION Technical Support