

DS-K1T Series Connect To External Reader

1. Operation Process


- 1) Find RS485+, RS485- according to the label in the back of device
- 2) Modify device RS485 work mode
- 3) Set RS485 address for reader
- 4) Select related port and connect cables;
- 5) Open door with registered card

2. Operation Steps:

- 1) Find RS485+, RS485- cable according to the label in the back of device ;
- 2) Modify device RS485 work mode to connect to reader from device menu-->Comm.-->RS485;
- 3) Set dip switch in the back of card reader and change work mode to RS485, and set 485 address as 2 as below picture.



- 4) Follow below diagram to connect reader to device

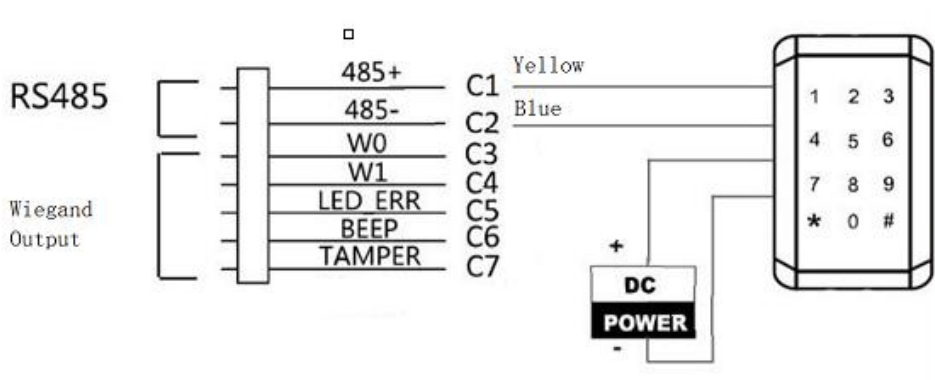

- 5) Test
Open door with registered card.

Suitable Models:

Model	
DS-K1T105E/M	DS-K1T105E/M -C
DS-K1T201EF/MF	DS-K1T201EF/MF -C
DS-K1T500S	DS-K1T501SF