Title:	How to open the door with PIN Code in MinMoe Terminal	Version:	v1.0	Date:	28/01/2021
Product:	Access Control	Page:	1 of 5	H	KVISION

How to open the door with PIN Code in MinMoe Terminal

(2021-01-28)


Preparation

This document displays guidance on how to configure PIN Code in IVS4200 software


and open door with it on MinMoe access control terminal.

1. Enable opening the door with PIN Code on the device

- 1) Long press the screen of device and then slide left (or right) to enter the menu.
- 2) Enter the Access Control Settings interface (Menu \rightarrow ACS)

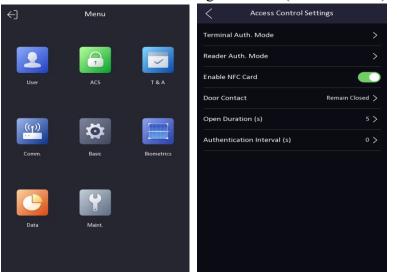

3) Go on with the Terminal Auth. Mode and select Type (Single Credential) and Method (must tick PWD).

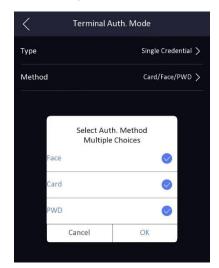

Title:	How to open the door with PIN Code in MinMoe Terminal	Version:	v1.0	Date:	28/01/2021
Product:	Access Control	Page:	2 of 5	H	KVISION

2. Set a PIN Code for person

Add the device in 4200, add the person with PIN Code and apply the information of this person to device.

0	iVMS-4200											∃ _ □	\times
	Access Control		Aaintenance a	nd Managemer	nt 🖂 📃 Perso	on							
		Device											
.		+ Add				ra 📿 Refre							
			Name 🏮	Connecti	Network Pa	Device T	Serial No.	1 :	Security 🖂	Resource	Firmware	Upgrade	
	Device		5671	IP/Domain	10.9.96.55:8000	Access Con	DS-K5671-ZH	H2021010	Weak	😔 Online	No availal		
													ł
													ł
2													
ŝ													
ত													
		C Dofr	esh Every 60s.						Total (69) 5671		c	
			IPv4 🗘	IPv6 I	Device F			Enhan	Serial No.	B .		Suppo	н
			10.9.96.55		DS-K5671-ZH V	3.2.0b. Active	8000		DS-K5671-Z	H2 20	Yes Y		CI
									_				
									Acti	ivate	Add	Close	
	🛍 🐼 디× Remote: Armin											\$ ² □	~

Fig. 1 add the device in 4200

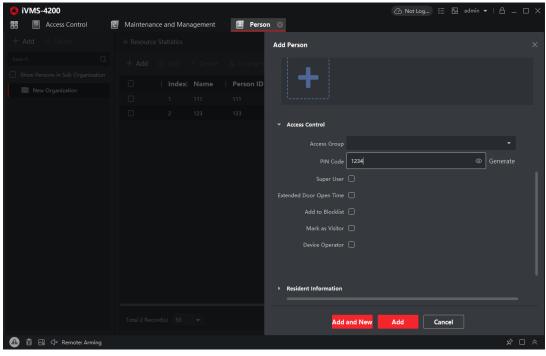


Fig. 2 add the person and set PIN Code

Title:	How to open the door with PIN Code in MinMoe Terminal	Version:	v1.0	Date:	28/01/2021
Product:	Access Control	Page:	3 of 5	H	KVISION

iVMS-4200	ontrol_) 🗐 Ma	aintenance a	nd Managemen	t 🗐	Person		- C Not Log		
				C Apply All to		Add				
						* Name	test			
							All-Day Authorized			
Access Group						* Select Person			Selected (1)	🛍 Clear
										۵
							🔻 🗧 🛅 New Or	ganization	2 123	
							Z 123			
							- 111			
						* Select Access Point	Available			🛍 Clear
								Q		Q
							 6320 5671 		Door1_5671	
							P M 100/1			
							Save	ancel		
🕼 前 ⊡3 ⊄× Rei	note: Armir	g								<i>☆</i> □

Fig. 3 apply the changes to device

3. Open the door with PIN Code

Enter the interface on the device where we can input PIN Code (click the keypad)


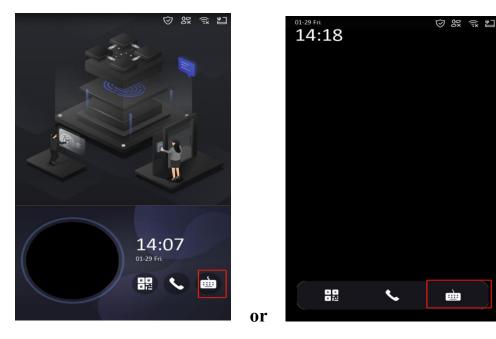


Fig. 1 screen with advertisement

Fig. 2 screen without advertisement

Title:	How to open the door with PIN Code in MinMoe Terminal	Version:	v1.0	Date:	28/01/2021
Product:	Access Control	Page:	4 of 5	H	KVISION

2) Input the PIN Code to open the door.

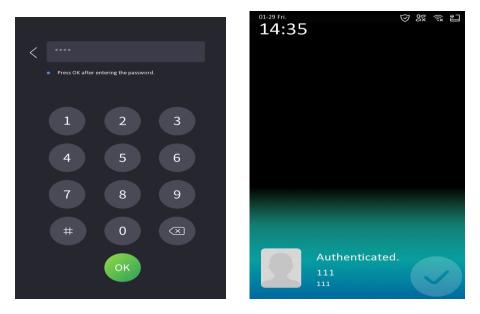

Title:	How to open the door with PIN Code in MinMoe Terminal	Version:	v1.0	Date:	28/01/2021
Product: Access Control		Page:	5 of 5	H	KVISION

See Far Go Further *HIK*VISION Technical Support