



如何配置 26 系列控制器的事件报警联动
How to configure Event Linkage for the
26 series Access Controller

Title:	How to configure Event Linkage for the 26 series controller	Version:	v1.0	Date:	23/08/2022
Product:	Access Controller			Page:	1 of 4


Preparation

Type	Model	Version
Access Controller	DS-K2604	
Face Recognition Terminal	DS-K1T341AM	
Fingerprint Card Reader	DS-K1201MF	

How to configure Event Linkage for the 26 series Access Controller



1. Access Controller configuration.

- 1) Connect the controller to the Ethernet, search the device IP address via the SADP software.
- 2) Adding the controller to IVMS-4200, as shown below.

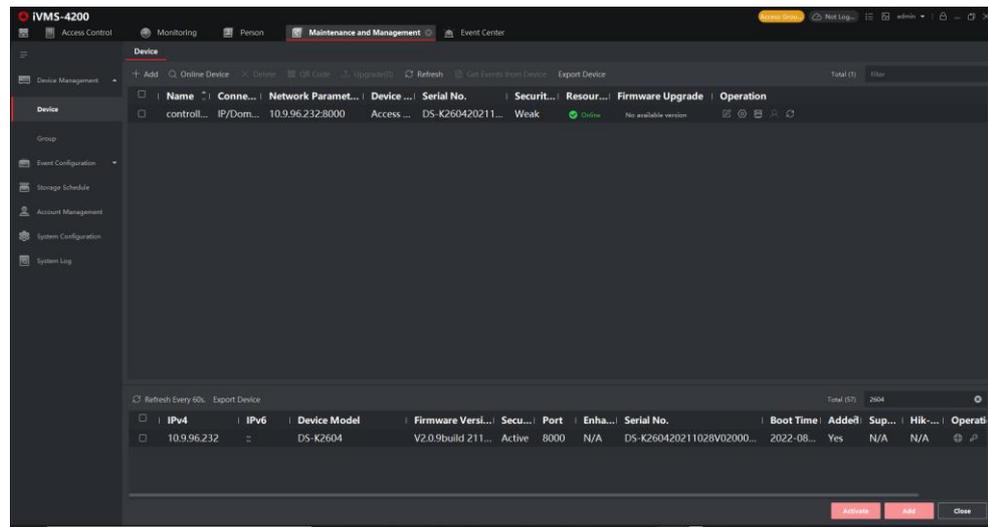


2. Test the correct Event Source and Event Type

- 1) Test the correct Event Source and Event Type at the case port and check it in the Event Center, as shown below.

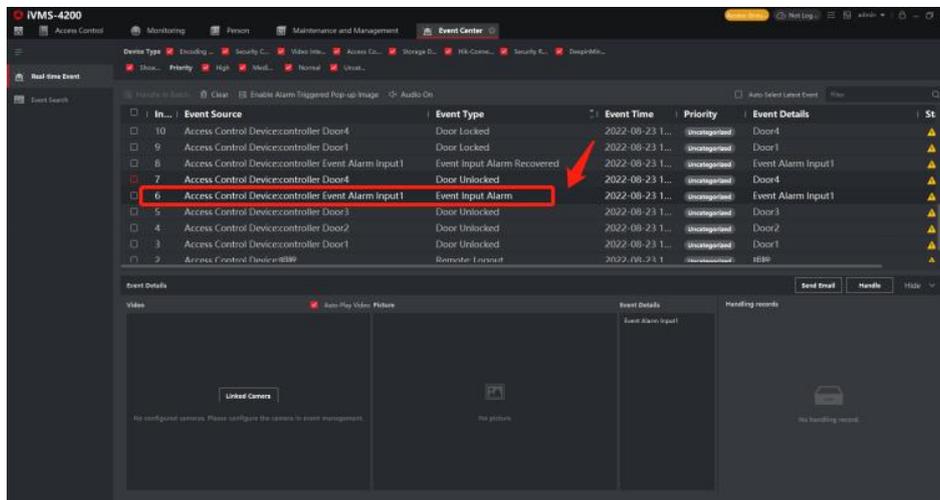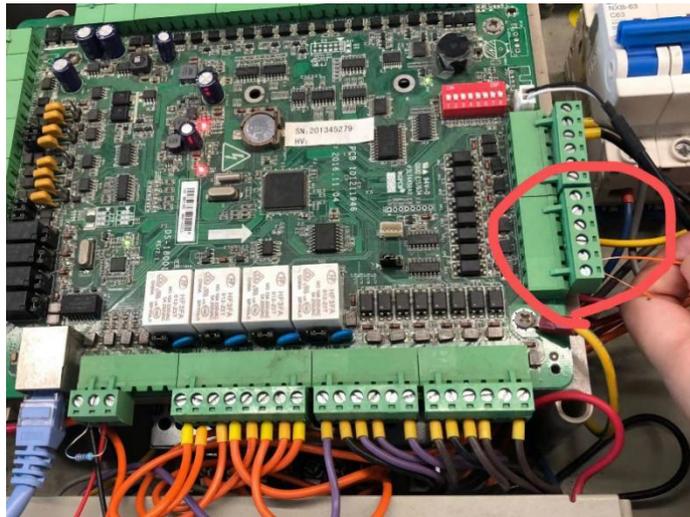


3. Configure Event Linkage

- 1) Enter Access Control- Linkage Configuration- + Add to configure Event Linkage for 26 Series controllers . Make sure that the Event Type is consistent with the test results above, as shown below.

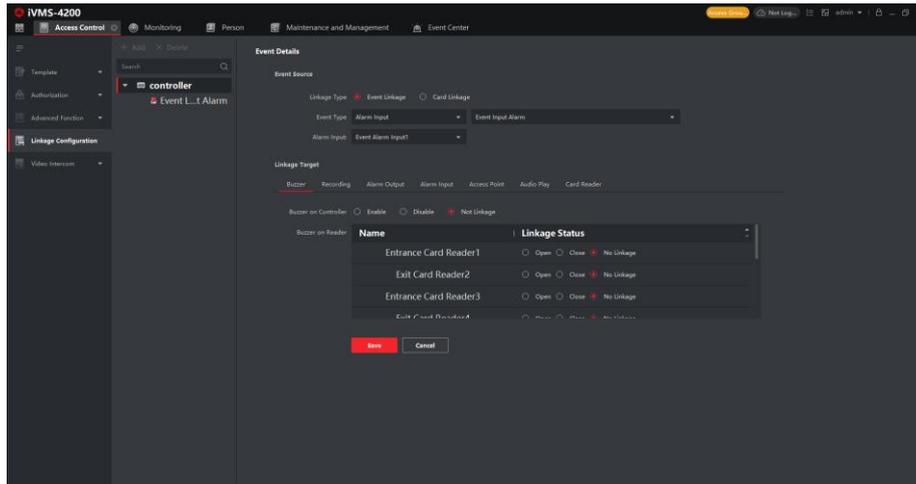


2) You can start configuring the event linkage you need (for example: linkage four doors open) , as shown below.

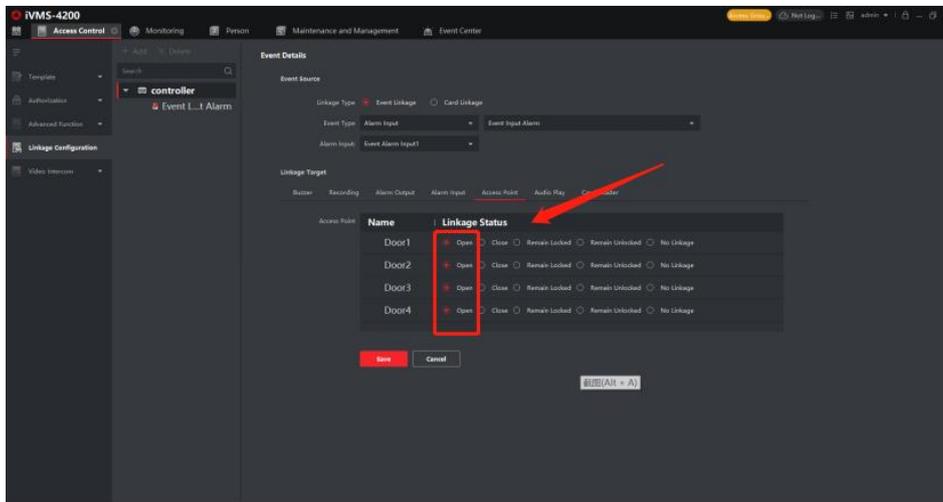

4. Simulate the occurrence of events and check the status of the event linkage.

1) Simulate the occurrence of an event using wires. The four lights are fully illuminated, indicating that the event linkage configuration is successful.

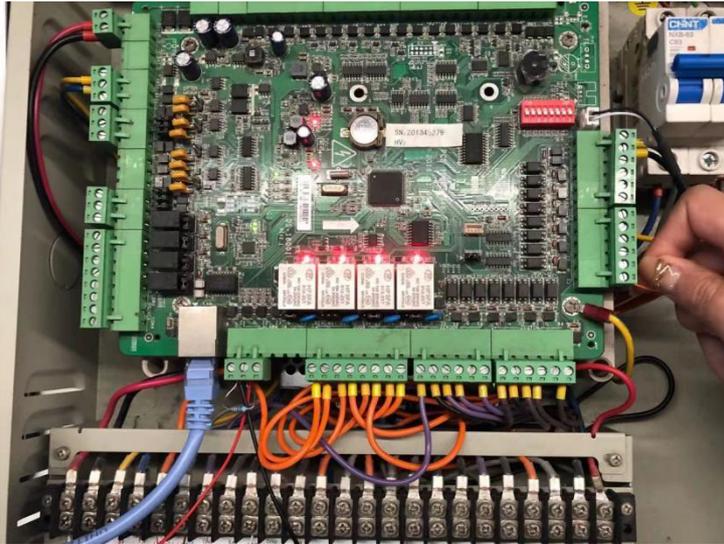



See Far, Go Further