HIKVISION

How to Configure Automation Device in AX PRO Wireless Control Panel

Title:	How to Configure Automation Device in AX	Version:	v1.0	Date:	11/07/2020
	PRO Wireless Control Panel				
Product:	DS-PWA Series AX PRO Wireless Security Control Panel			Page:	1 of 5


Preparation

- 1. DS-PWA Series AX PRO Wireless Security Control Panel
- 2. Automation Device(Relay Module) DS-PM1-O1L-WE and Wireless Keyfob
- 3. IE Browser and Hik-Connect App


How to Configure Automation Device in AX PRO Wireless Control Panel

1. Use Event Type to Control Automation Device


- 1) Add the Automation Device to AX PRO at first
- 2) Login AX PRO, select Device---Automation---Configuration

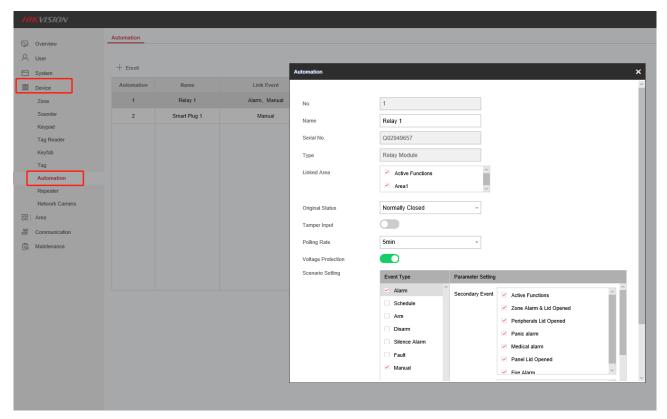

- 3) Configure Original Status---Normal Open or Normal Close
- 4) Configure Tamper Input: If third part device Tamper signal is connected, you can enable this function. Need select Tamper input Status(NO or NC)

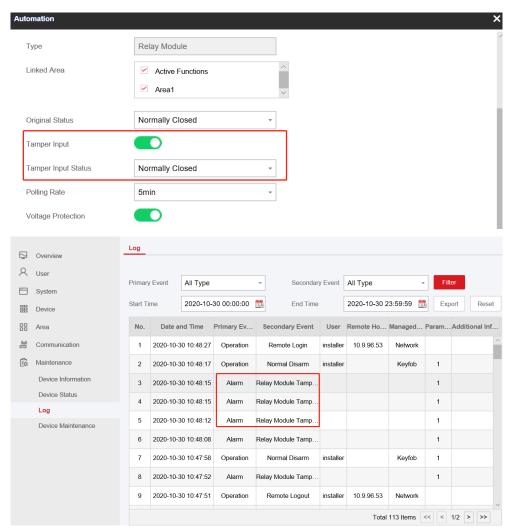


5) Configure Event linkage

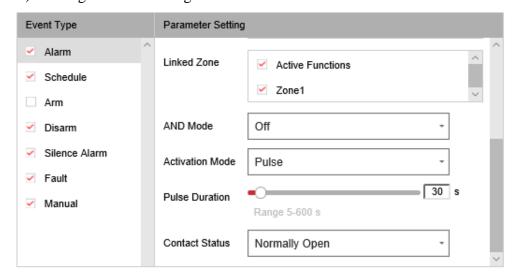


Note: AND Mode means only all zone triggered, then relay will output


Schedule: Configured time period, the Automation Device will be normal open or normal close

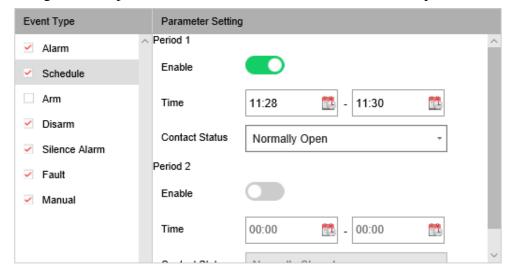


Disarm: Disarm Event will link the Automation Device open or close

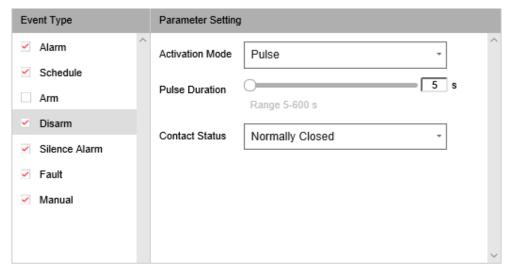


Silence Alarm: Silence Alarm Event will link the Automation Device open or close

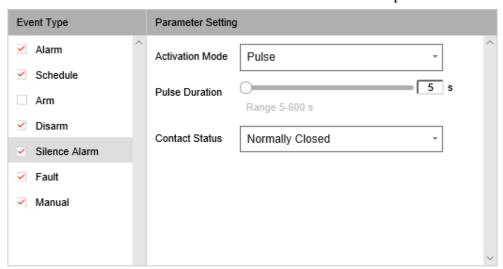

Fault: System Fault Event will link the Automation Device open or close

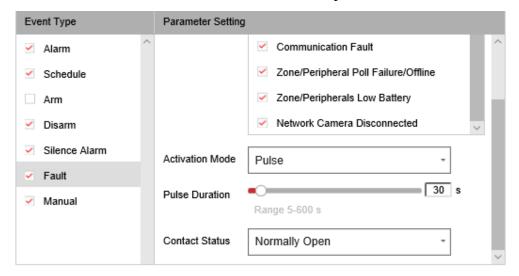


Manual: You can manually control the Automation Device open or close in Hik-connect

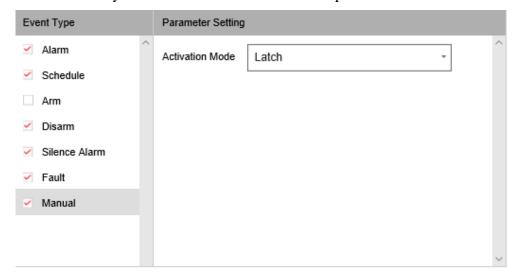

2. Use Keyfob to control Automation Device

- 1) Add the Automation Device and wireless keyfob to AX PRO at first
- 2) Configure Keyfob Button linkage to Automation Control, and select the relay number.

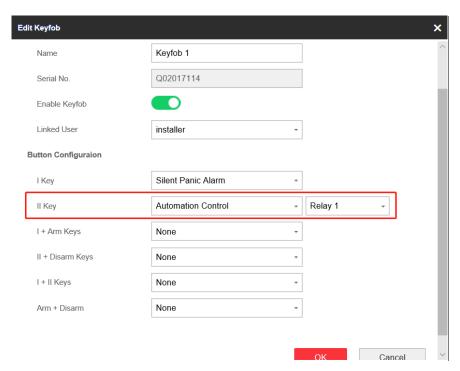

3) Configure Automation Control Device Event Type---Manual, select Activation Mode and Pulse Duration.

Activation Mode

Pulse: Relay output for a short time period and then stop

Latch: Relay output continuously

