

Title:	How to Configure SMS to Mobile Phone	Version:	v1.1	Date:	03/23/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	1 of 3

Preparation

1. PHA Series Hybrid Security Control Panel
2. Internet Explorer
3. One SIM card and one Mobile Phone

DS-PHA How to Configure SMS to Mobile Phone

When an alarm is triggered, if you want to send the alarm notification to mobile phone (SMS), you can set the notification push parameters.

1. Put sim card into the card slot

- 1) Please turn off power of Hybrid Security Control Panel.
- 2) Put sim card into the card slot.
- 3) Turn on Power of the Hybrid Security Control Panel.

Note

If you inset the SIM card when the power on, you need restart the wireless control panel.

2. Configure Message Notifications

- 1) Click **Communication Parameters** → **Message Notification**.
- 2) Enable the target notification.

Alarms and Tampers

The device will push notifications when the zone alarm is triggered or the device tamper alarm is triggered or restored.

Device Tampering Alarm Notification

The device will push notifications when tampering alarm of any device is triggered or restored.

Control Panel Tampering Alarm Notification

The device will push notifications when tampering alarm of the control is triggered or restored.

Panic Alarm Notification

The device will push notifications when panic alarm is triggered or restored by zones, keypads or keyfobs.

Medical Alarm Notification

The device will push notifications when medical alarm is triggered.

Gas Alarm Notification

The device will push notifications when gas alarm is triggered.

Title:	How to Configure SMS to Mobile Phone	Version:	v1.1	Date:	03/23/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	2 of 3

Fire Alarm Notification

The device will push notifications when fire alarm is triggered or a user presses the fire alarm key on the keypad.

Panel Management Notification

The device will push notifications when the user operate the control panel.

Control Panel System Status Notification

The device will push notifications when the control panel system status is changed.

Detector Status Notification

The device will push notifications when any detector status is changed.

Device Status Notification

The device will push notifications when any device status is changed.

Smart Alarm Event

The device will push notifications when alarm is triggered in Thermal cameras.

- 3) Set Mobile Phone Index, SIM Card No. And enable **Notification Type** (SMS or Phone call).

The screenshot displays the Hikvision web interface for configuring mobile phone notifications. The left sidebar shows the navigation menu with 'Event Communications' highlighted. The main content area is titled 'Mobile Phone' and includes the following settings:

- Mobile Phone Index:** 1
- Mobile Phone Number:** 15757165645
- Voice Call:**
- SMS:**
- Alarms and Tamper:**
- Life Safety Alarms:**
- Maintenance and Faults:**
- Panel Management Not...:**

The 'Permission Settings' section at the bottom shows 'Active Functions' with 'Partition1' and 'Partition2' checked.

Title:	How to Configure SMS to Mobile Phone	Version:	v1.1	Date:	03/23/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	3 of 3

3. SMS Remote Control Command:

“Command + Operate type + Operate Object”

Command: 00—Disarm, 01—Away arming, 02—Stay arming, 03—Clear alarm


Operate type: 1—Partition operate

Operate Object: 0—All Partition, 1—Partition 1, 2—Partition 2, 3—Partition 3, 4—Partition 4

Example: 02+1+0 means All Partition Stay arming


Note:

If customer forget command, they you can “**help**” to Panel, Panel will reply the control command.

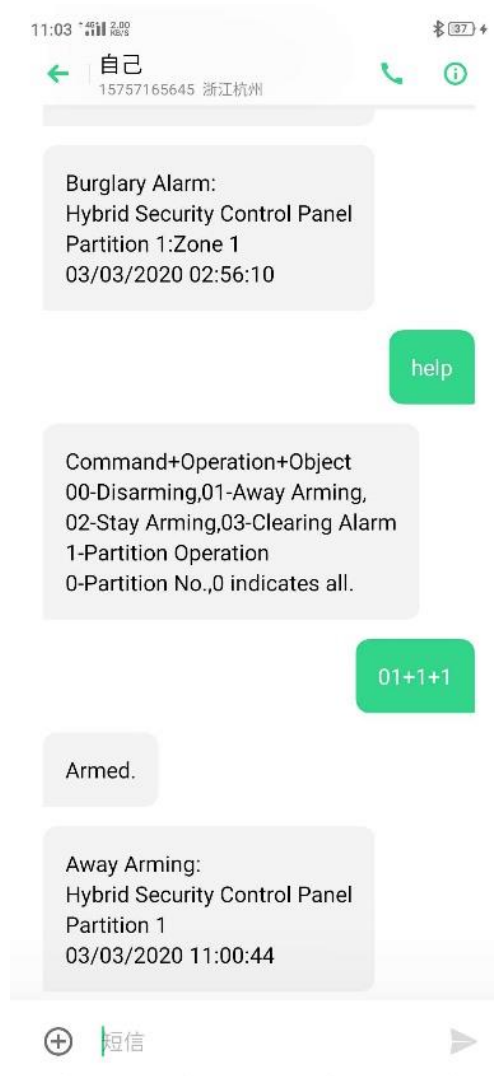

Title:	How to Configure SMS to Mobile Phone	Version:	v1.1	Date:	03/23/2020
Product:	DS-PHA Series Hybrid Security Control Panel			Page:	4 of 3

4. Result Show SMS:

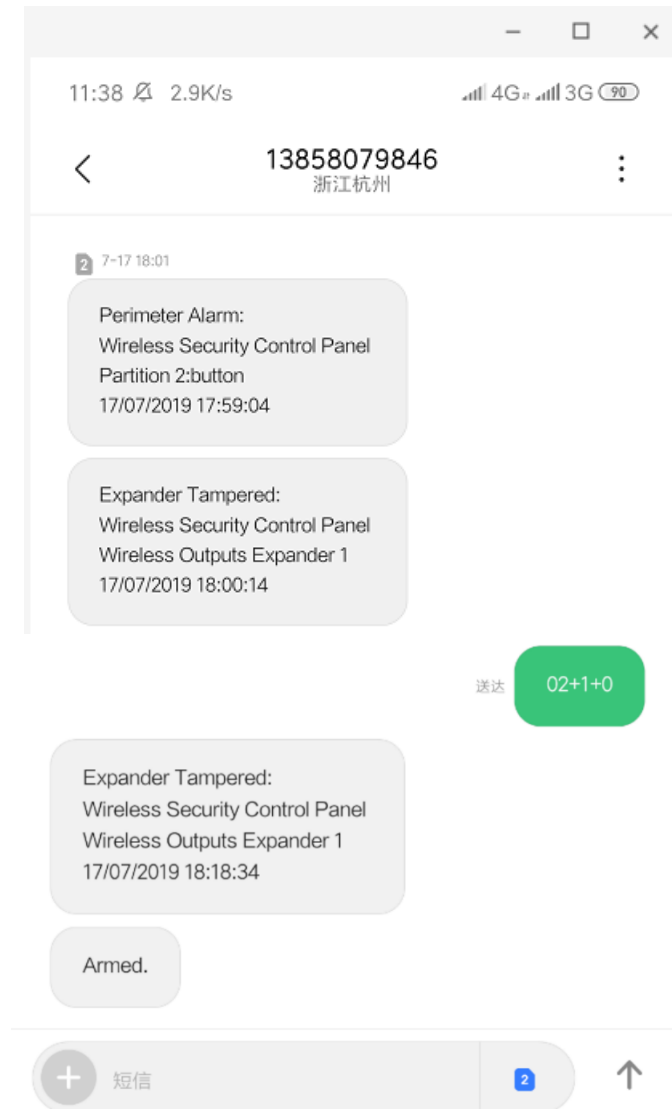

First Choice for Security Professionals
HIKVISION Technical Support