



## **How To Use Manual Alarm Out Function of NVR**

## Preparation

NVR: DS-9664NI-I8 V4.40.016 build 200803

Camera: DS-2CD2T86G2-ISU/SL V5.5.150 build 200927


NVR&DVR support to trigger alarm out manually.

# How To Use Manual Alarm Out Function of NVR


## 1. Introduction

There are two kinds of alarm out in NVR.

Alarm Output No. A->1, they are NVR local alarm output, as shown below.

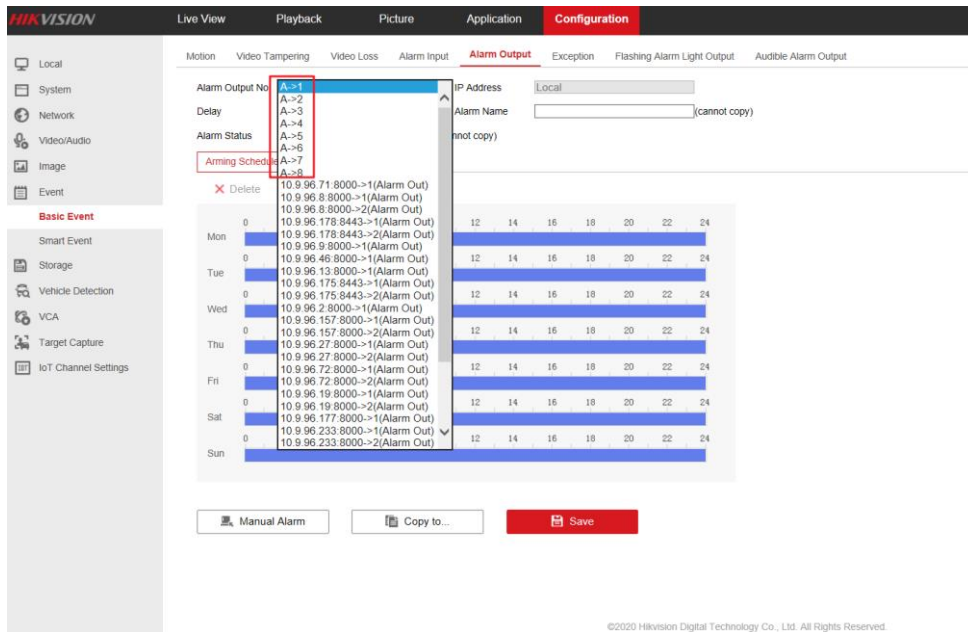

Alarm Output No. IP->1(Alarm Output), these alarm out are attached to cameras.

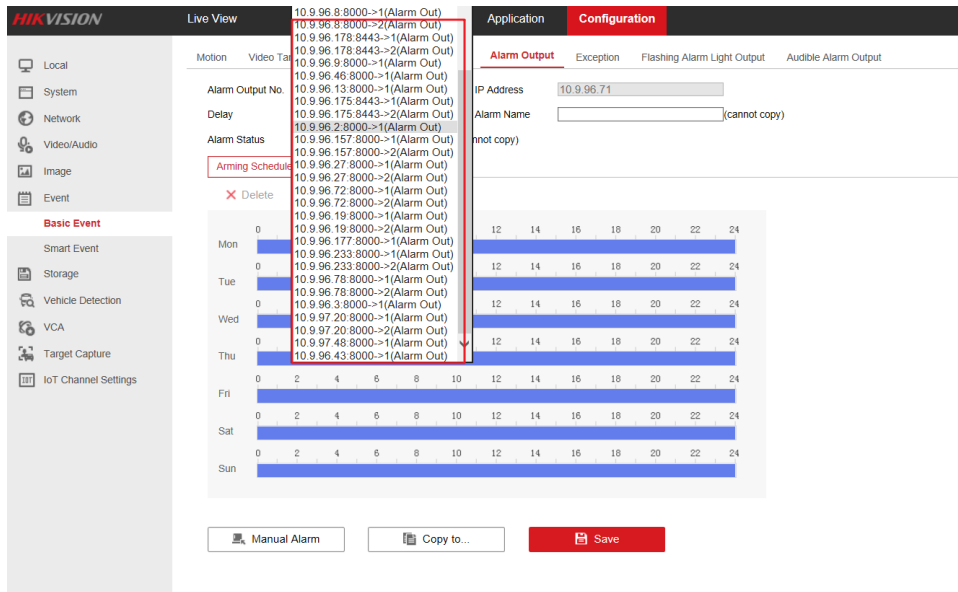

## 2. Operation

- 1) Enter Configuration-Event-Alarm Output
- 2) Select Alarm Output No.

The screenshot shows the 'Configuration' menu with 'Alarm Output' selected. The 'Alarm Output No.' dropdown is open, showing options from A->1 to A->8. The 'Arming Schedule' section shows a weekly schedule with blue bars indicating alarm periods. The 'Manual Alarm' button is highlighted.

- 3) Configure Delay time

You can set alarm delay time from 5s to 10 minutes, if you set delay time as Manual, then alarm will be clear after you click Clear Alarm icon.

The screenshot shows the 'Configuration' menu with 'Alarm Output' selected. The 'Delay' dropdown is open, showing options from 5s to 10minute(s). The 'Manual' option is selected. The 'Arming Schedule' section shows a weekly schedule with blue bars indicating alarm periods. The 'Manual Alarm' button is highlighted.

- 4) Click Manual Alarm icon  
Then alarm out will be triggered

The screenshot shows the Hikvision NVR Configuration interface. The 'Configuration' tab is active, and the 'Alarm Output' sub-tab is selected. The 'Alarm Output No.' is set to '10.9.96.71:8000->1(Alarm Ou)', 'Delay' is '5s', and 'Alarm Status' is 'OFF'. Below the settings is an 'Arming Schedule' section with a calendar grid for days of the week (Mon-Sun) and hours (0-24). At the bottom, the 'Manual Alarm' button is highlighted with a red box, along with 'Copy to...' and 'Save' buttons.

- 5) Click Clear Alarm icon  
Then alarm will be stopped.


The screenshot shows the Hikvision NVR Configuration interface. The 'Configuration' tab is active, and the 'Alarm Output' sub-tab is selected. The 'Alarm Output No.' is set to 'A->1', 'Delay' is 'Manual', and 'Alarm Status' is 'ON'. Below the settings is an 'Arming Schedule' section with a calendar grid for days of the week (Mon-Sun) and hours (0-24). At the bottom, the 'Clear Alarm' button is highlighted with a red box, along with 'Copy to...' and 'Save' buttons.

- 6)

<b>Title:</b>	How To Use Manual Alarm Out Function of NVR	<b>Version:</b>	v1.0	<b>Date:</b>	10/31/2020
<b>Product:</b>	NVR			<b>Page:</b>	4 of 5

## Operation on Hic-Connect

You can also trigger alarm out manually by click the icon below. After click this icon, it will show all alarm out that you can trigger.

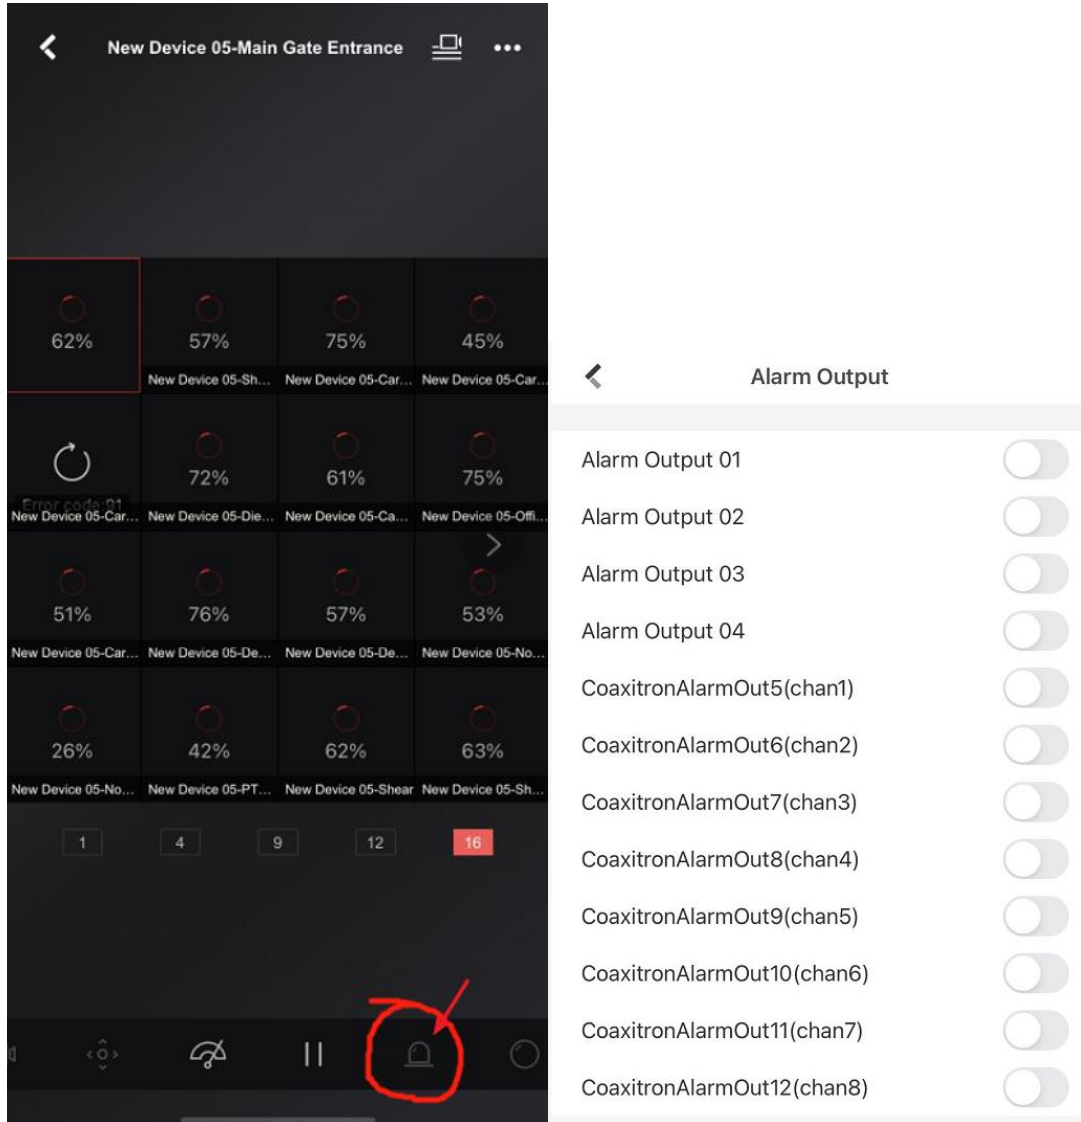

<b>Title:</b>	How To Use Manual Alarm Out Function of NVR	<b>Version:</b>	v1.0	<b>Date:</b>	10/31/2020
<b>Product:</b>	NVR			<b>Page:</b>	5 of 5

修订人	修订版本	修订日期
陆翔	V1.0	2020/10/31

<b>Title:</b>	How To Use Manual Alarm Out Function of NVR	<b>Version:</b>	v1.0	<b>Date:</b>	10/31/2020
<b>Product:</b>	NVR			<b>Page:</b>	6 of 5

