

How to Close Heater Of Analog PTZ Camera

Steps:

1. Enter the main menu, go to DOME SETTINGS → SYSTEM INFO SETTINGS, and You can set the HEAT CONTROL as TEMP (controlled by the temperature), ON or OFF.

SYSTEM INFO SETTINGS	
SOFT ADDRESS	1
SOFT ADDR ACT	OFF
SOFT BAUD	2400
SOFT BAUD ACT	OFF
BROADCAST ADDR	ON
PELCO CHECKSUM	ON
SYSTEM TIME	
BACK	EXIT

SYSTEM INFO SETTINGS	
ZERO ANGLE	
<DISPLAY SETTINGS>	
HEAT CONTROL	TEMP
FAN CONTROL	TEMP
EIS FUNCTION	OFF
EIS LEVEL	I N/A
PRESET FOCUS	OFF
BACK	EXIT

SYSTEM INFO SETTINGS	
PROTOCOL STATUS	OFF
PROTOCOL	AUTO MATCH
485 CHECK	AUTO
POWER MEMORY	180S
COAXITION ACTIVE	ON
PROTOCOL-C	HIK-C
BACK	EXIT

First Choice for Security Professionals
***HIKVISION* Technical Support**