



**How to Control Strobe Light and Audible Warning
on Hik-Connect**

Title:	How to Control Strobe Light and Audible Warning on Hik-Connect	Version:	V1.0	Date:	07/15/2022
Product:	IPC			Page:	1 of 5

Introduction

For a camera with strobe light and audible warning, whether it is directly added to Hik-Connect or is connected via an NVR, you can one key control the strobe light and audible warning linkage on Hik-Connect app.

How to Control Strobe Light and Audible Warning on Hik-Connect

1. Connect via an NVR


1.1 Connect topology:



1.2 Step:


1) Set Parameters of Light and Sound on NVR

Login NVR web page, go to Configuration > Event > Basic Event > Flashing Alarm Light Output Settings to set Flashing Duration and Flashing Frequency.

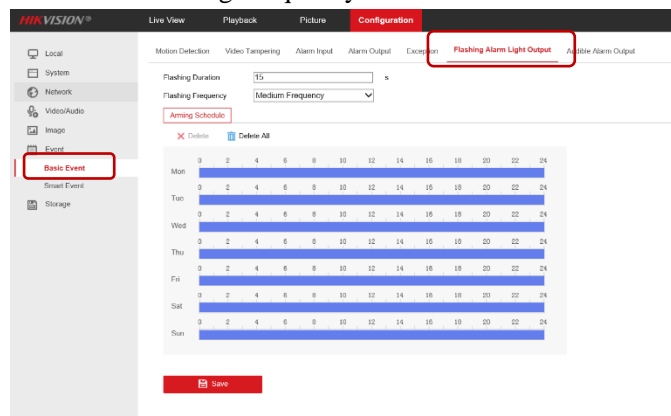


Go to Configuration > Event > Basic Event > Audible Alarm Light Output Settings to set Sound Type and Alarm times.

Title:	How to Control Strobe Light and Audible Warning on Hik-Connect	Version:	V1.0	Date:	07/15/2022
Product:	IPC			Page:	2 of 5

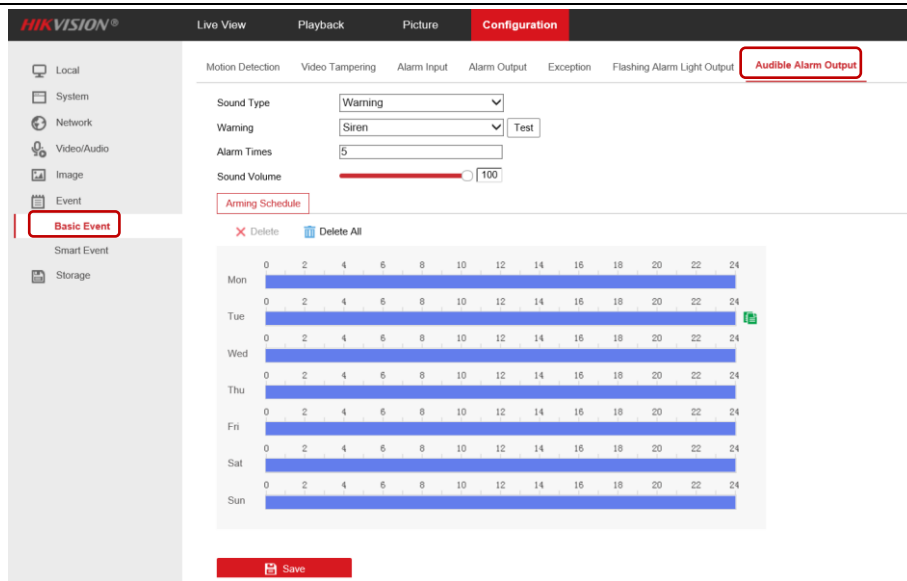

- Configure smart event and linkage on NVR.
On Linkage Action page, tick the Notify Surveillance Center checkbox.
Tick Audio and Light Alarm Linkage checkbox.

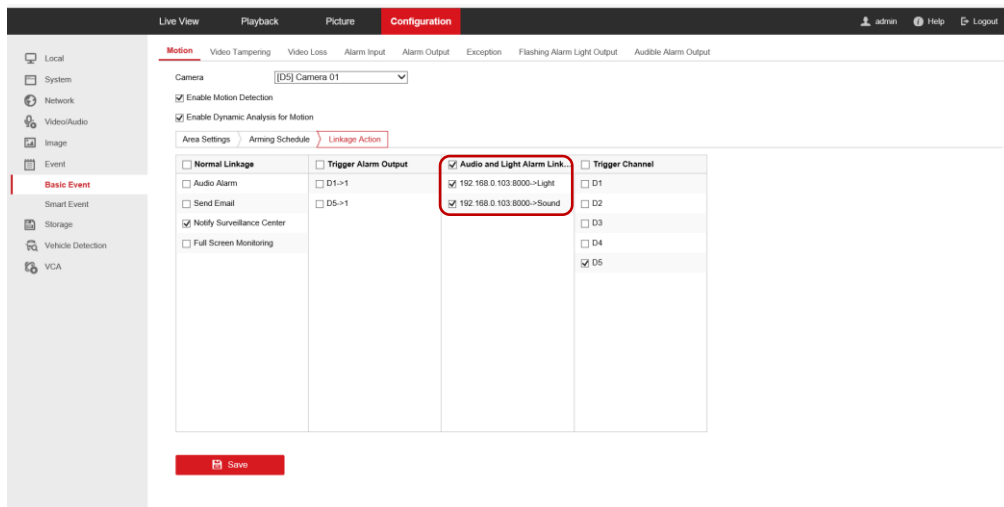

Note: In this application, keep camera in default settings, do not configure Audio and Light Alarm on IP camera.

Title:	How to Control Strobe Light and Audible Warning on Hik-Connect	Version:	V1.0	Date:	07/15/2022
Product:	IPC			Page:	3 of 5

2. Connect Camera to Hik-Connect directly

2.1 Connect topology:



2.2 Step:


- 1) Set Parameters of Light and Sound on IPC

Login IPC web page, go to Configuration > Event > Basic Event > Flashing Alarm Light Output Settings to set Flashing Duration and Flashing Frequency.

The screenshot shows the Hik-Connect web interface. The left sidebar has 'Basic Event' highlighted. The main content area is titled 'Flashing Alarm Light Output'. It includes fields for 'Flashing Duration' (30 s) and 'Flashing Frequency' (Medium Frequency). Below these are 'Arming Schedule' options and a calendar grid for setting alarm times for each day of the week. A 'Save' button is at the bottom.

Go to Configuration > Event > Basic Event > Audible Alarm Light Output Settings to set Sound Type and Alarm times.


Title:	How to Control Strobe Light and Audible Warning on Hik-Connect	Version:	V1.0	Date:	07/15/2022
Product:	IPC			Page:	4 of 5

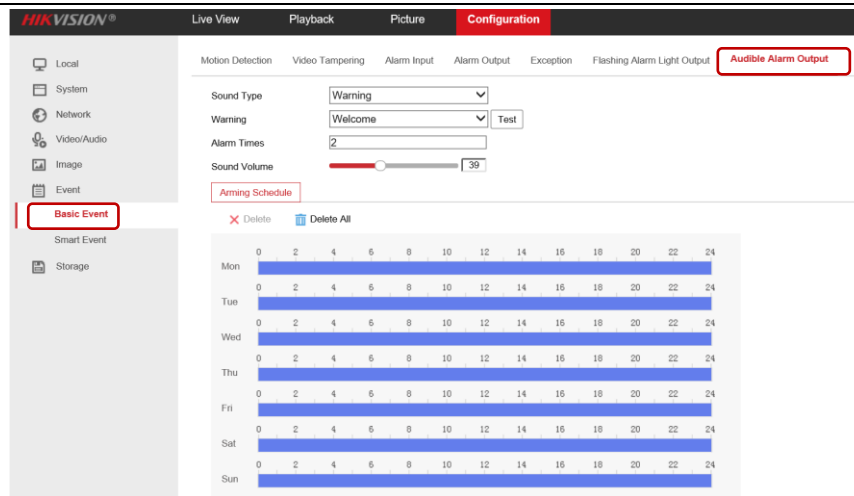


2) Configure smart event and linkage on IPC.

On Event Linkage Action page, tick the Notify Surveillance Center checkbox.

Tick Flashing Alarm and Audible Warning Linkage checkbox.

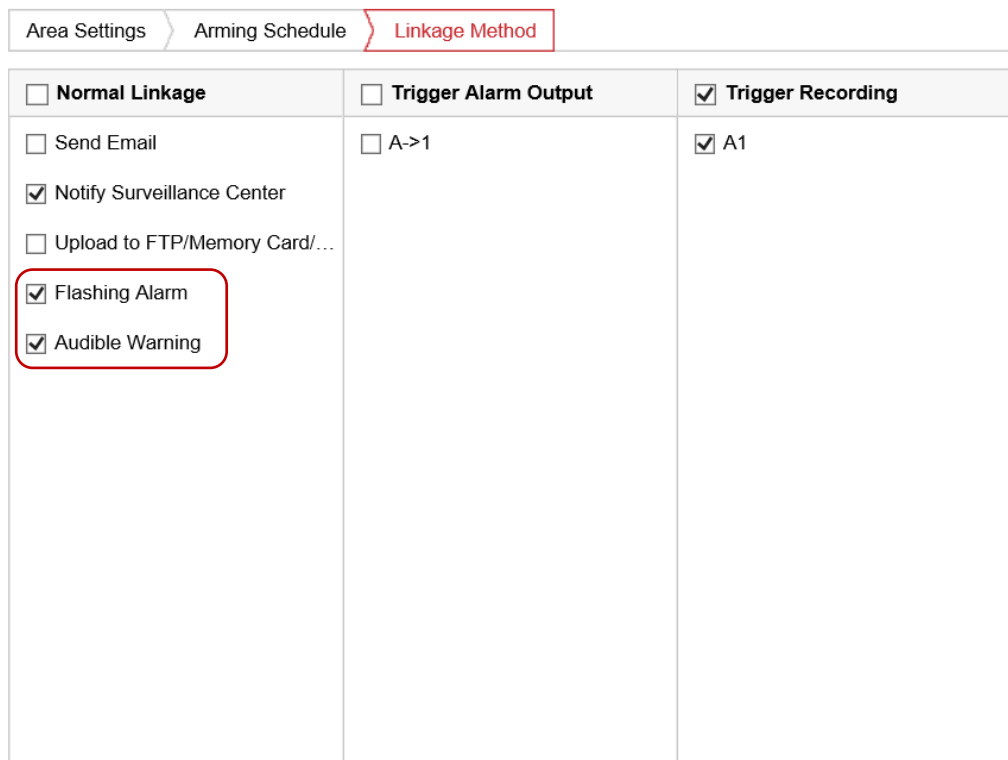




3. Control strobe light and audible warning linkage on Hik-Connect app.

1.1 Tapping  icon to control strobe light and audible warning linkage on Hik-Connect app.

Hik-connect will NOT prompt alarm notifications and alarm light & sound will not be triggered when One key does not disturb function is enabled.

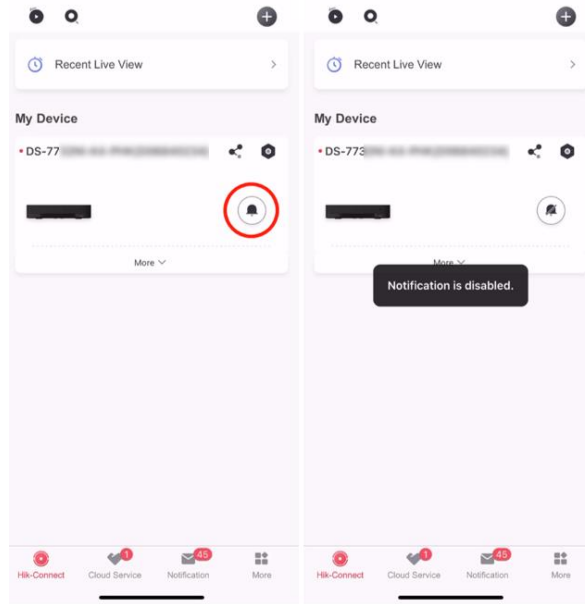Title:	How to Control Strobe Light and Audible Warning on Hik-Connect	Version:	V1.0	Date:	07/15/2022
Product:	IPC			Page:	5 of 5



4. On the live view page of the camera, you can tap  to turn on/off strobe light or tap  to turn on/off audible warning manually.

