

<b>Title:</b>	How to add IPSAN to NVR	<b>Version:</b>	v1.0	<b>Date:</b>	4/2/2019
<b>Product:</b>	NVR			<b>Page:</b>	1

## How to add IPSAN to NVR

### Description

NVR which supports NFS/iSCSI protocol can add up to 8 \* 8T Net HDD including IPSAN or NAS.

**Note:** This function can be configured in website and local GUI.

### Preparation

NVR, Computer, Network cable, Net HDD

#### 1) In the web of NVR.

*Steps:*


1. Enter **Configuration** interface and **Storage Management—Net HDD**
2. Click ‘**Search**’ button, and choose ‘**IP SAN**’. Then enter the IP address, click ‘**Search**’ and choose the ‘**File Path**’. Click ‘**OK**’ button, and finish to add.

The screenshot shows the Hikvision NVR web interface. The top navigation bar includes 'Live View', 'Playback', 'Picture', and 'Configuration' (which is highlighted). The user is logged in as 'admin'. The left sidebar shows various settings categories, with 'Storage Management' highlighted. The main content area displays the 'Net HDD' configuration page. At the top of this page, there are tabs for 'HDD Management', 'Net HDD' (which is selected), and 'HDD Detection'. A 'Search' button is highlighted in the top right corner of the table area. The table has the following structure:


HDD No.	Server Address	File Path	Type	Delete
1			NAS	X
2			NAS	X
3			NAS	X
4			NAS	X
5			NAS	X
6			NAS	X
7			NAS	X
8			NAS	X

At the bottom of the page, there is a 'Save' button.

<b>Title:</b>	How to add IPSAN to NVR	<b>Version:</b>	v1.0	<b>Date:</b>	4/2/2019
<b>Product:</b>	NVR			<b>Page:</b>	2


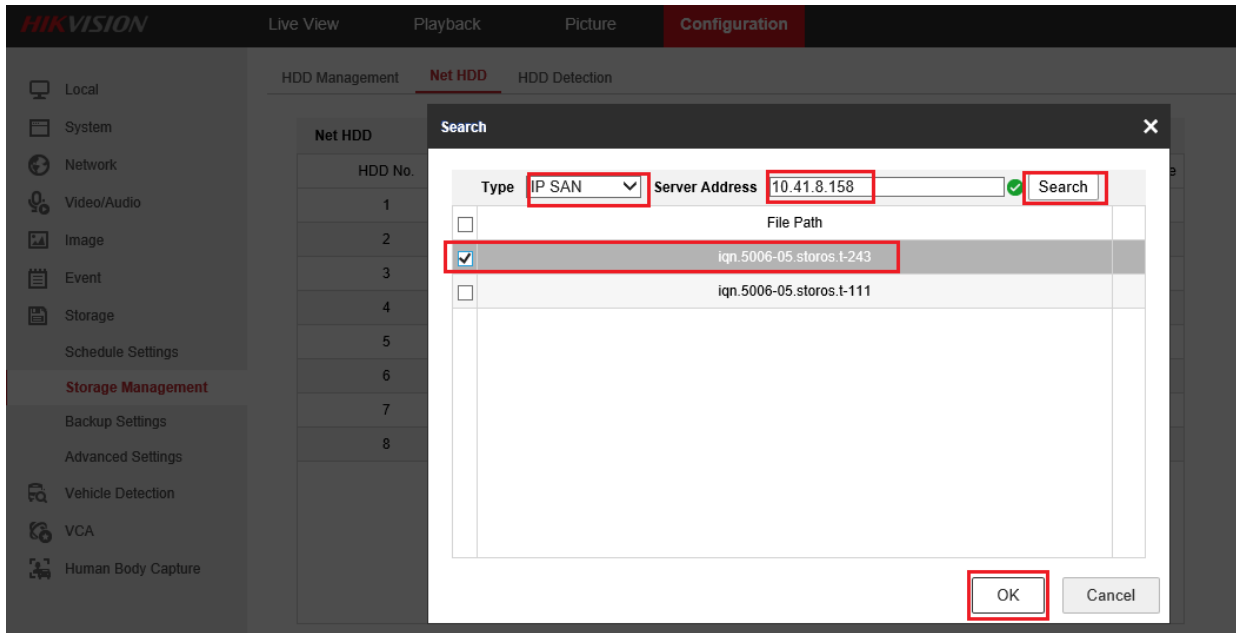


3. Click IPSAN, and then click 'Format' to initialize HDD.

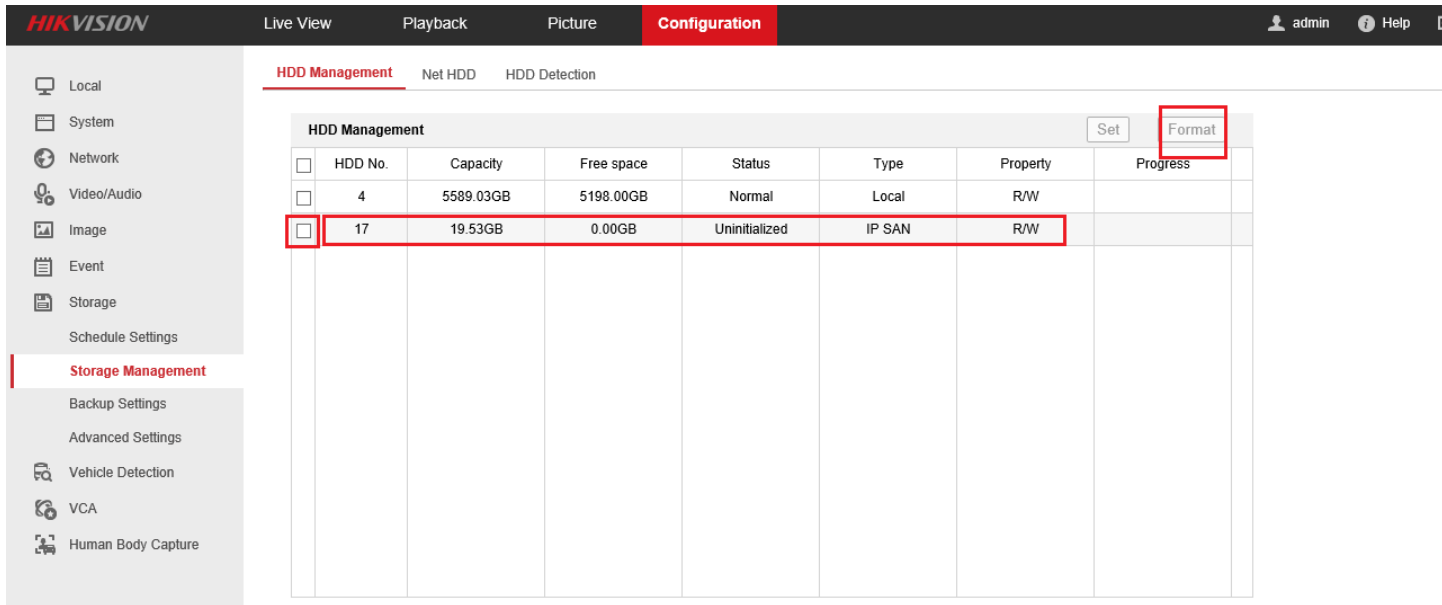

4. Finish initializing, the status of IPSAN will be normal, and it can be used normally.

<b>Title:</b>	How to add IPSAN to NVR	<b>Version:</b>	v1.0	<b>Date:</b>	4/2/2019
<b>Product:</b>	NVR	<b>Page:</b>	3		

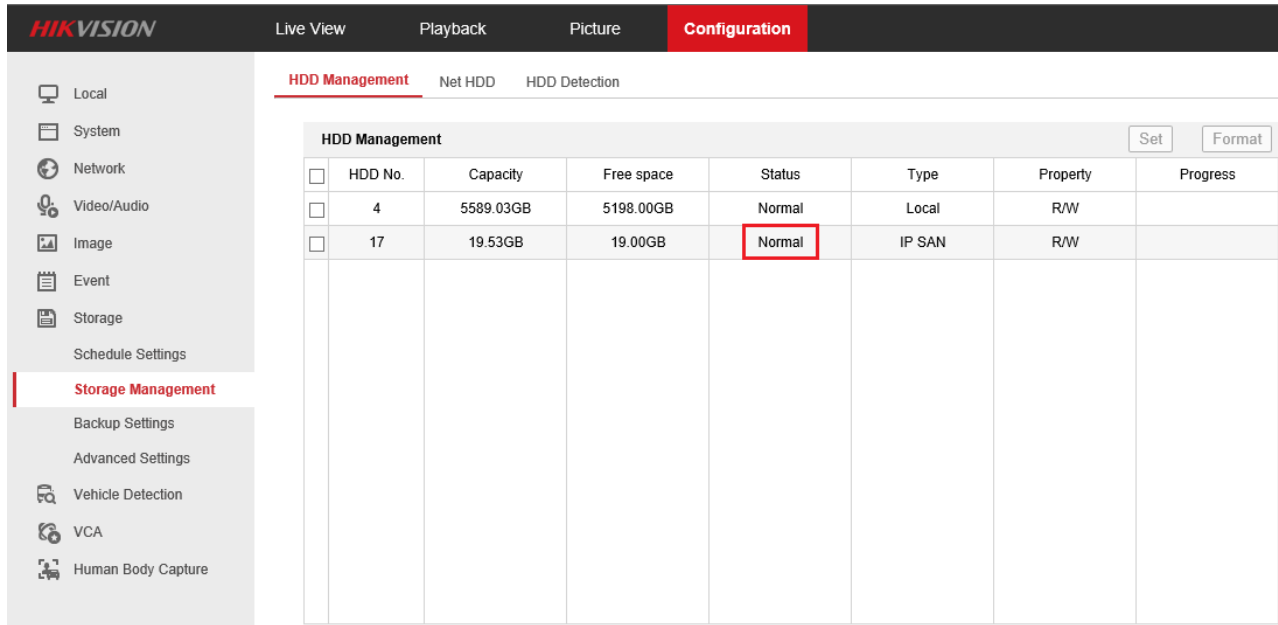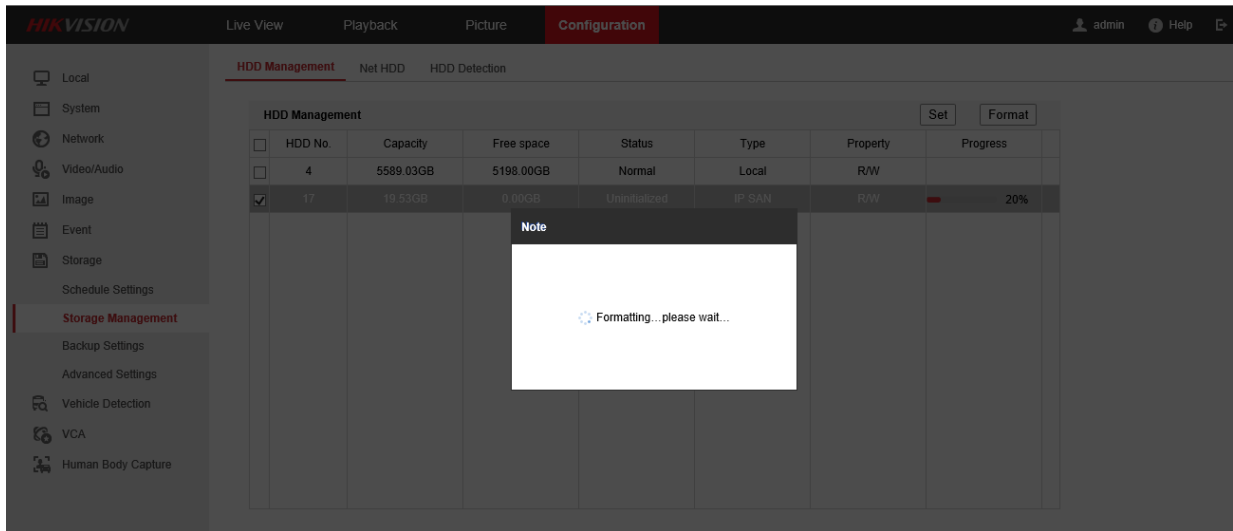

**First Choice for Security Professionals**

**HIKVISION Technical Support**