

How to Capture Pictures and Upload to FTP

Title:	How to Capture Pictures and Upload to FTP	Version:	v1.0	Date:	09/28/2020
Product:	Cameras	Page:	1 of 5		

How to Capture Pictures and Upload to FTP

1. Download a FTP server and create a user. The FTP server can be chosen

as you like, we take Xlight FTP for example

1) Download a FTP server, click add button, input the IP address of your PC



2) Click User list and Edit Button, create a user, specify the user path and the permission

Title:	How to Capture Pictures and Upload to FTP	Version:	v1.0	Date:	09/28/2020
Product:	Cameras	Page:	2 of 5		

ID 16.113.24 21 Running 1 0.000 KB 1.021 GB 2 ID 16.113.24/21 - User List Image: Password Account Image: Password Account Image: Password Passwor	P 10.16.113.24 21 Running 1 0.000 KB 1.021 GB 2 Image: Second Se	erver IP	Port	Status	Online Users	Downloaded	Uploaded	Total Logi	ns Note	
Image: service	Image: series of the series	10.16.113.24	21	Running	1	0.000 KB	1.021 GB	2		
Image: Basword Account Expire Time Image: admin	Image: admin Password Account Image: admin Account Options Session User Path Disk Space Quotas Session User Path Disk Space Quotas Session User Path Cogin Control Permission Musil Path Permission Number Path Permission Number Path Permission Number Path Permission Number Path Permission Permission </td <td>10.16.113.24</td> <td>k:21 - Us</td> <td>er List</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>	10.16.113.24	k:21 - Us	er List						
admin enabled never expire Image: Second	Image: Solution of the second seco	Usemame		Password	Account	Expire Time	Groupname	2	- F	
Non- Image: Second	Keel Account Options Session User Path Disk Space Quotas © Enable disk space quotas Setup Moual Path Permission Moual Path Real Path Permission Moual Path Permission Moual Path Permission Moual Path Permission Permission	🖉 admin		enabled	never e	pire		80	17 100	
Account User Path Options Disk Space Quotas Session Image: Enable disk space quotas User Path Image: Enable disk space quotas Login Control Midual Path Permission Image: Figure Control	Account User Path Options Disk Space Quotas Session Image: Control Permission Vidual Path Real Path Permission f:\FTP\ RWCLADNS	pps t							Online Use	
Options Disk Space Quotas Session Enable disk space quotas User Path Login Control Virtual Path Permission /	Options Disk Space Quotas Session Image: Enable disk space quotas User Path Enable disk space quotas Login Control Permission Permission f:\FTP\ Real Path Permission	Account	l	Jser Path						
Session Enable disk space quotas Setup User Path Vidual Path Real Path Permission // f:\FTP\ RWCLADNS	Session Image: Enable disk space quotas Setup User Path Image: Enable disk space quotas Setup Login Control Permission Permission Permission F:\FTP\ RWCLADNS	Options		Disk Space	e Quotas					
User Path Login Control Vitual Path Real Path Permission / F:\FTP\ RWCLADNS	User Path Login Control Permission / f:\FTP\ RWCLADNS	Session		🕅 Enable	e disk space (quotas	Setup			
Permission / F.\FTP\ RWCLADNS	Permission / f:\FTP\ RWCLADNS	User Path				1.00			24. AV14	
I.VEIEV RWCLADNO		Permission		Virtual Path		Real P	ath			

×

⊕ ∠

Title:	How to Capture Pictures and Upload to FTP	Version:	v1.0	Date:	09/28/2020
Product:	Cameras	Page:	3 of 5		

Ontions	Disk Space Quotas				
Session	Enable disk sp	ace quotas	Setup		
Login Control	Virtual Path	Real F	Path	Permission	
Permission	1	f:\FTF	2	RWCLADNS	1
	Virtual Pat	h			×
	Virtual Path				
	Real Path				
	f:\FTP\		Bro	owse	
	Permission				
	Read (I	Download)	💟 List		
	Vrite (I	Jpload)	Append (Resume Upl	oad)	
	Create	directory	V Delete		
	Renam	e			
	Permiss	sion will apply to its	sub-directories		
			ОК	Cancel	

2. Configure FTP settings of the camera in [Configuration]-[Network]-[Advanced Settings]-[FTP]. The server address is the IP address of your PC, user name and password are consist with the settings in FTP server

Title:	How to Capture Pictures and Upload to FTP	Version:	v1.0	Date:	09/28/2020
Product:	Cameras	Page:	4 of 5		

HIK	VISION®	Live View	Playba	nck Pict	ture	Appli	ication	Configuration
Q	Local	SNMP FTP	Email	Platform Access	HTTPS	QoS	802.1x	Integration Protocol
	System	FTP Protocol		FTP		~		
O	Network	Server Addres	s	10.9.97.47				
	Basic Settings	Port		21				
	Advanced Settings	User Name		admin				
Q.	Video/Audio	Password		••••				
1	Image	Confirm		•••••				
圁	Event			Anonymous				
	Storage	Directory Struc	cture	Save in the root	directory	\sim		
2	Queue Management	Picture Filing I	nterval	OFF		✓ Da	ay(s)	
		Picture Name		Default		~		
				Upload Picture				
				Enable Automa	atic Network F	Replenish	iment	
				Test				
		B	Save					

3. Enable the event that you want to trigger capture, and click [Upload to FTP] in the [linkage method], click [save]. You can see the captured pictures under the user path set before.

Title:	How to Capture Pictures and Upload to FTP	Version:	v1.0	Date:	09/28/2020
Product:	Cameras	Page:	5 of 5		

HIN	VISION®	Live View	Playback	Picture	Application	Conf	iguration
₽ □ €	Local System Network	Motion Detection	Video Tampering Detection ic Analysis for Motion	Alarm Input	Alarm Output	Exception	Video Quality
¥;	Video/Audio Image Event	Area Settings	Arming Schedule	Linkage Metho Trigger Alarm A->1	od 1 Output	✓ Trigger F ✓ A1	Recording
۳ بر	Basic Event Smart Event Storage Queue Management	☑ Notify Surve	illance Center	□ A->2			

