



# How to configure alarm triggering e-mail function of HIKVISION IP camera

1 Go to **Configuration> Network>TCP/IP**, and then set the **IP address, Subnet mask and Default gateway**, especially the **Preferred DNS server**.

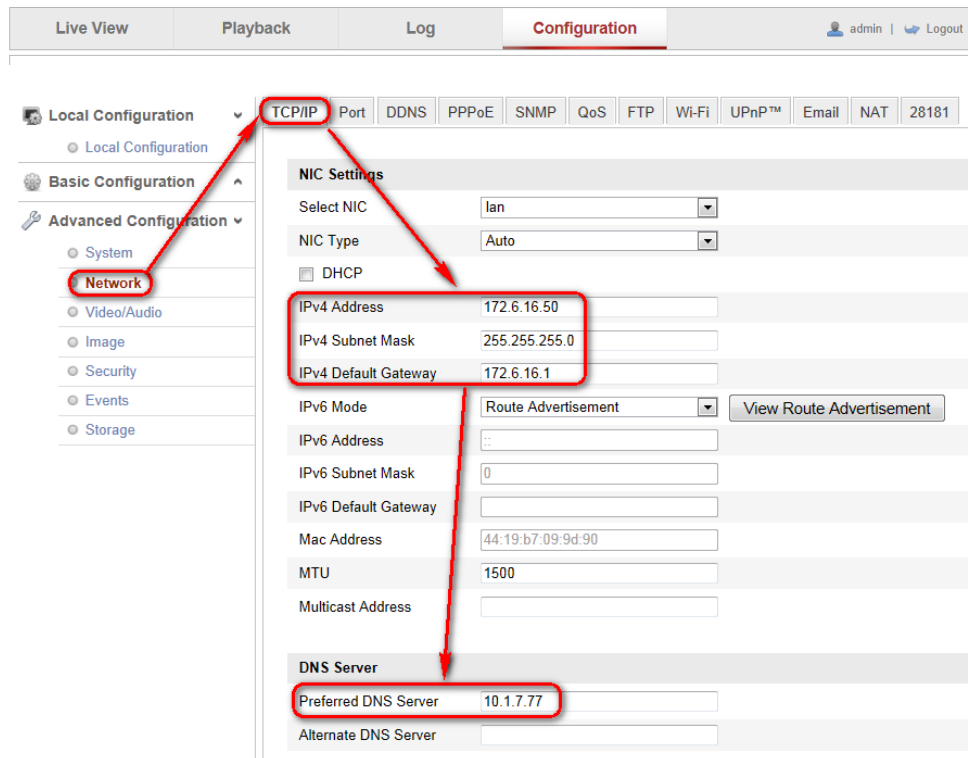

2 Go to **Email** and set the parameters of email. Enable **attached image**.

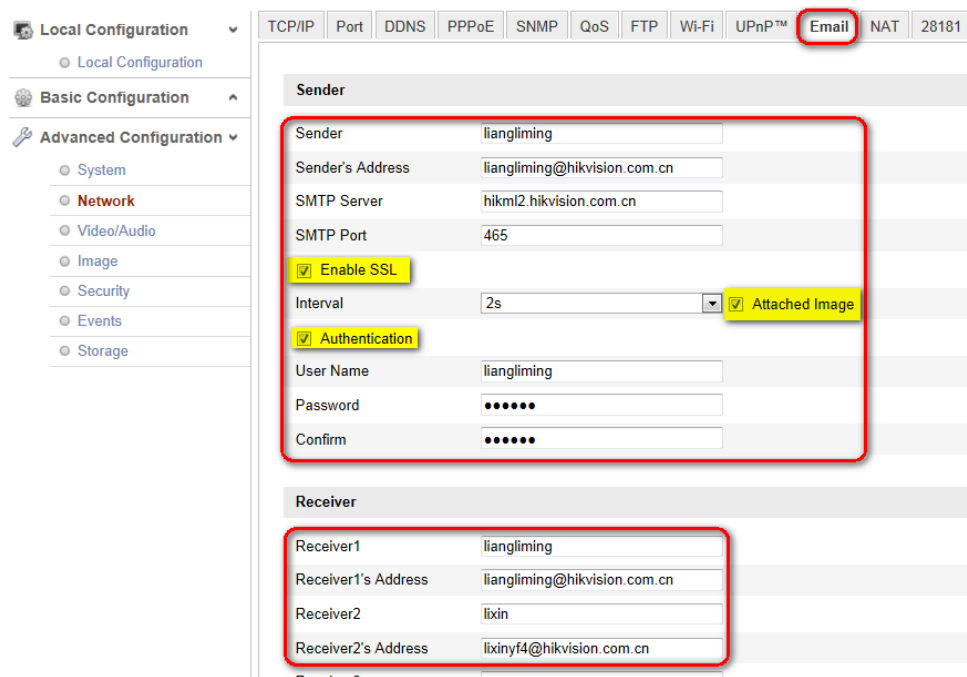

3 Go to **Events > Alarm Input > Edit**, and then select whole day and all week.

Local Configuration

- Local Configuration
- Basic Configuration
- Advanced Configuration
  - System
  - Network
  - Video/Audio
  - Image
  - Security
  - Events**
  - Storage

Motion Detection | Video Tampering | **Alarm Input** | Alarm Output | Exception | Other Alarm

Alarm Input No. A<-1

Alarm Name test1 (cannot copy)

Alarm Type NO

Arming Schedule

0 2 4 6 8 10 12 14 16 18 20 22 24

Mon  
Tue  
Wed  
Thu  
Fri  
Sat  
Sun

Edit

Edit Schedule Time

Mon | Tue | Wed | Thu | Fri | Sat | Sun

Period	Start Time	End Time
1	00:00	23:59
2	00:00	00:00
3	00:00	00:00
4	00:00	00:00
5	00:00	00:00
6	00:00	00:00
7	00:00	00:00
8	00:00	00:00

Copy to Week  Select All

Mon  Tue  Wed  Thu  Fri  Sat  Sun

Copy

OK Cancel


4 Go to **Linkage method**, and then enable **Send email** and **Trigger channel**.

The screenshot shows a configuration page for a camera. At the top, there is a calendar grid with days of the week (Fri, Sat, Sun) and a grid of blue squares representing time slots. Below this is a section titled "Linkage Method". It is divided into two columns: "Normal Linkage" and "Other Linkage". Under "Normal Linkage", there are four checkboxes: "Audible Warning", "Notify Surveillance Center", "Send Email", and "Upload to FTP". The "Send Email" and "Trigger Channel" checkboxes are checked and circled in red. Under "Other Linkage", there are two checkboxes: "Trigger Alarm Output" and "Select All", with "A->1" listed below. Below the "Linkage Method" section is a "Copy to Alarm" section with two checkboxes: "Select All" and "A<-1", with "A<-1" checked. A red arrow points from the "Trigger Channel" checkbox to a "Save" button at the bottom right of the page.

5 Connect the alarm port of the camera with alarm system.



6 When the alarm system triggers the alarm input of camera, we will receive the e-mail as followed snapshot shown.

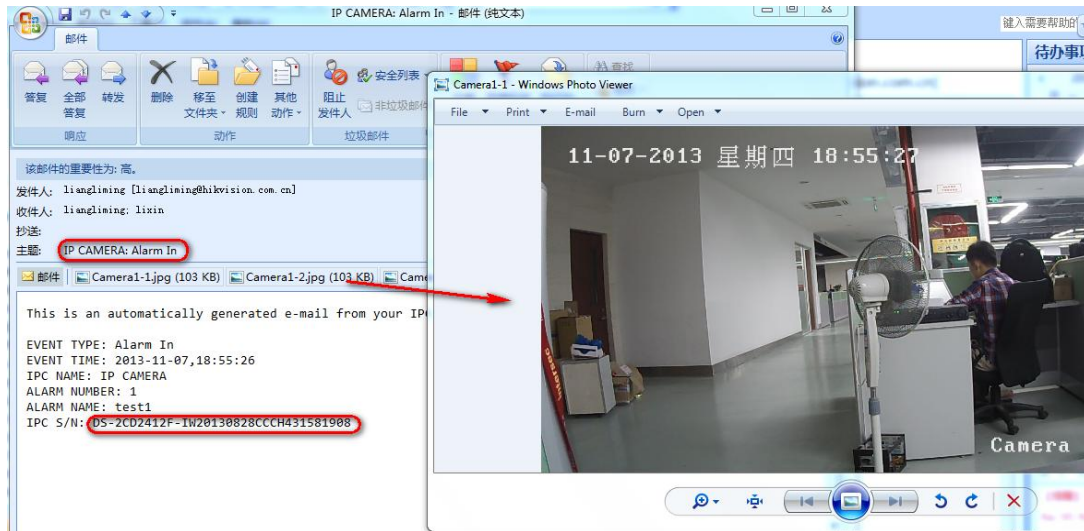

First Choice for Security Professionals  
Hikvision Technical Support