


How to Configure Face Function

This document explains how to configure face function for WEB5.0 models.


Switch to Face function on VCA resource

1. Go to VCA-> Select Application-> Face comparison

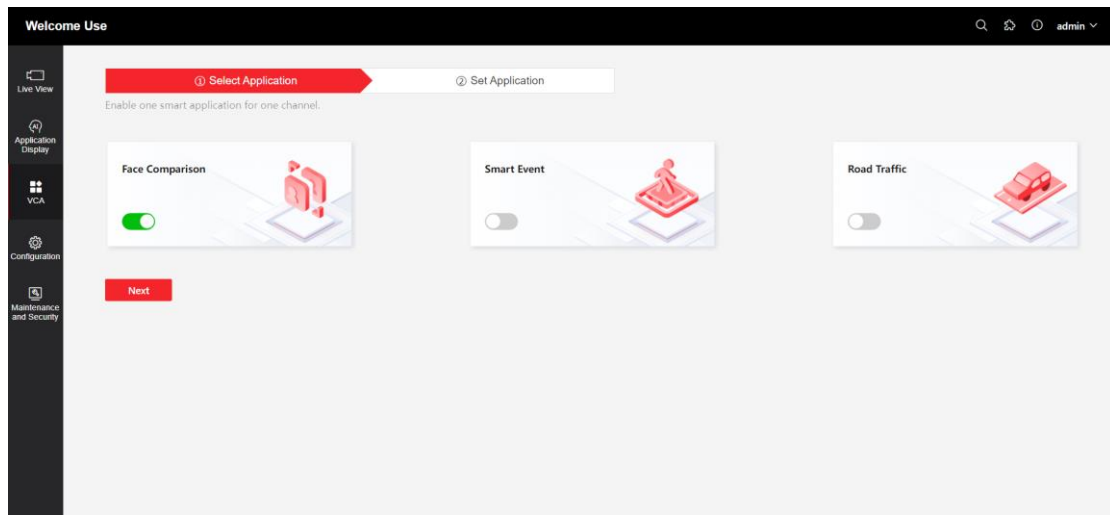


Select the VCA button you need then click NEXT

2. Auto reboot after VCA switch

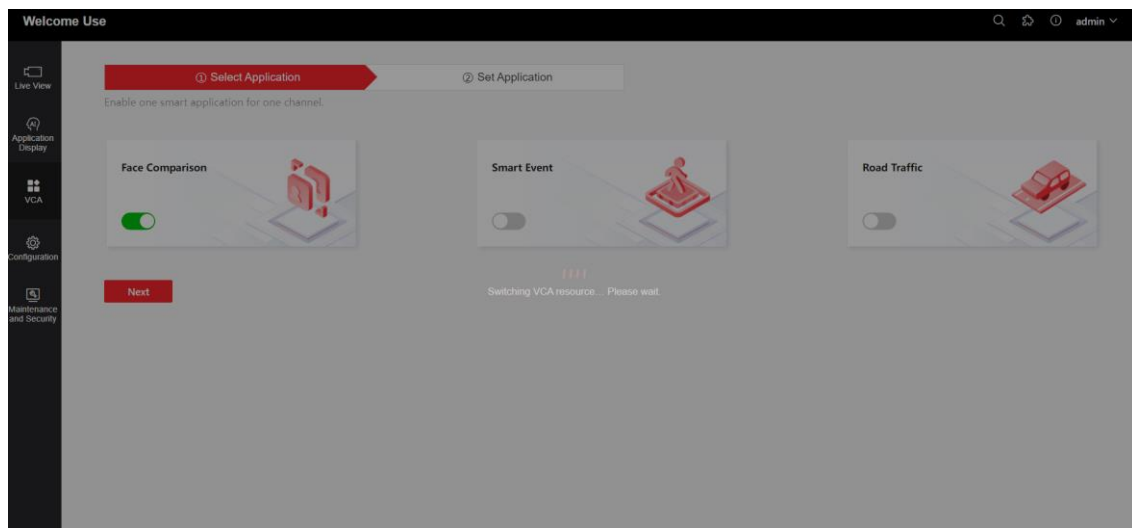


3. After the rebooting is done, we can find the setting page on VCA → Set Application

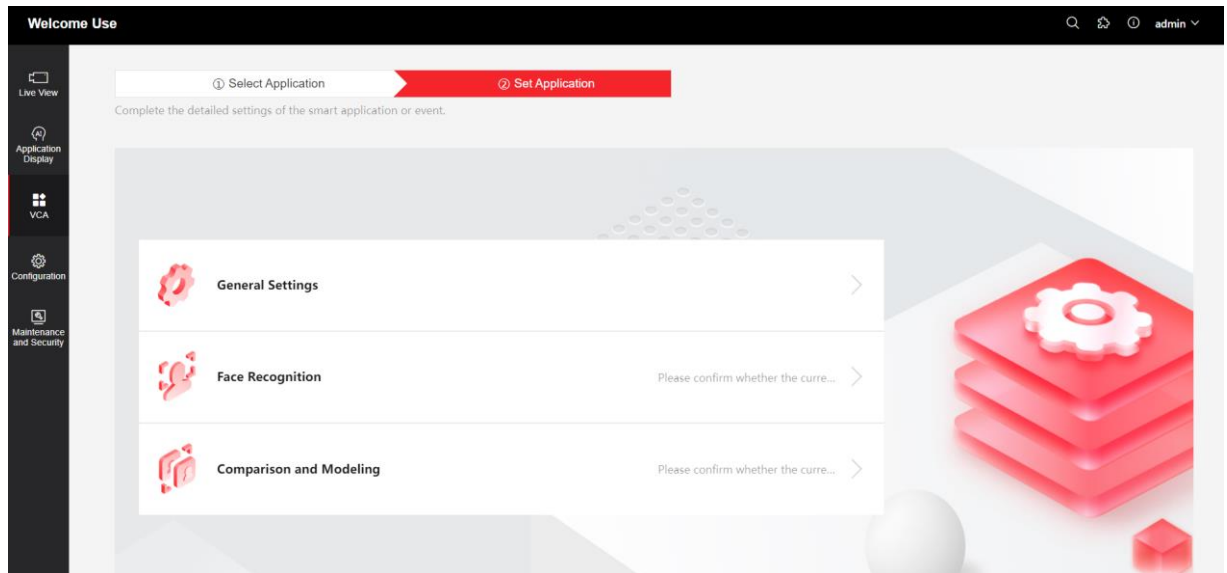


General Settings


Setting camera info

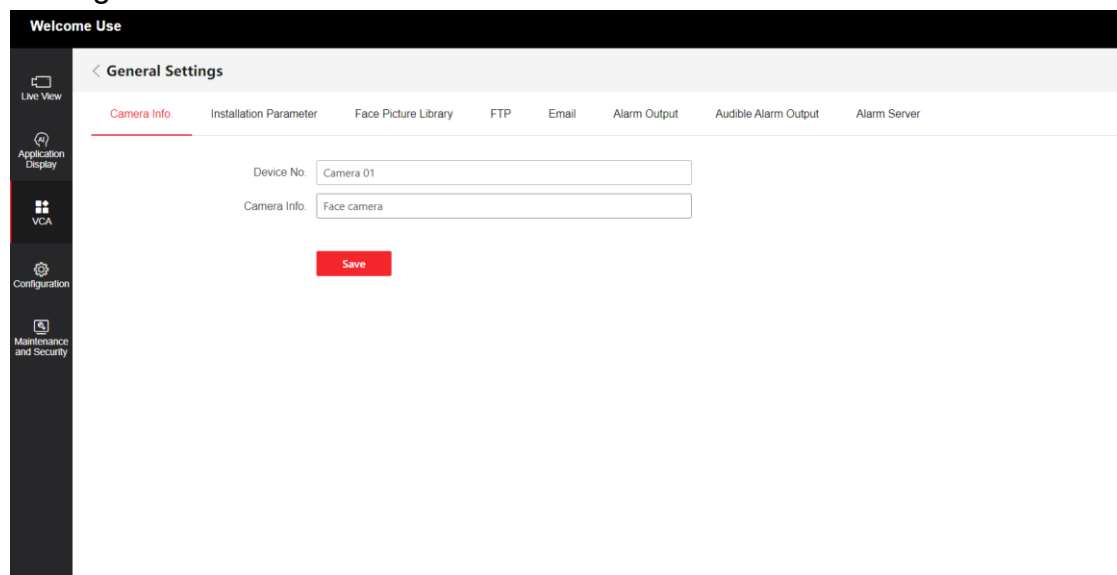


Installation Parameter (Height)

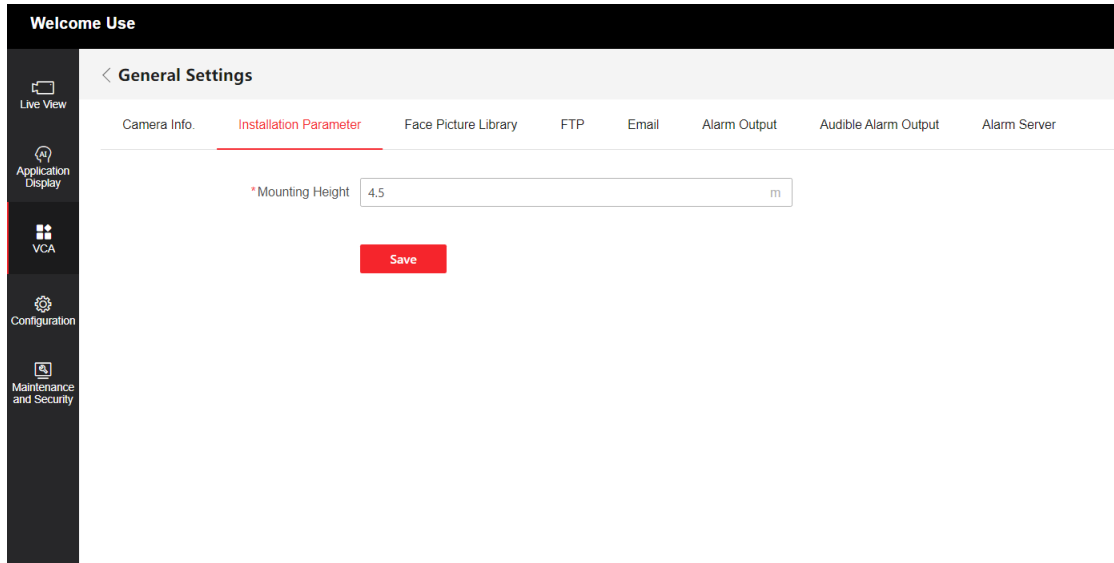

Face picture Library
Click +Add for new face picture library

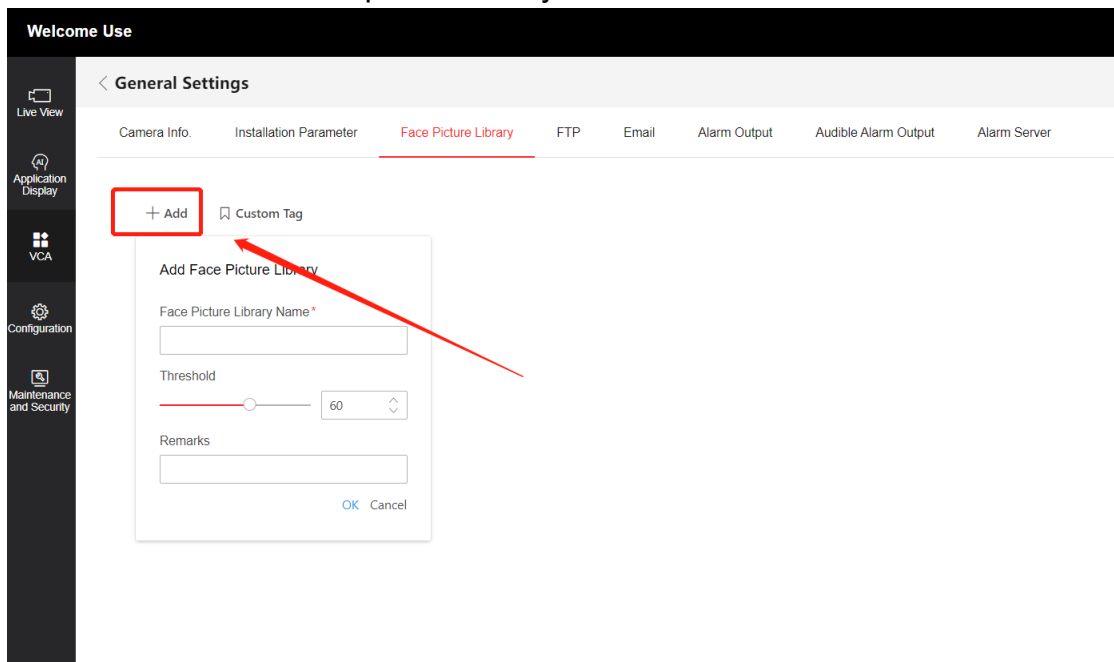


Audio Alarm Output (Need build-in speaker or external speaker)

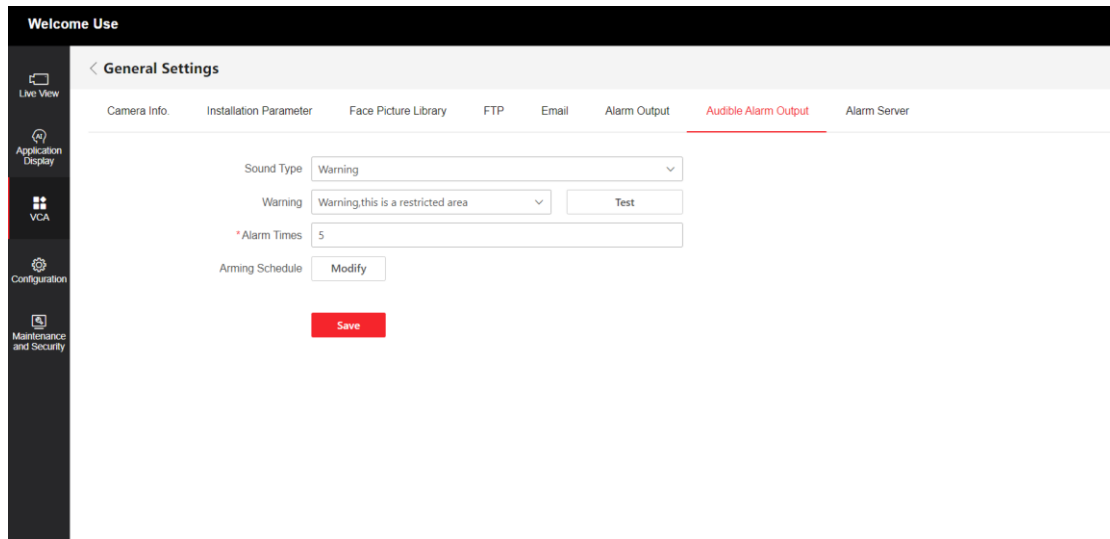


Face Recognition


1. You can set recognition rules on this page

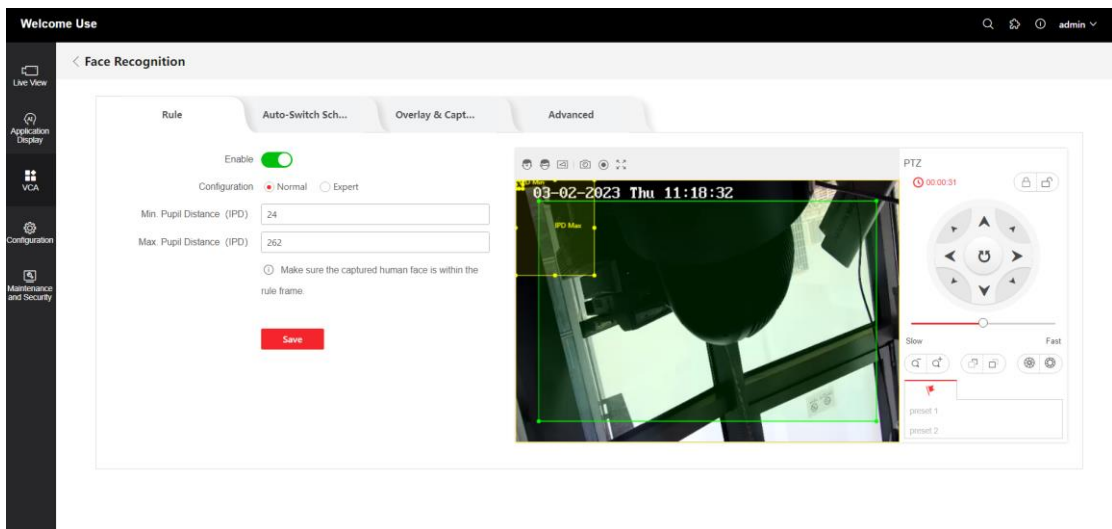

 Set the detection area


 Set min.&max. pupil distance (Set this value according to the face pixel size of the actual scene)


2. Set Schedule and Linkage

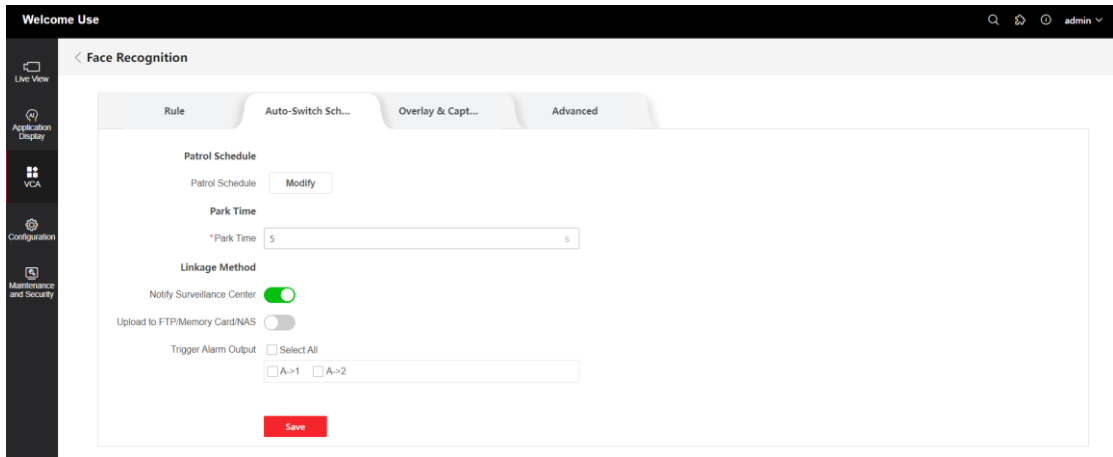

3. Set Face Capture Parameters


Face info overlay and capture details

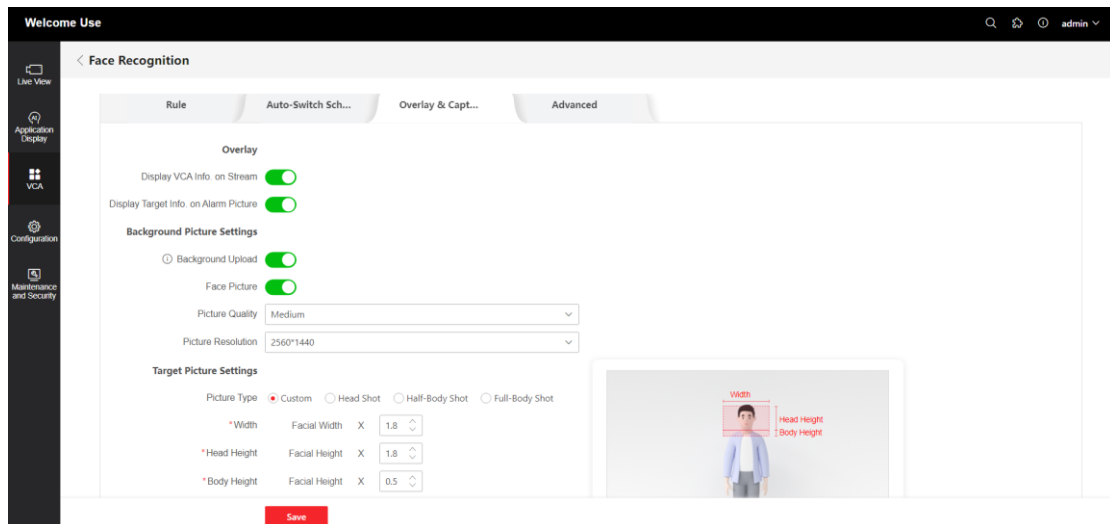

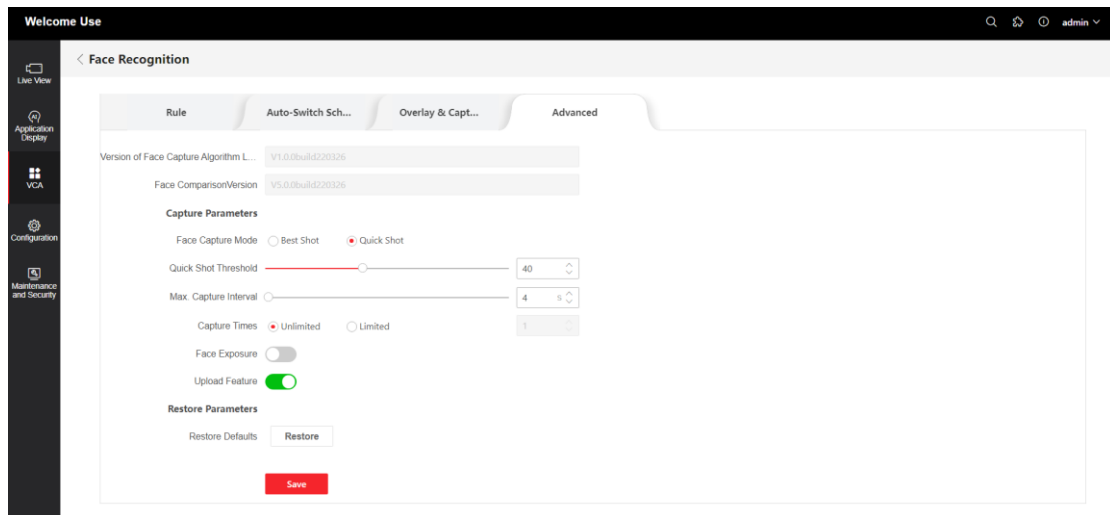

Recommended setting as picture showing

Comparison and Modeling

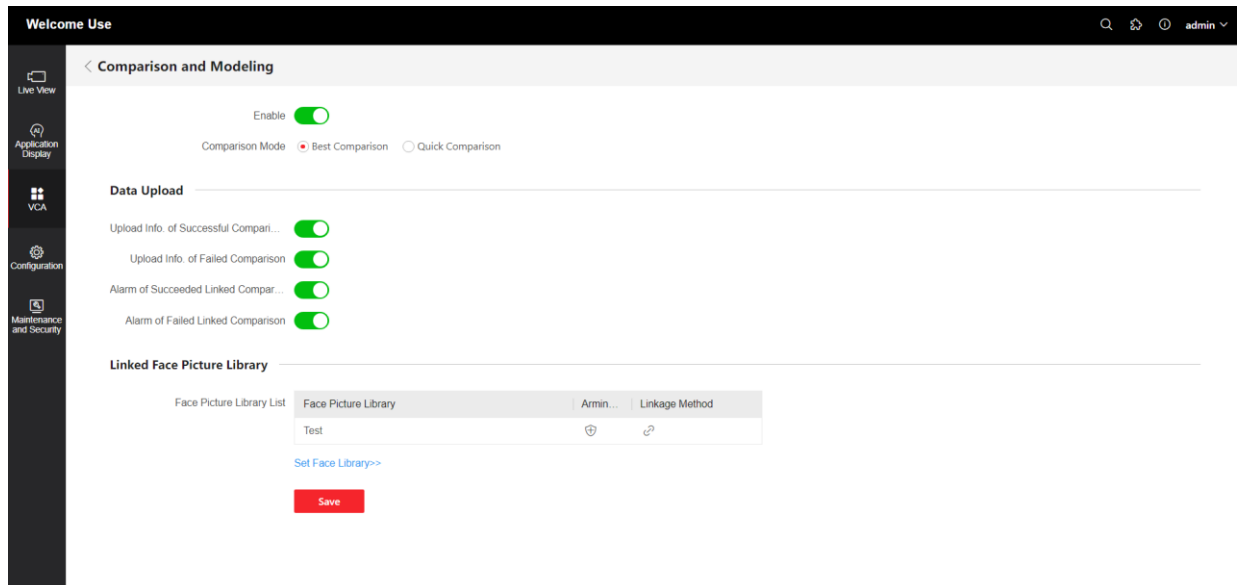

Face comparison details setting (need to set up the face library firstly)

First Choice for Security Professionals
***HIKVISION* Technical Support**