



How to configure several intrusion scenes

This guide is used to do intrusion configuration on web 5.0 page. It is usually divided into two situations within one scene and two situations within multiple scenes.


1. Select the scenes to do intrusion configuration and set preset

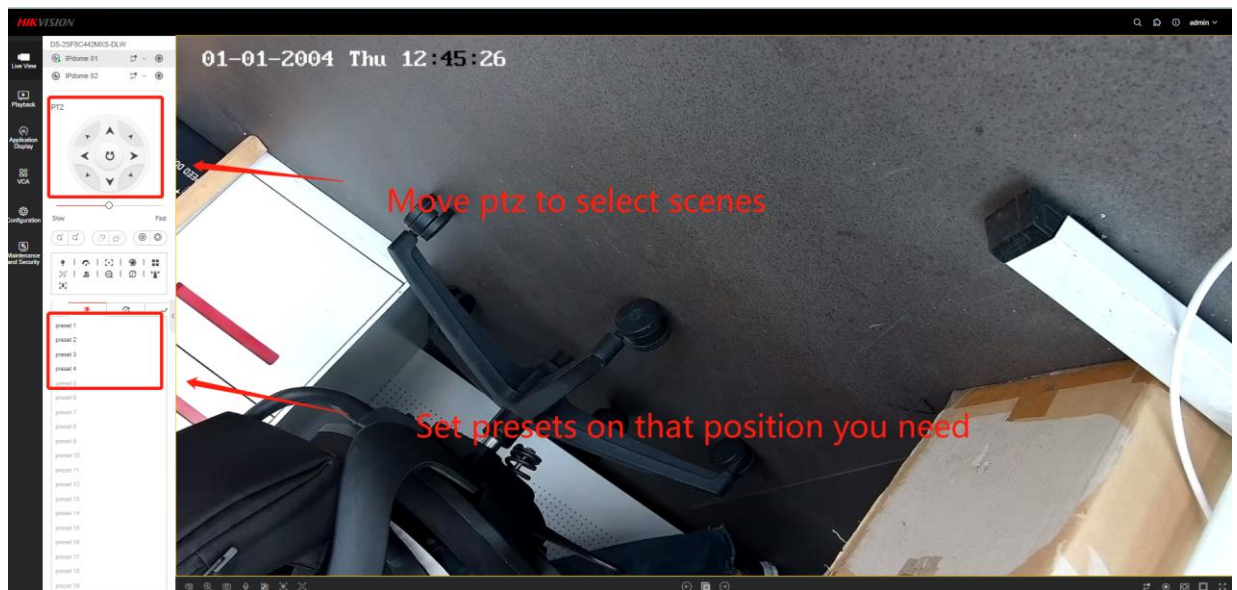

2. Switch VCA resource to Smart Event

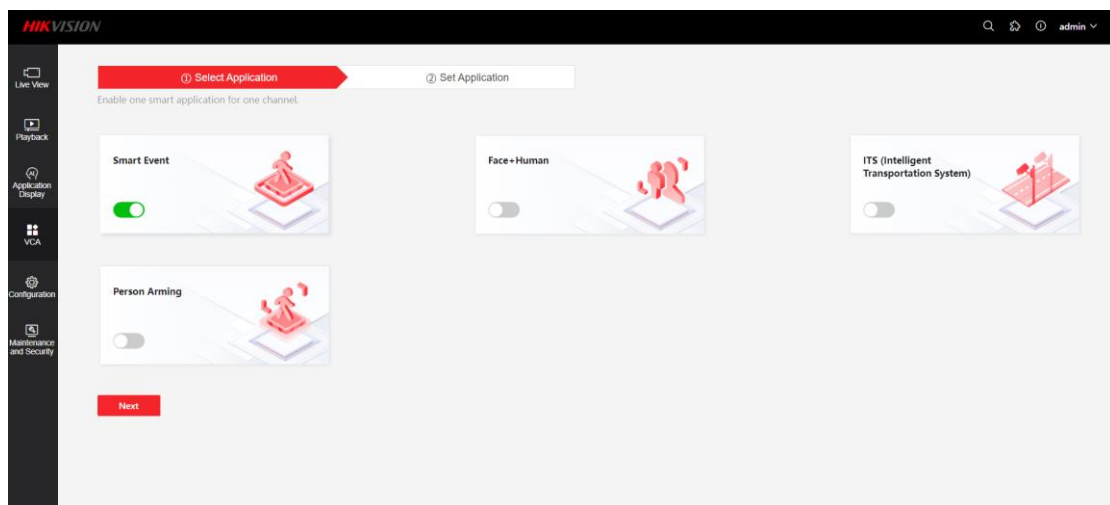

3. Click Smart Event for configuration page

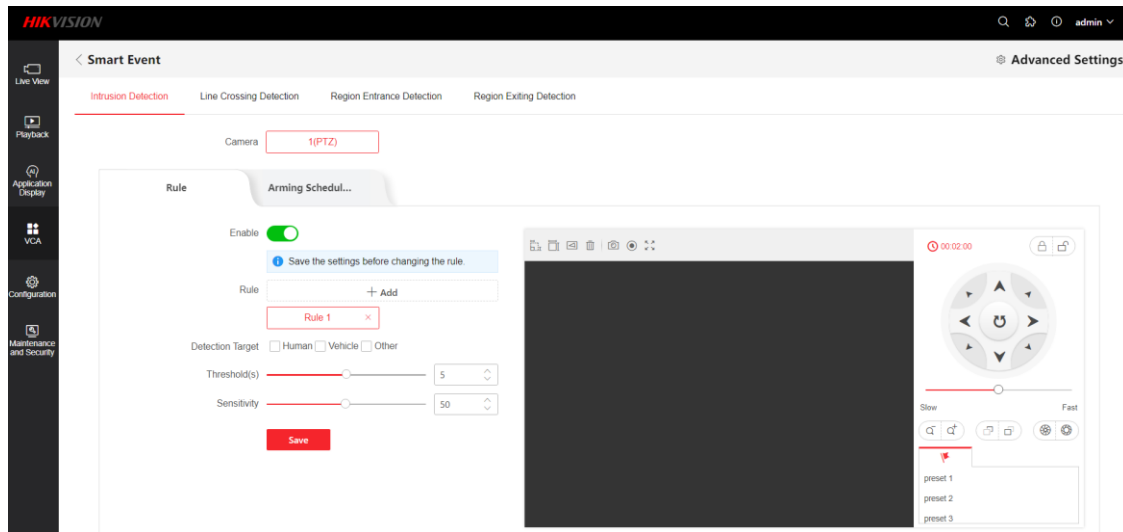

Click to enable intrusion function firstly

 


Add New scene rule




Choose detection target

(Other means common targets not include human&vehicle, eg. animal, trees)



 The threshold for the time of the object loitering in the region. If you set the value as 0, alarm is triggered immediately after the object entering the region




The value of the sensitivity defines the size of the object which can trigger the alarm, when the sensitivity is high, a very small object can trigger the alarm.



Max. Size: The maximum size of a valid target. Targets with larger sizes would not trigger detection.

 Min. Size: The minimum size of a valid target. Targets with smaller sizes would not trigger detection.




Specify four points, and then connect the first point with the fourth point to loop a defense area

4. Set several intrusion rules in one scene

Click +Add for new Rule

Click Rule 1/Rule 2/Rule 3/Rule4 to do details setting

5. Set several intrusion rules in different scenes

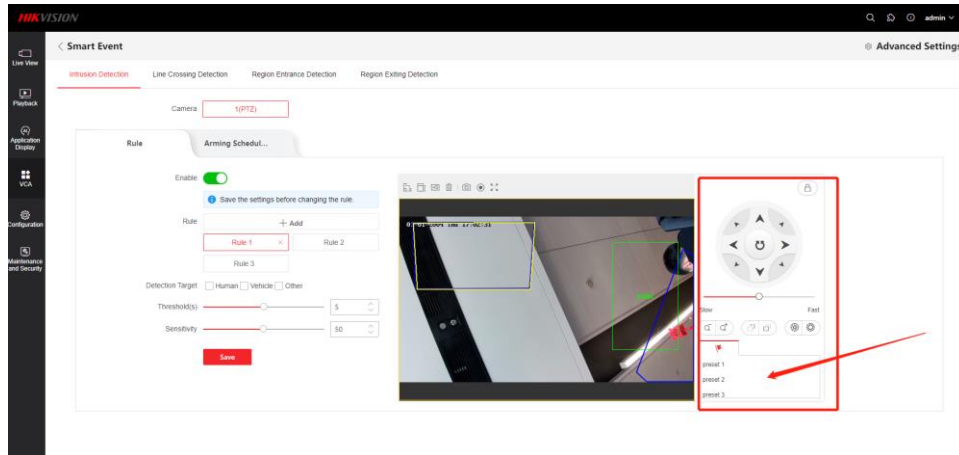

Call the preset you have set (as step1), add the Rule on this scene and save all the settings, then, call another preset and set a new Rule.

You can do the corresponding relations like preset 1->Rule 1, preset 2->Rule 2 and so on.

So, after all of these steps, you can call a specific preset to use the intrusion rule related

Advanced Usage



Make a Patrol Path, so that you can monitor all the presets you choose in turn.

Note: Each time a new scene (preset) is reached, the algorithm takes a few seconds (about 5s) to load, so please avoid to make the patrol interval time too short

preset	Speed	Time(s)
1	30	30
2	30	30
3	30	30

First Choice for Security Professionals

***HIK*VISION Technical Support**