

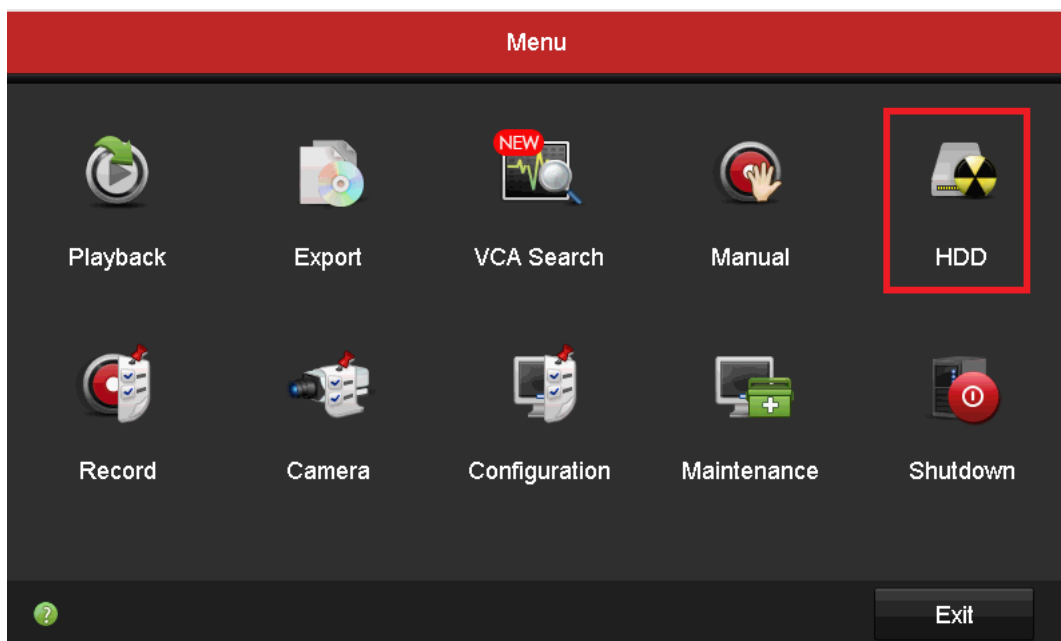


How to create RAID 6 and hot spare disk in -I series NVR


Step 1: Click **Menu>HDD**

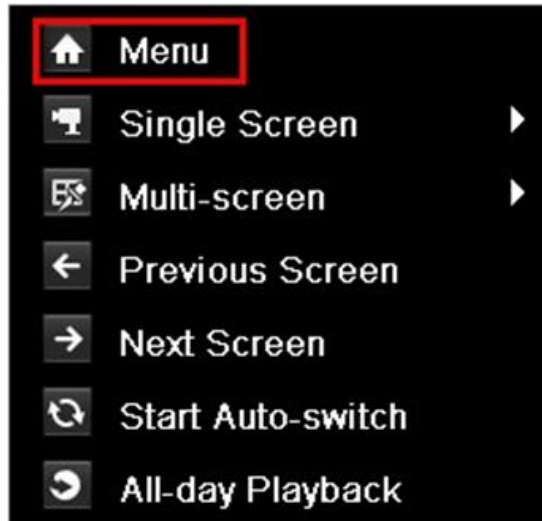


Step 2: Click **Advanced**> **Enable RAID**, your device will reboot

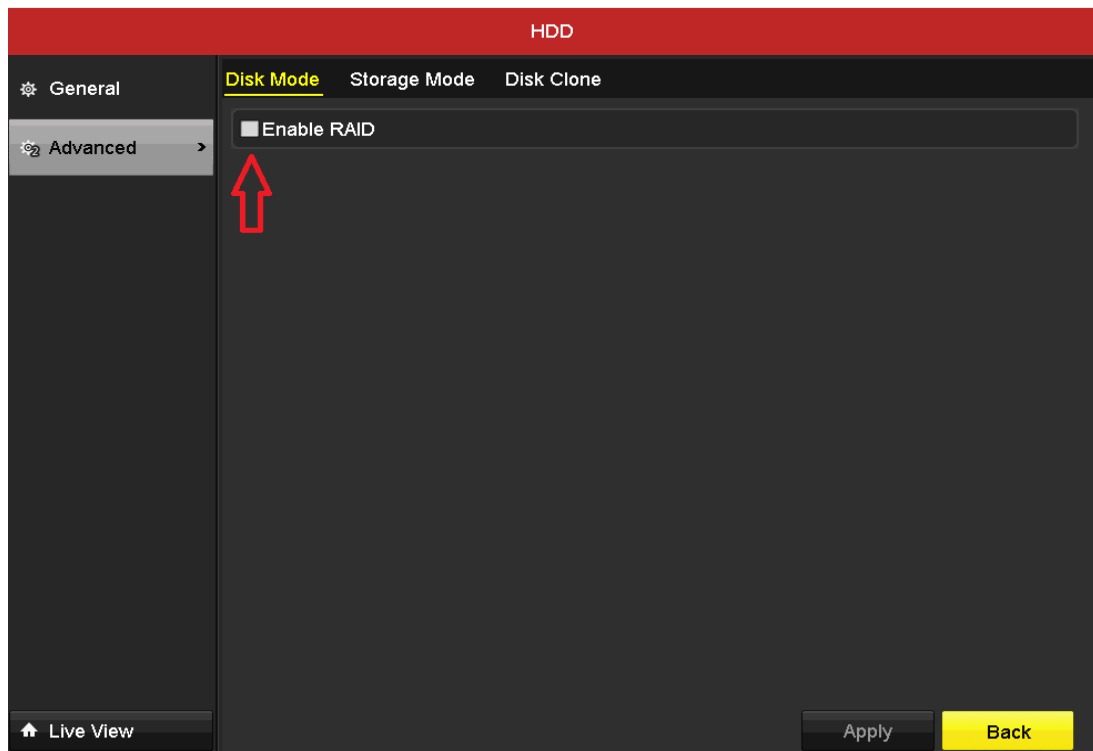


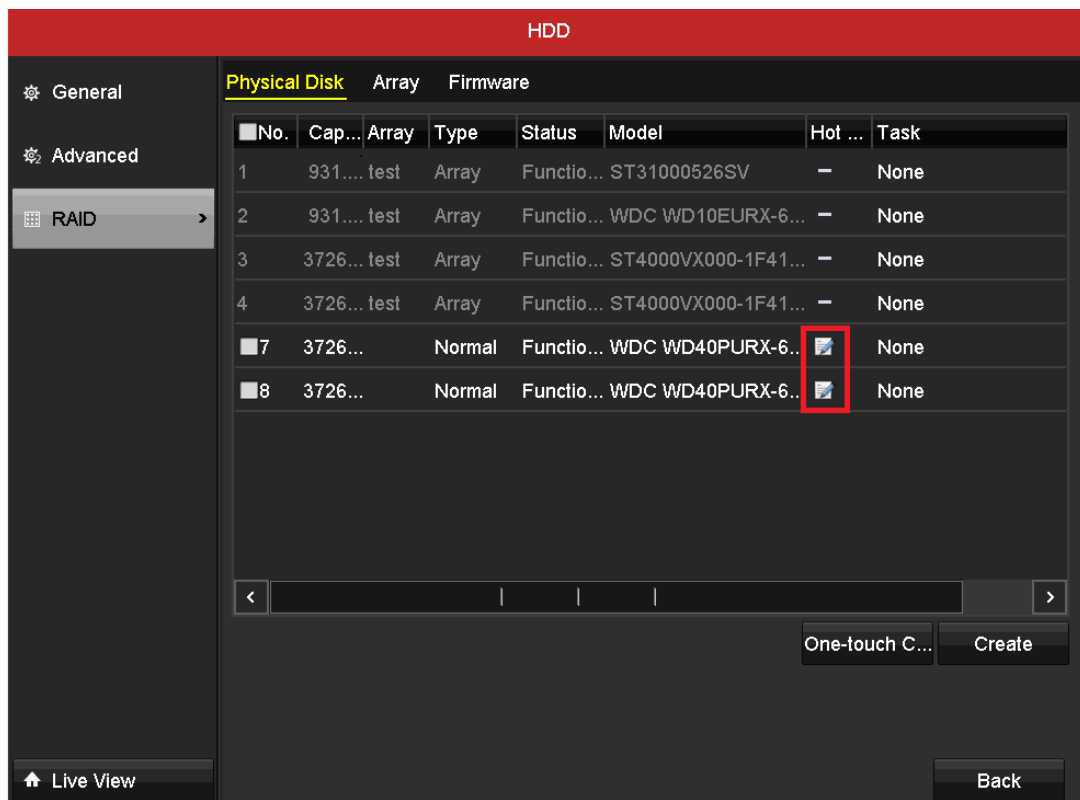
Step 3: After your device reboots, enter **HDD**> **RAID**, select disks (at least 4 disks) and click **Create**.

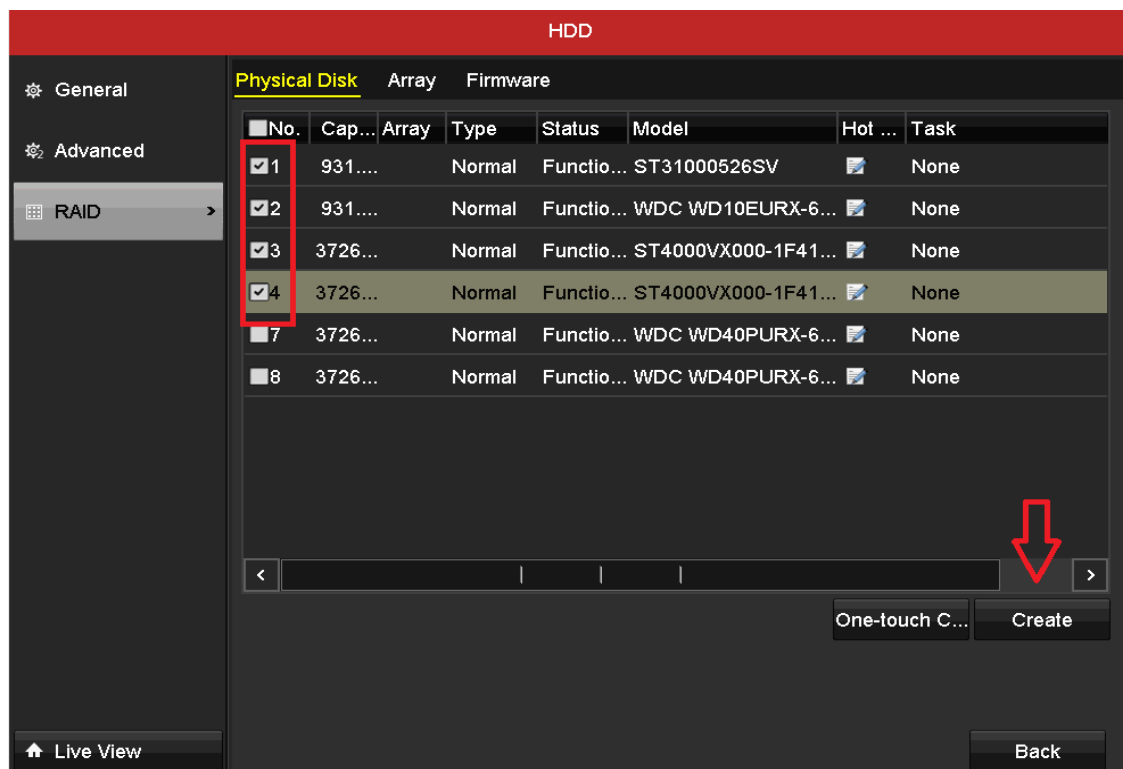

Step 4: Select **RAID 6** in **RAID Level** and then click **OK**.

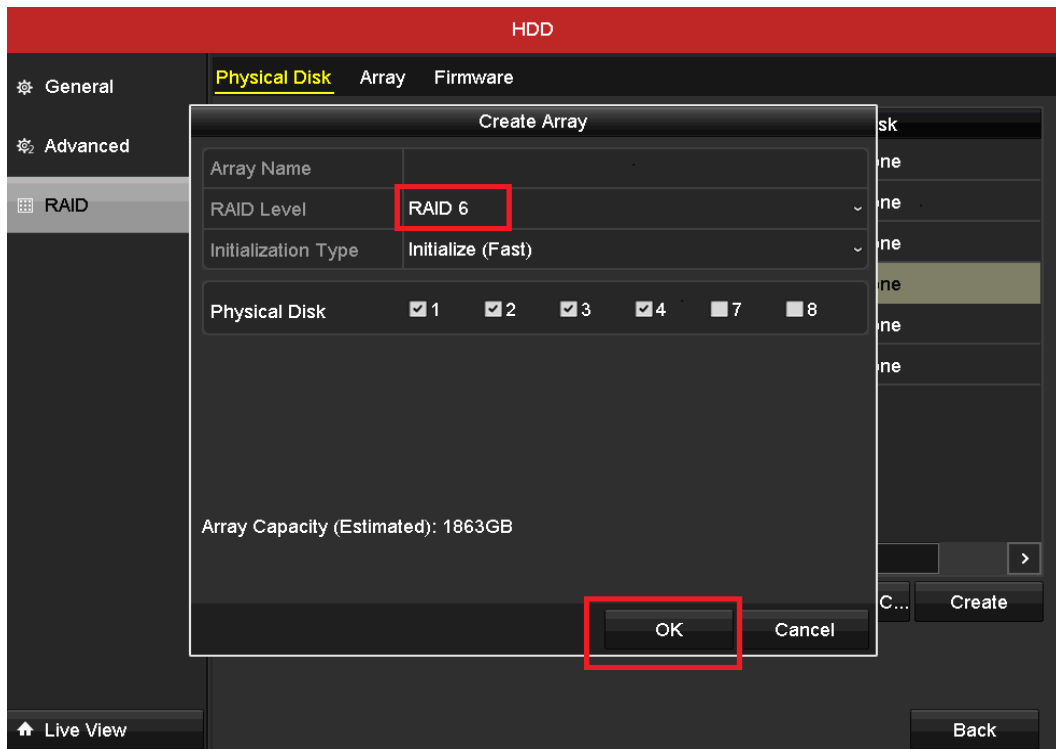

Step 5: Go to **RAID> Physical Disk**, select the disk to work as hot spare disk, click  button.



First Choice for Security Professionals
Hikvision Technical Support