How to use NVR HTTPs function

1. Enter the Network-Advanced Settings-HTTPS:

Install Certificate		
Installation Method	O Create Self-signed Certificate	
	O Signed certificate is available, start the installa	ation directly.
	Create the certificate request first and continue	e the installation.
Create Certificate Request	Create No file.	
Download Certificate Request	Download	
Delete Certificate Request	Delete	
Install Generated Certificate		Browse Install

2. Select the third: Create the certificate request first and continue the installation. Create a file and file in the follow information.

美国: US中国: CN意大利: IT必須這種形式

Create		×
Country	*	
Hostname/IP	*	
Password		
State or province		
Locality		
Organization		
Organizational Unit		
Email		
	OK Cancel	I

3. Download the certification file.

Enable					
Install Certificate					
Installation Method	O Create Self-s	signed Certificate			
	 Signed certificate is available, start the installation directly. 				
	Oreate the ce	ertificate request first and continue the installa	tion.		
Create Certificate Request	Create C	C=CN			
Download Certificate Request	Download	\sim			
Delete Certificate Request	Delete				
Install Generated Certificate			Browse	Install	
B Save					
request					
File					
043 bytes					

4. Verify this request certification file to a 3rd party CA agency (NOTE: The authentication format must be .PEM). Then install this verified file in the NVR.

era i	Enable
211	Enable
218	FUCE

Install Cartificate	
Install Certificate	
Installation Method	 Create Self-signed Certificate
	 Signed certificate is available, start the installation directly.
	Create the certificate request first and continue the installation.
Create Certificate Request	Create C=CN
Download Certificate Request	Download
Delete Certificate Request	Delete
Install Generated Certificate	Browse
	$\bigcirc \bigcirc$
Save	

每次导出一次,认证一次。 不可用多台设备共用