

Product:	Access Control	Version:	v1.7.2_build221219	Date:	10/01/2023
Title:	How to add K1T502 series Access Control Terminal to HCP via ISUP 5.0			Page:	1 of 2


How to add K1T502 series Access Control Terminal to HCP via ISUP 5.0

1 Devices


- DS-K1T502DBFWX-C FW: v1.7.2_build221219
- HikCentral Professional Version: 2.3.1

2 Steps

1. On device Web Configuration side, go to Configuration-> Network->Device Access->ISUP, Enable ISUP and set the necessary parameter.

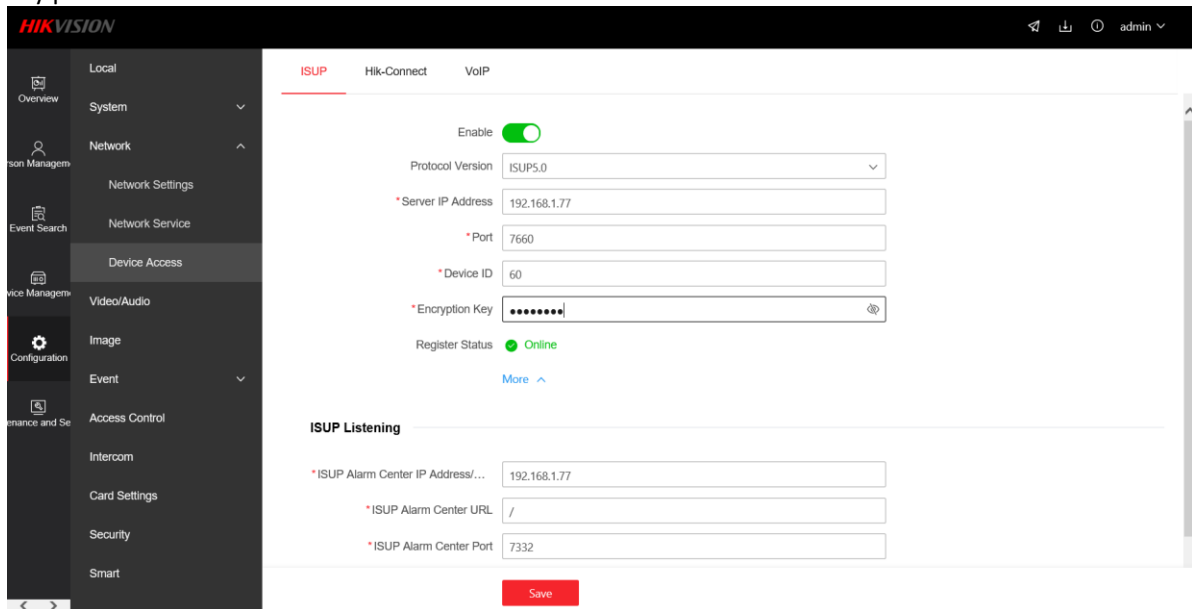

2. On HikCentral Professional, go to Resource Management-> Access Control Device and add a new device.

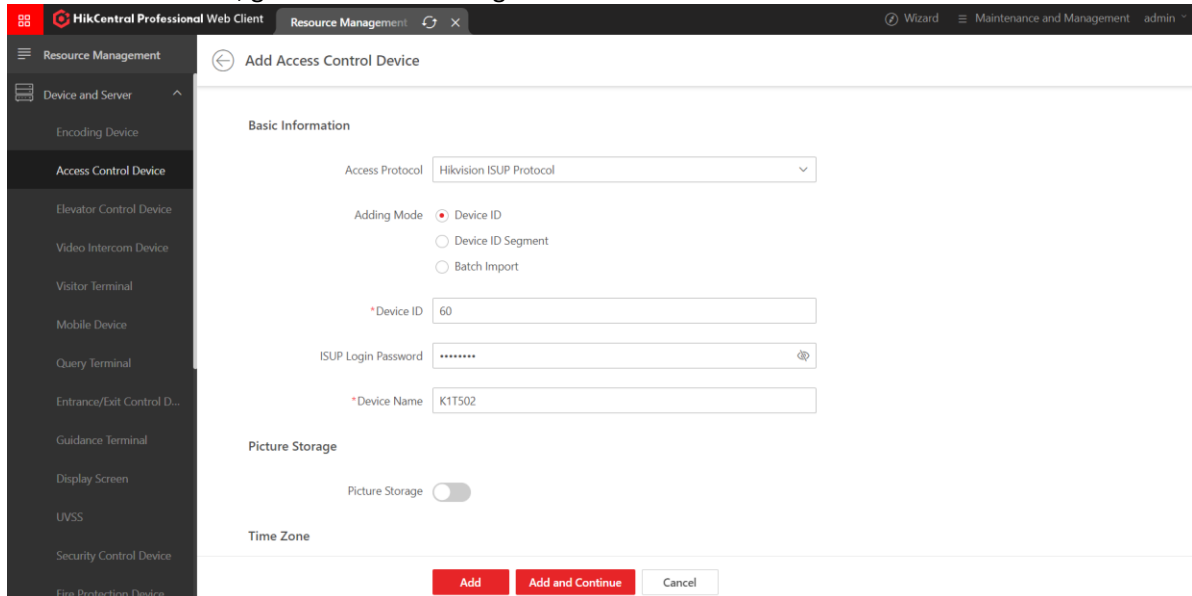



Product:	Access Control	Version:	v1.7.2_build221219	Date:	10/01/2023
Title:	How to add K1T502 series Access Control Terminal to HCP via ISUP 5.0			Page:	2 of 2

First Choice for Security Professionals
***HIKVISION* Technical Support**