



**How to configure the fire alarm linkage
between Access Controllers via HCP/HCAC**

Title:	How to configure the fire alarm linkage between Access Controllers	Version:	v1.0	Date:	08/09/2022
Product:	Alarm Product			Page:	1 of 3

Preparation

Type	Model	Version
Access Controller	DS-K2604	
Access Controller	DS-K2602	
HCP/HCAC	Client platform software	


Introduction:

Fire event trigger linkage multi-controller linkage door opening via HCP/HCAC


How to configure the fire alarm linkage between Access Controllers

1. Set-up with the Web Client


- 1) Connect the Access Controller to the Ethernet, search the device IP address via the SADP software, and then enter the searched IP address in the address bar.
- 2) Activate Device and Login Website

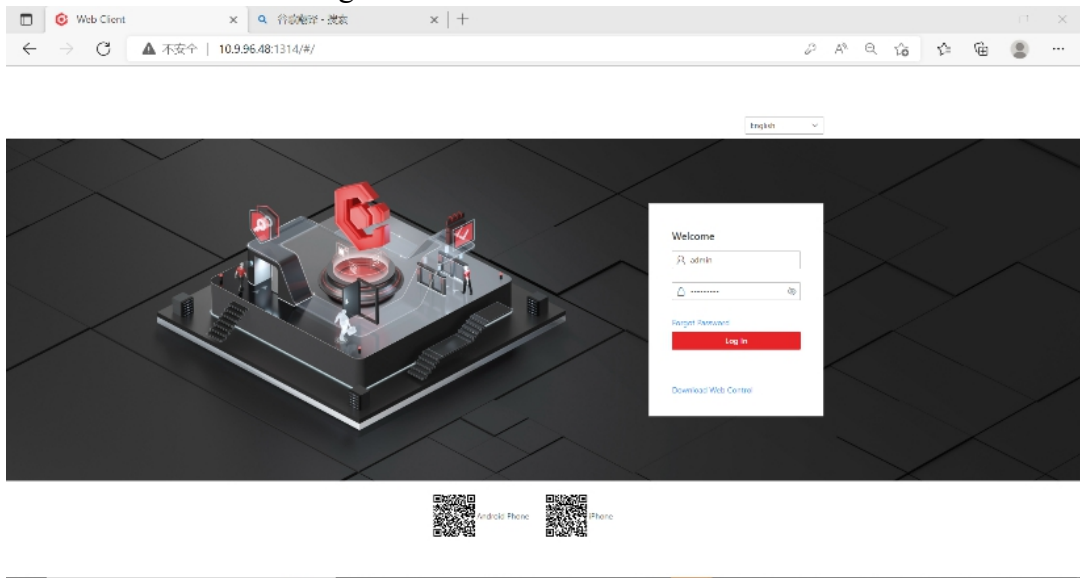


- 3) Add Devices.

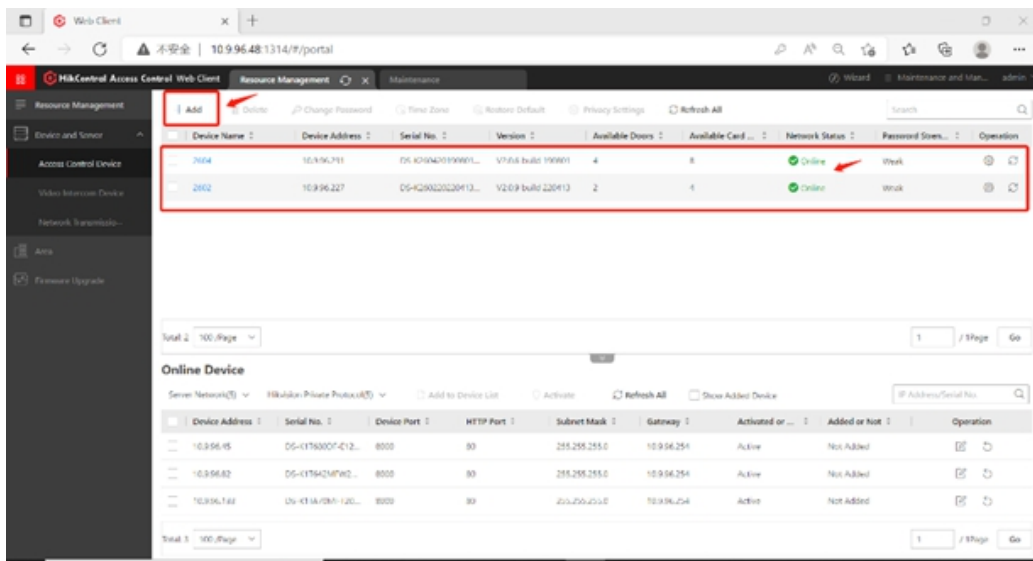

4) Trigger the fire alarm interface.

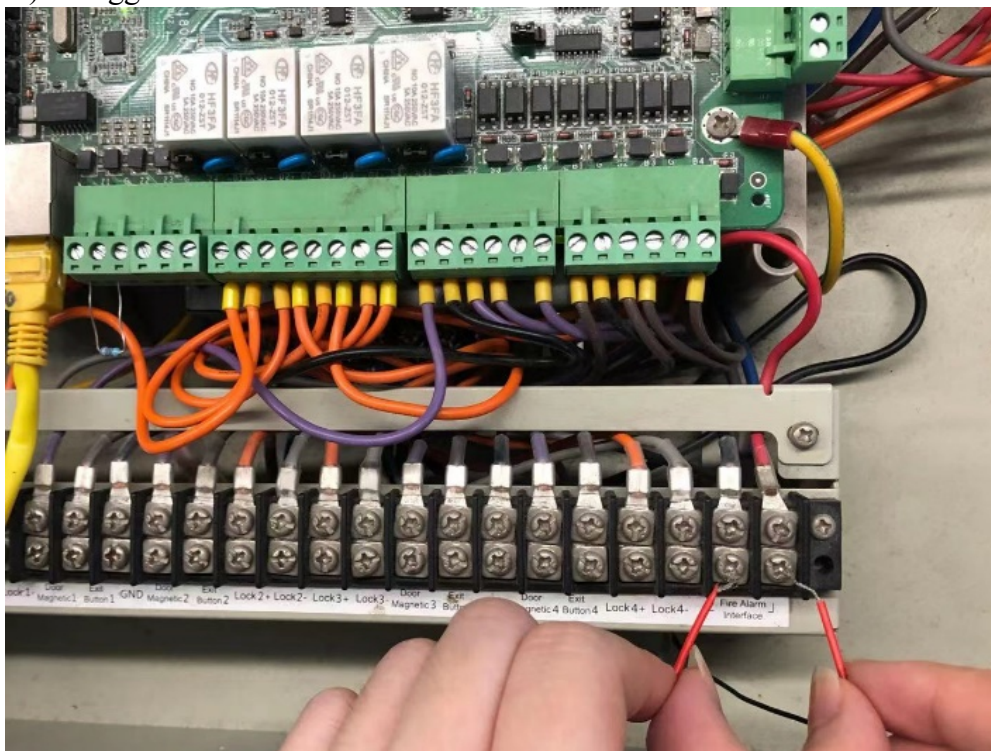


5) Check the event type as Casein 8 alarm input triggered.

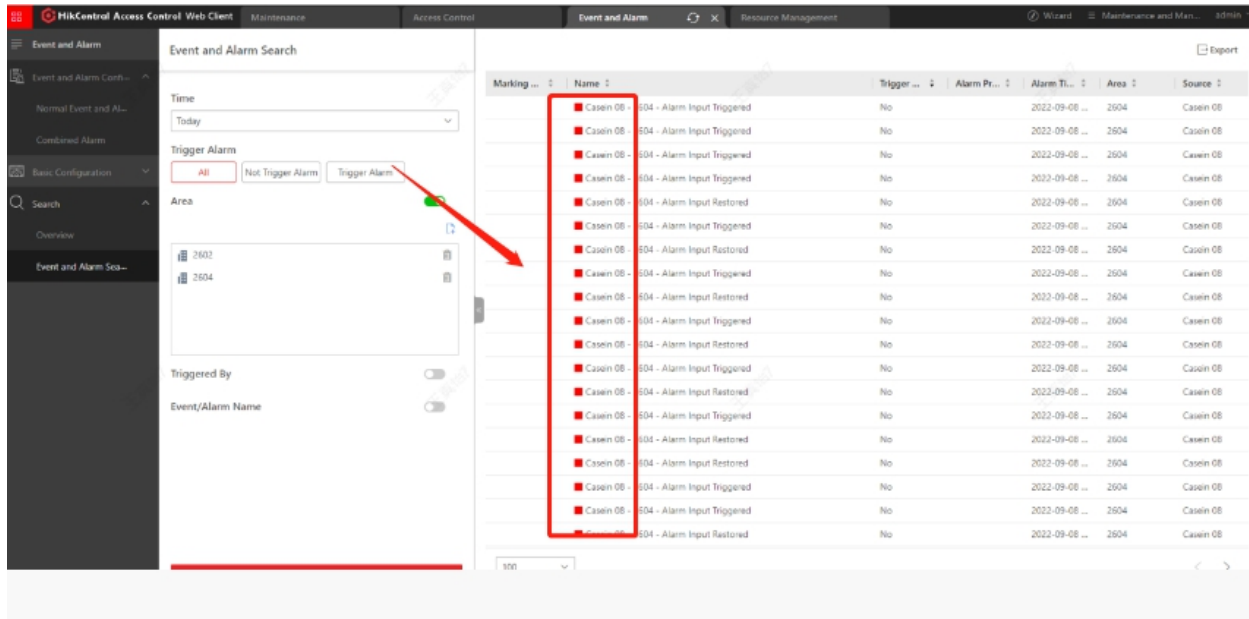

2. Configure the fire alarm linkage between Access Controllers

1) Configure the linkage in Event and Alarm Center as picture below.

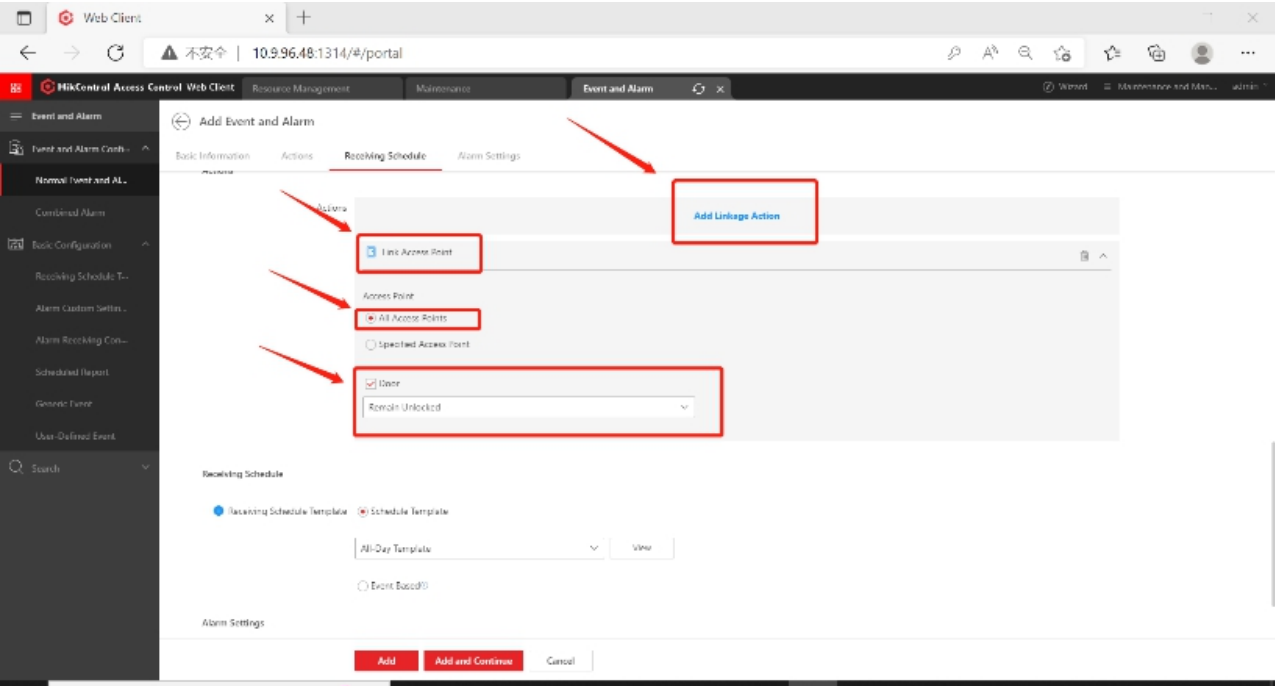

3. Test the fire alarm linkage.

1) Trigger the Fire Alarm and the result of the linkage as the shown below which means operate successfully.

HikCentral Access Control Web Client

Maintenance Access Control Event and Alarm Resource Management

Access Control

Please select. Search


Door 02 Door 01 Door 02 Door 01

Total: 4

Real-Time Event

Profile Pic...	Name	ID	Person Gr...	Skin-Surf...	Record Ty...	Card Rea...	Card No.	Event So...	Time	Operation
-	-	-	-	-	Door Unl...	-	-	Door 02	2022-09-...	🔊
-	-	-	-	-	Door Unl...	-	-	Door 01	2022-09-...	🔊
-	-	-	-	-	Remote: R...	-	-	Door 01	2022-09-...	🔊
-	-	-	-	-	Remote: R...	-	-	Door 02	2022-09-...	🔊

Auto-Switch to the Latest Record

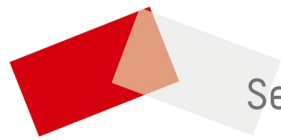

See Far, Go Further