

Title:	How to create main station group call	Version:	v1.0	Date:	09/22/2021
Product:	Video Intercom			Page:	1 of 4

### Preparation

Туре	Model	Version	
Main station	KM9503	1.0.30_210419	

- 1. You need to activate main station and assign an IP for it.
- 2. You are required to add door station and indoor station on it, and make sure that door station can call main station.

## How to create main station group call

1. Configure main station extension's No.(52-99)

HIKVISION		Device Managem				
🖽 System	~	Device ID Settings	Sess	ion Settings	Time Paramete	ers
	~					
🖽 Video/Audio		Device	Туре	Main Station		$\checkmark$
📮 Intercom		Perio	d No.	1		
Capture Network F	<sup>o</sup> a		No.	52		
🖽 Open Platform				Save		

2. Configure Videointercom Server IP as main station IP (Both main station and extension)

HIKVISION	Device Manager	ment C	onfiguration		
🖽 System 🗸 🗸	Device ID Settings	Session	Settings	Time Parameters	
Metwork  ✓					
🗗 Video/Audio	Register N	umber 1	10000000151		
📮 Intercom	Registration Pa	ssword	•••••		0
Capture Network Pa.	VideoIntercom Se	erver IP 1	10.9.96.110		
-	Private SIP Serv	er Port 5	5065		
		_			
			Save		

© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	How to create main station group call	Version:	v1.0	Date:	09/22/2021
Product:	Video Intercom			Page:	2 of 4

- 3. Register extension to main station on Main Station web configuration interface
  - Go to Device Management→Add, set the Device Type as main Station, fill in the necessary info of the device, The registration password is the password that communicated with extension (The registration password must be consistent ). The port is 8000. The bigger number of call priority, the higher priority.



#### 2) When we complete the device info, you will see the page as show below.

HIKVISION	Device Management Conf	iguration						👤 admin 🛭 👔 Help	E Logout
Device List Came	a								
+ Add [♣ Import [♣ E	xport 🍵 Delete 个 Timing upgra	de 个 Upload Updating	Package 个 Upgrade Now <table-cell> (</table-cell>	Jpgrading		Status All	Device Ty	pe Main Station	~
□ No.	IP Address	Serial No.	Model	Current Version	No.	User Name	Network Status	Operation	
1	10.9.96.110	Q04793393	DS-KM9503	V1.0.30 build 210419	51	admin	🕑 Online	ピ 直	
2	10.9.96.128	004793395			52	admin	▲ Offline	12 前	

3) Wait for 5 to 10 minutes, the devices will be online.

	<i>5)</i> wait 101 5	to 10 m	nuces, the uev		mme.				
<b>IKVISIO</b> N	Device Management Conf							👤 admin 🛛 👔 Help	E Logout
Device List	Camera								
+ Add 🕞 Import	🕒 Export 🍈 Delete 个 Timing upgra	de 个 Upload Updatin	J Package 个 Upgrade Now 分 U	pgrading		Status All	Device Typ	Main Station	V
□ No.	IP Address	Serial No.	Model	Current Version	No.	User Name	Network Status	Operation	
□ 1	10.9.96.110	Q04793393	DS-KM9503	V1.0.30 build 210419	51	admin	🛇 Online	ピ 前	
2	10.9.96.128	Q04793395	DS-KM9503	V1.0.0 build 210507	52	admin	🛇 Online	12 前	



Title:	How to create main station group call	Version:	v1.0	Date:	09/22/2021
Product:	Video Intercom			Page:	3 of 4

# 4. Turn on the Group Call Switch on the local interface of the device(Both Main station and Main station extension).





Title:	How to create main station group call	Version:	v1.0	Date:	09/22/2021
Product:	Video Intercom			Page:	4 of 4

# See Far, Go Further HIKVISION Technical Support