




**How to mapping the room number on KD9633**

<b>Title:</b>	How to mapping the room number on KD9633	<b>Version:</b>	2.3.9—230208	<b>Date:</b>	9/6/2023
<b>Product:</b>	Video intercom, Door station			<b>Page:</b>	1 of 3

## How to mapping the room number on KD9633


### 1. Configuring on the door station.

#### 1) Logging on the KD9633 website page

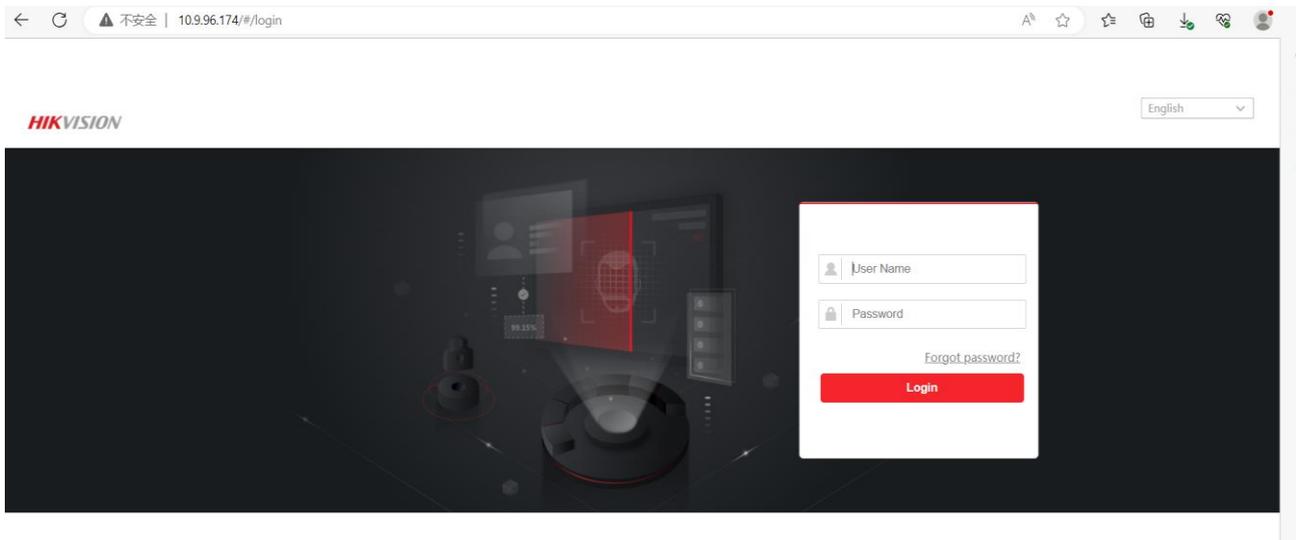

### 2. Filling the indoor station information on the device management page.


#### 1) Writing down the room information and the related number you want to map to..

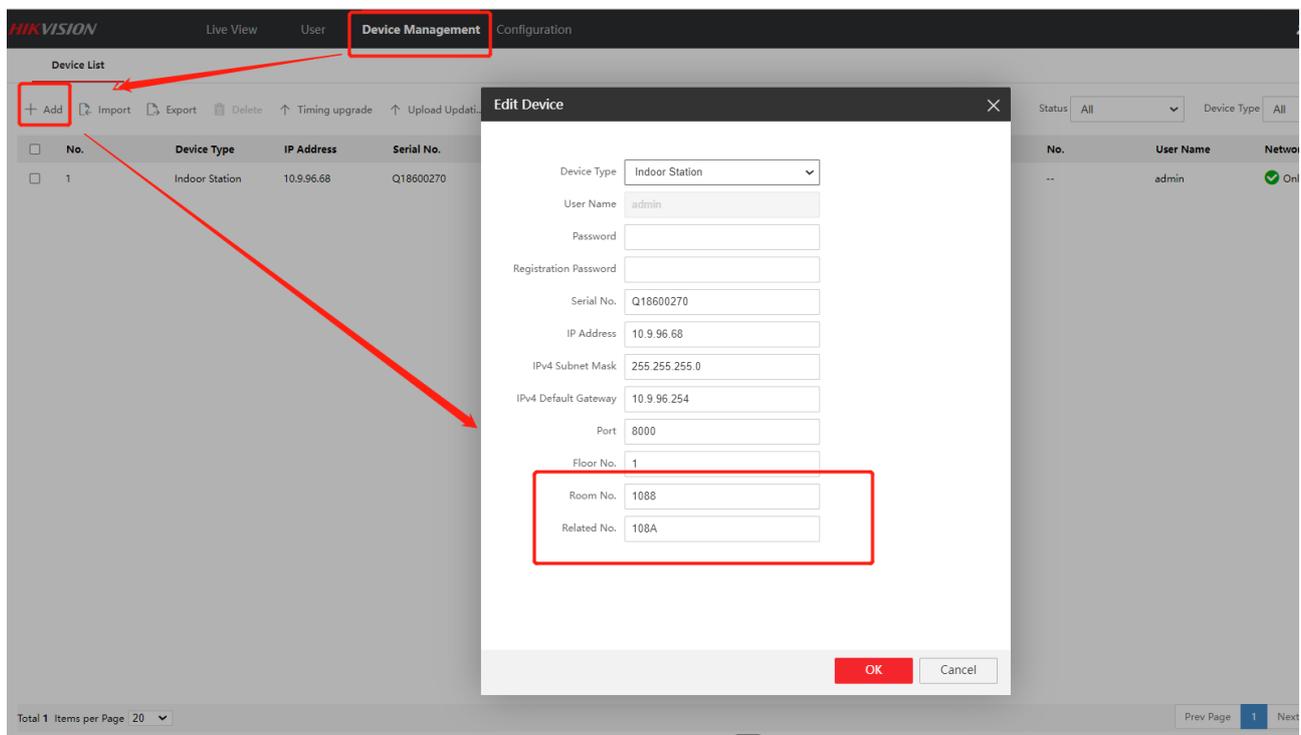

#### 2) Click save.


### 3. Filling the indoor station information through the Excel.

- 1) Enter the device management page, and import the indoor stations' information to batch configuration.

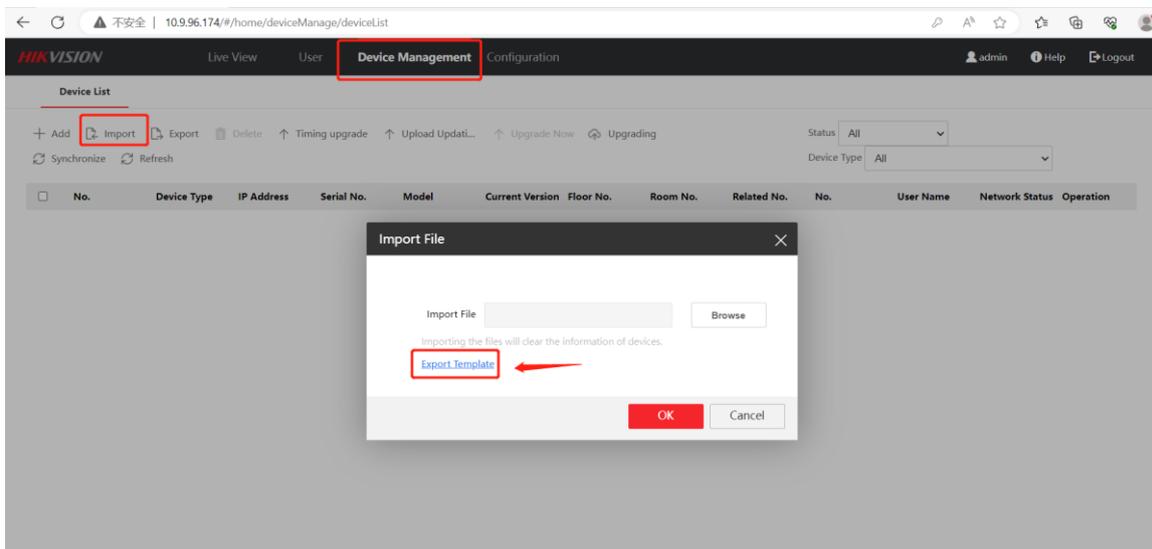

Export and download the template first

- 2) Opening the template and filling in related information.
- 3) Deleting the example and write down the indoor station information

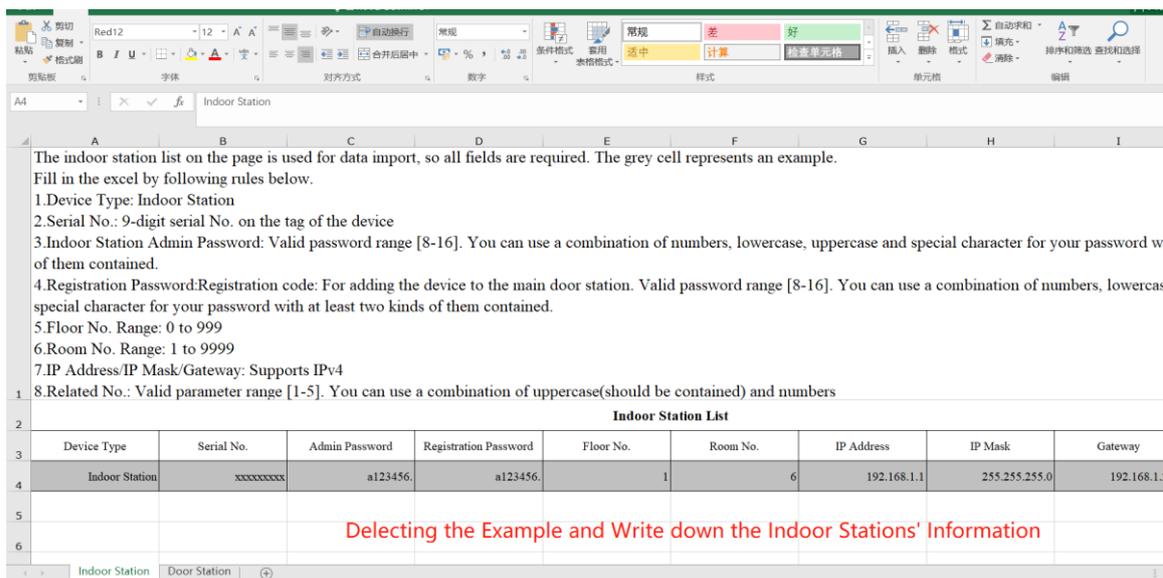


- 4) Writing the room number and related number. The related number be written means the mapping number which can be used to press on the door station to call related indoor station.

Indoor Station List									
Device Type	Serial No.	Admin Password	Registration Password	Floor No.	Room No.	IP Address	IP Mask	Gateway	Related No.
Indoor Station	Q18600270	1234567a	1234567a	1	1088	10.9.96.68	255.255.255.0	10.9.96.254	108A
Indoor Station	Q04429573	1234567a	1234567a	1	1089	10.9.96.121	255.255.255.0	10.996.254	108B

Mapping the Room Number to Related Number

#### 4. Importing the Excel back to the door station.

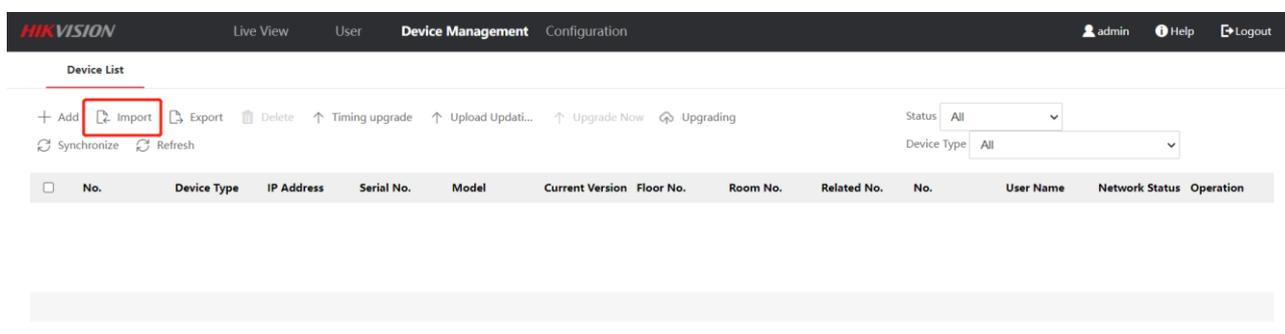


#### 5. Calling on the door station



dffe130a43b934  
c7ab717ac019a9c

**Note:**

If the device is inactive when click synchronize the information will be synchronized to indoor stations, indoor stations are also activated in this time.

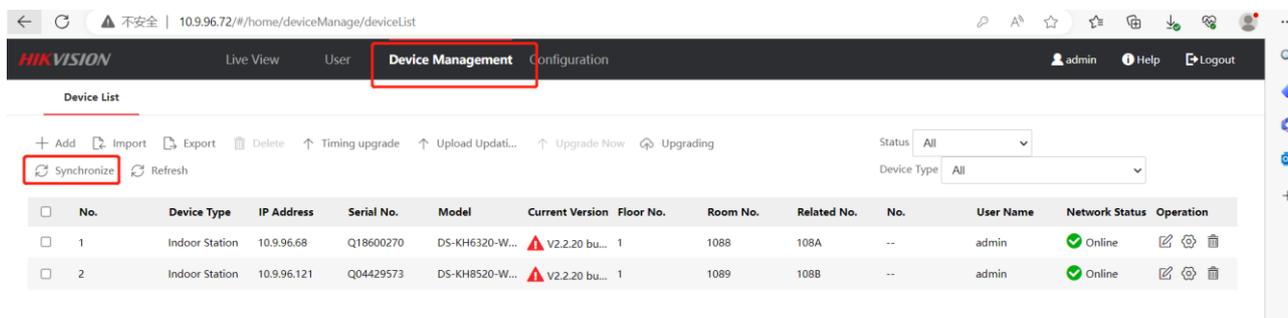



See Far, Go Further