

<b>Title:</b>	How to Check Access Control Devices Status on iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	11/8/2018
<b>Product:</b>	Access Control			<b>Page:</b>	1 of 3

## Preparation


1. This guide takes DS-K2604 as an example to introduce how to check access control status on iVMS-4200.
2. It is required to add Access Control to iVMS-4200 in advance.

## How to Check Access Control Status on iVMS-4200

In the device list, you can select the device and then click **Device Status** button to view its status.



Seven Status types are available, including **Door Status**, **Host Status**, **Card Reader Status**, **Alarm Input Status**, **Alarm Output Status**, **Event Sensor Status** and **Arming Status**.

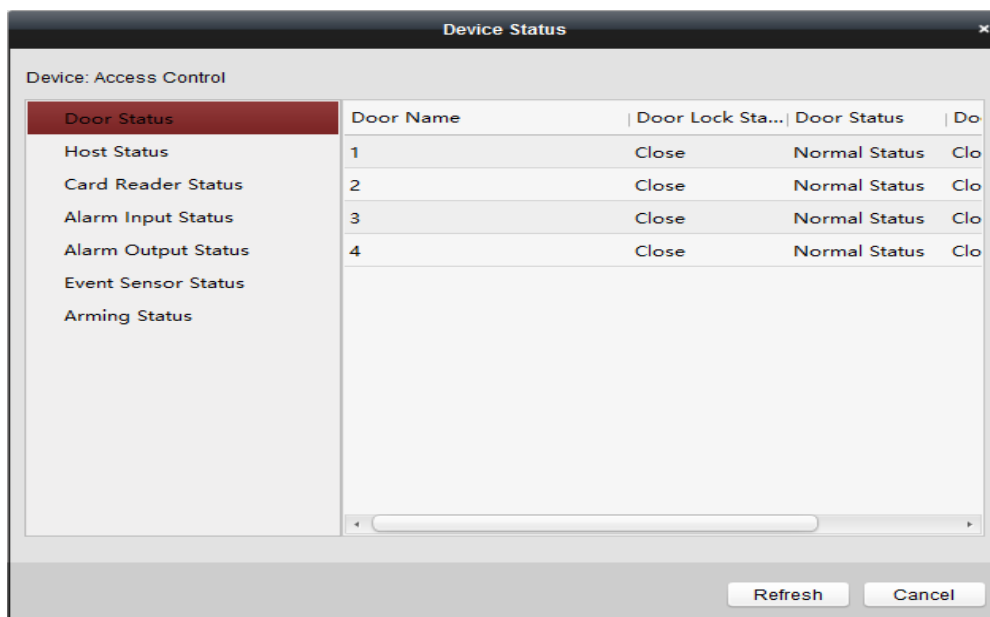

<b>Title:</b>	How to Check Access Control Devices Status on iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	11/8/2018
<b>Product:</b>	Access Control			<b>Page:</b>	2 of 3

**Door Status:** The status of the connected door.

**Host Status:** The status of the host, including Storage Battery Power Voltage, Device Power Supply Status, Multi-door Interlocking Status, Anti-passing Back Status, and Host Anti-Tamper Status.

**Card Reader Status:** The status of card reader.

**Note:** If you use the card reader with RS-485 connection, you can view the status of online or offline.  
If you use the card reader with Wiegand connection, you can view the status of offline.

**Alarm Input Status:** The alarm input status of each port.

**Alarm Output Status:** The alarm output status of each port.

**Event Sensor Status:** The event sensor status of each port.

**Arming Status:** The status of the device.



<b>Title:</b>	How to Check Access Control Devices Status on iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	11/8/2018
<b>Product:</b>	Access Control			<b>Page:</b>	3 of 3

**First Choice for Security Professionals**

**HIKVISION Technical Support**