

Modular Firmware

V2.2.52_211126 Release Note

(2021-11-28)

Device Model	DS-KD8003-IME1、DS-KD8003-IME2
Firmware Version	Modular Door Station: V2.2.52_211126
iVMS-4200 Version	Latest version
Hik-Connect APP	Latest version

Fix

1. Fixed some bugs.

Modular Firmware

V2.2.50_210728 Release Note

(2021-07-15)

Device Model	DS-KD8003-IME1、DS-KD8003-IME2
Firmware Version	Modular Door Station: V2.2.50_210728
iVMS-4200 Version	Latest version
Hik-Connect APP	Latest version

Modify

- 1、 Since V2.2.50_210728, remote degradation of devices is not supported in all subsequent versions. When degradation occurs, it will prompt Upgrading failed.

Notice: Although the device can be degraded by serial port, the device will fail to start and cannot change the version by using serial port again, which means that the device will be completely unusable.

The screenshot shows the Hikvision web interface. On the left is a dark sidebar menu with categories: Local, System, System Settings, Maintenance (highlighted), Security, User Management, Network, Video/Audio, Image, Event, Schedule, Intercom, Access Control, Device Management, and User. The main content area is titled "Upgrade & Maintenance" and contains several sections: "Reboot" with a "Reboot" button; "Restore Parameters" with "Default" and "Restore All" buttons; "Export" with a "Device Param" dropdown and an "Export" button; "Import Config File" with a "Device Param" dropdown, a file selection button, and an "Import" button; and "Upgrade" with a "Controller" dropdown, a file path input field containing "C:\Users\puwenyu\Music\VIS_OUTDC", and an "Upgrade" button. A red notification box at the top says "Upgrading failed." Below the "Upgrade" section, a note states: "Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the upgrading process."

- 2、 Newly support for French voice prompt "calling", "the line is busy" and "the door is open"
- 3、 The method of adding sub door station is changed to the same method as protocol 1.0. (Fill in the Main Door Station IP and Registration Password in the configuration interface of Sub Door Station)

The screenshot shows the configuration page for a "Door Station" in the Hikvision web interface. The sidebar menu is the same as in the previous image. The main content area has tabs for "Device No.", "Session Settings", "Time Parameters", "Ringbacktone Settings", "Press Button to Call", and "I/O Settings". Under "Device No.", there are sub-tabs for "Sub Module Configuration" and "Number Settings". The "Device Type" is set to "Door Station", "Floor No." is "1", and "Door Station No." is "1" (highlighted with a red box). Below these fields is an "Advanced Settings" section with a dropdown arrow. At the bottom is a red "Save" button.

Device No. **Session Settings** Time Parameters Ringbacktone Settings Press Button to Call I/O Settings

Sub Module Configuration Number Settings

Registration Password

Main Door Station IP

Main Station IP

Center IP

Save

- Local
- System
- Network
- Video/Audio
- Image
- Event
- Schedule
- Intercom**
- Access Control
- User

Note: you can refer to the attached file below about how to add a Sub door station.



How to add a single sub door station

Modular Firmware V2.2.13_210129 Release Note (2021-02-07)

Device Model	DS-KD8003-IME1、DS-KD8003-IME2
Firmware Version	Modular Door Station: V2.2.13_210129
iVMS-4200 Version	Latest version
Hik-Connect APP	Latest version

Modify


1. Optimize RS485 communication efficiency with sub-module

Modular Firmware V2.2.13_201222 Release Note (2021-01-05)

Device Model	DS-KD8003-IME1、DS-KD8003-IME2
Firmware Version	Modular Door Station: V2.2.13_201222
iVMS-4200 Version	3..5.x.x Build21xxxx
Hik-Connect APP	4..11.0.927220

New Function

1. New refresh button is used to refresh the status of added devices

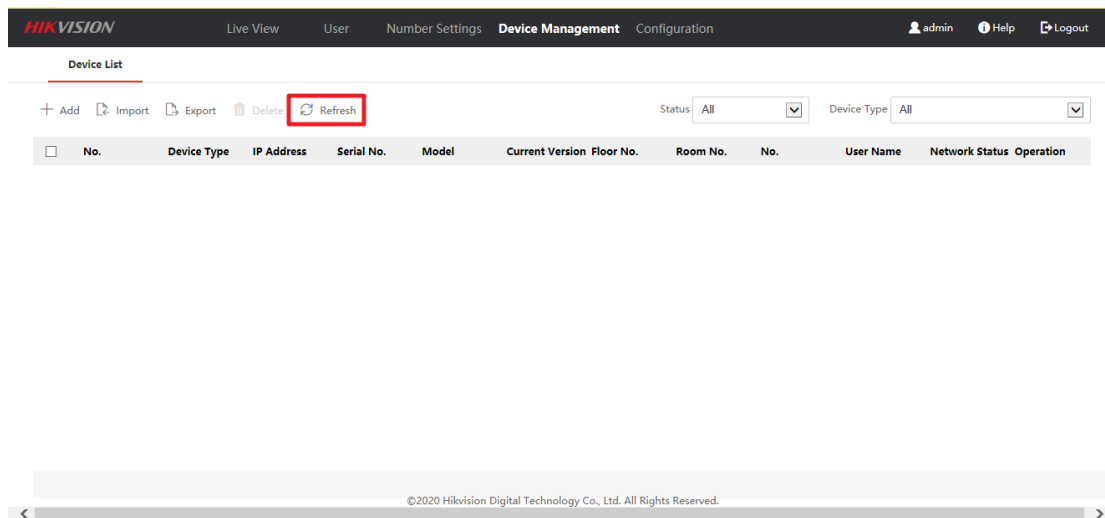

2. Added 'All' option, indoor station and sub-door station will be displayed together.

HIKVISION Live View User Number Settings **Device Management** Configuration admin Help Logout

Device List

+ Add Import Export Delete Refresh

Status All Device Type All

No.	Device Type	IP Address	Serial No.	Model	Current Version	Floor No.	Room No.	No.	User Name	Network Status	Operation
-----	-------------	------------	------------	-------	-----------------	-----------	----------	-----	-----------	----------------	-----------

©2020 Hikvision Digital Technology Co., Ltd. All Rights Reserved.

Modify

1. Modify the language display of some errors