



## **How to Use Network Speaker with NVR GUI 5.0**

<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	1 of 5

## Function Introduction

From version 5.02.000, NVR support adding network speaker to realize functions including event linked audio, one-way broadcast and two-way audio.

## Demand for Equipment

For NVR, M series, DeepinMind M series or Acusense I (E) series with firmware version higher than 5.02.000 is required.


For Network Speaker, users need make sure firmware version is higher than 1.2.2. Also, DS-PA0103-A and DS-PA0103-B will not be applicable to the content described in this document.


## Step of Configuration

### GUI Configuration


#### 1. Add Speaker to NVR

Log in to local GUI of NVR, select **Device Access** option, then click **Audio Device** to enter IP Speaker management interface.

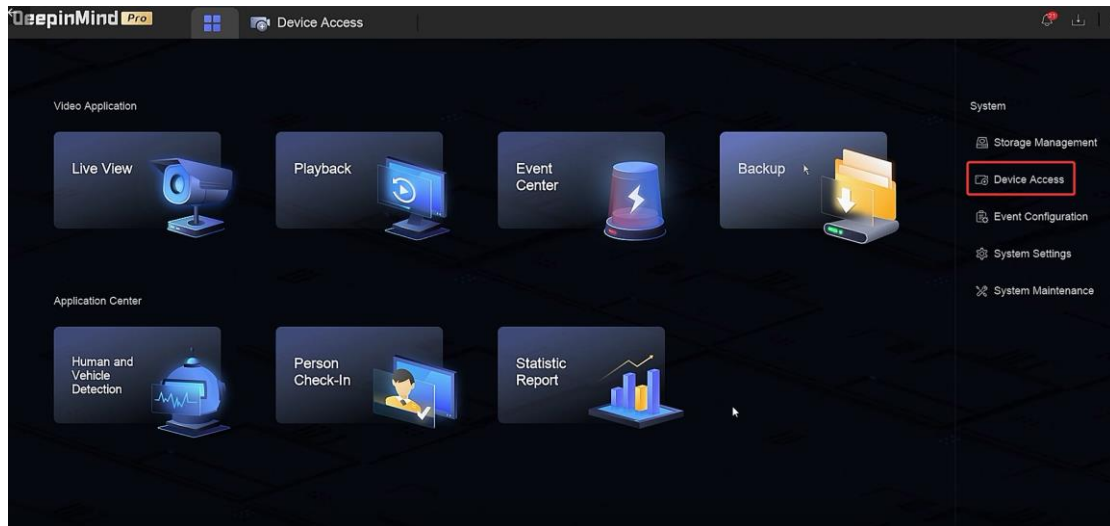

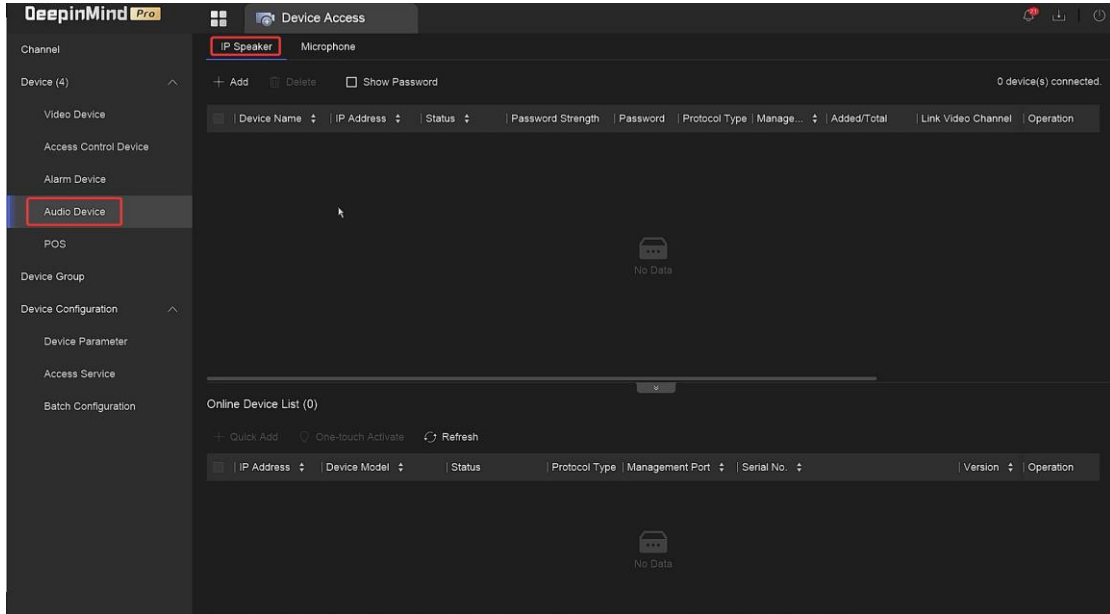

Click Add, input related parameters to add speaker to NVR. In addition, users can link video channel to speaker so two-way audio can be applied between speaker and NVR.

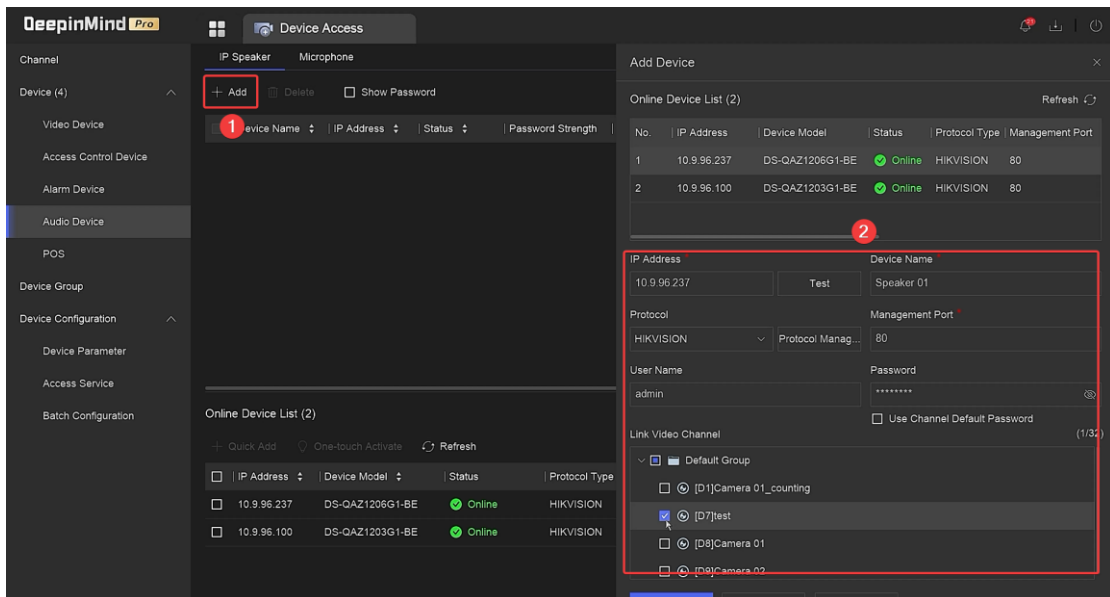

Users can also quick add speakers under same LAN with NVR from Online Device List. To realize that users need make default channel password of NVR same as speakers' password.


Note:

1. Default management port is 80.
2. For NVR 5.0, one NVR can add maximum 8 speakers.
3. One video channel can be only linked to one speaker at the same time for two-way audio.

<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	3 of 5


## 2. Configure Speaker Parameters


Under **Device Access** Module, select **Device Parameter** and **Audio Device**, then user can set audio parameters of speakers.

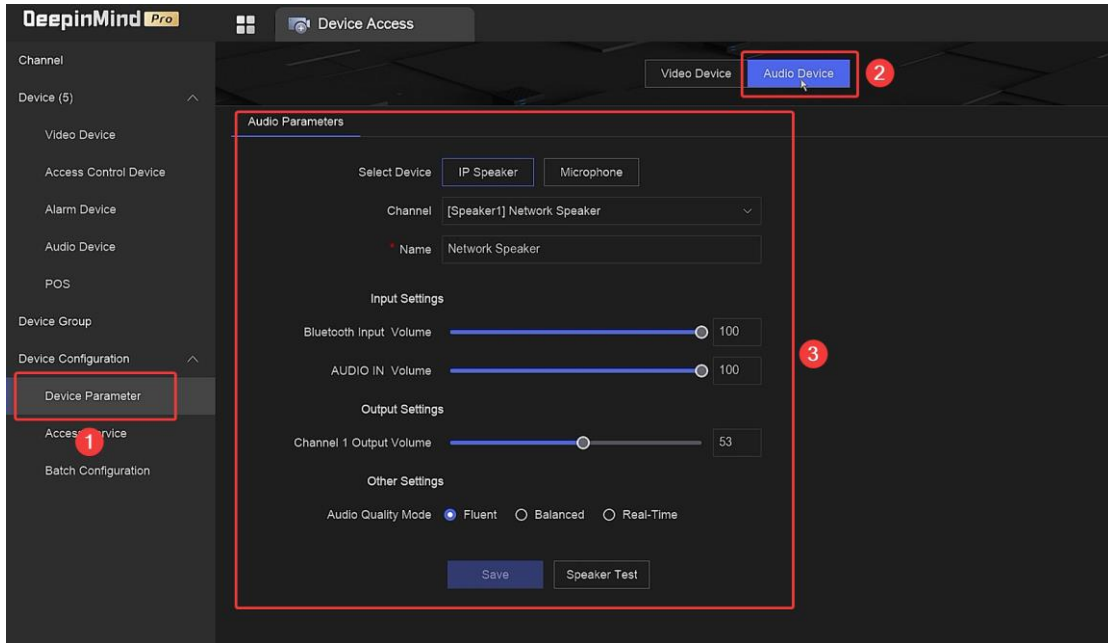

## 3. Configure Event Linked Audio

Enter **Event Center** module, select **Event Configuration-Linkage Configuration-IP Speaker** one by one, then users can import audio file to IP Speaker by clicking **Import** icon. The audio imported will be used for event linkage.

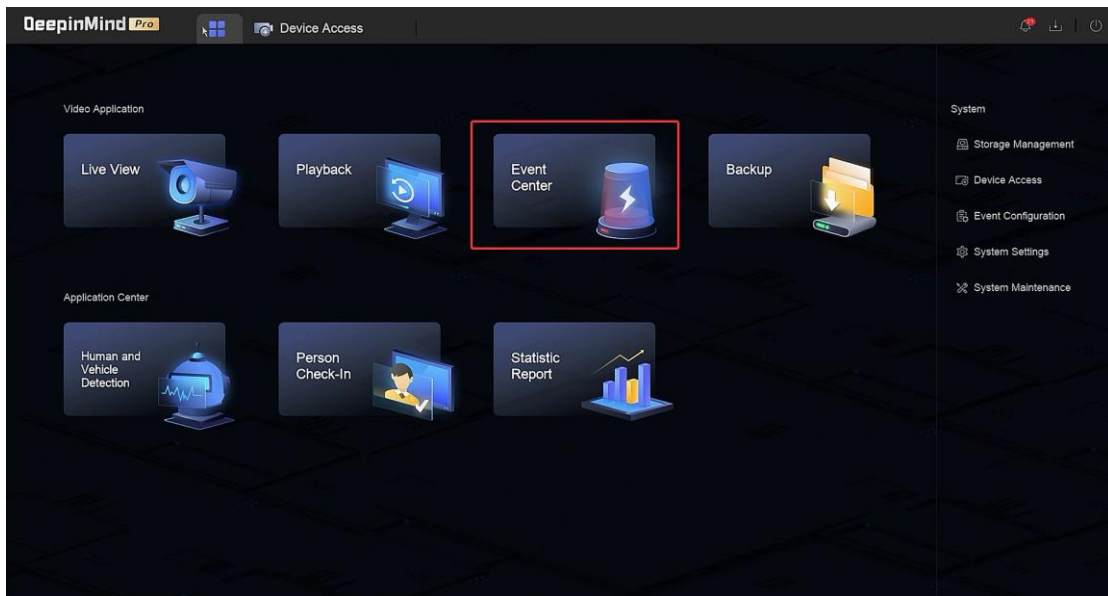


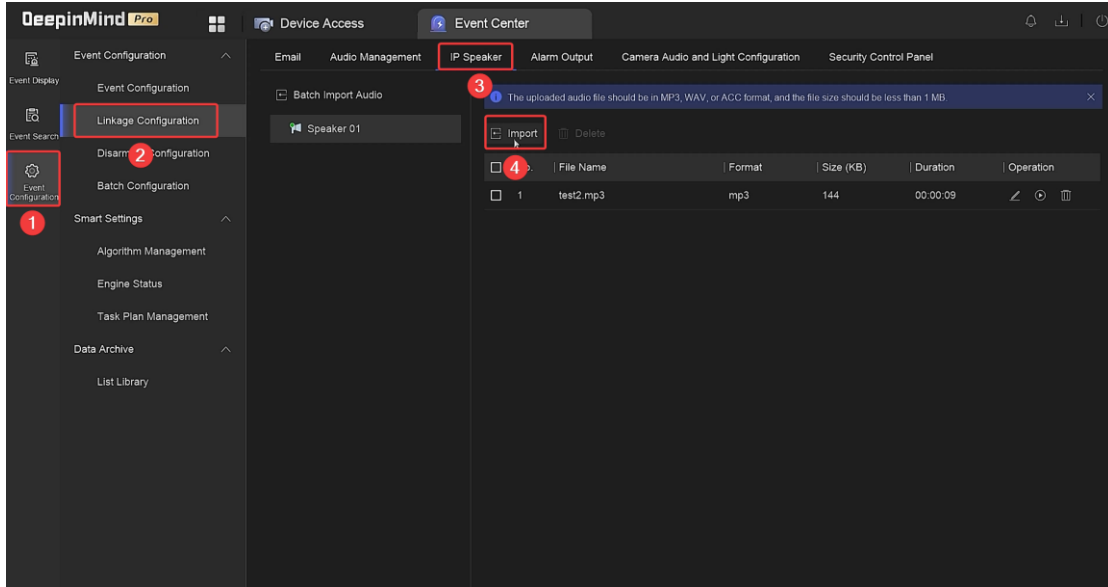

After importing audio files, users can enter **Event Configuration** to set event linkage as IP speaker as required.

Note;


Now only **motion detection, line crossing, intrusion, region entrance and region exiting** support speaker linkage.

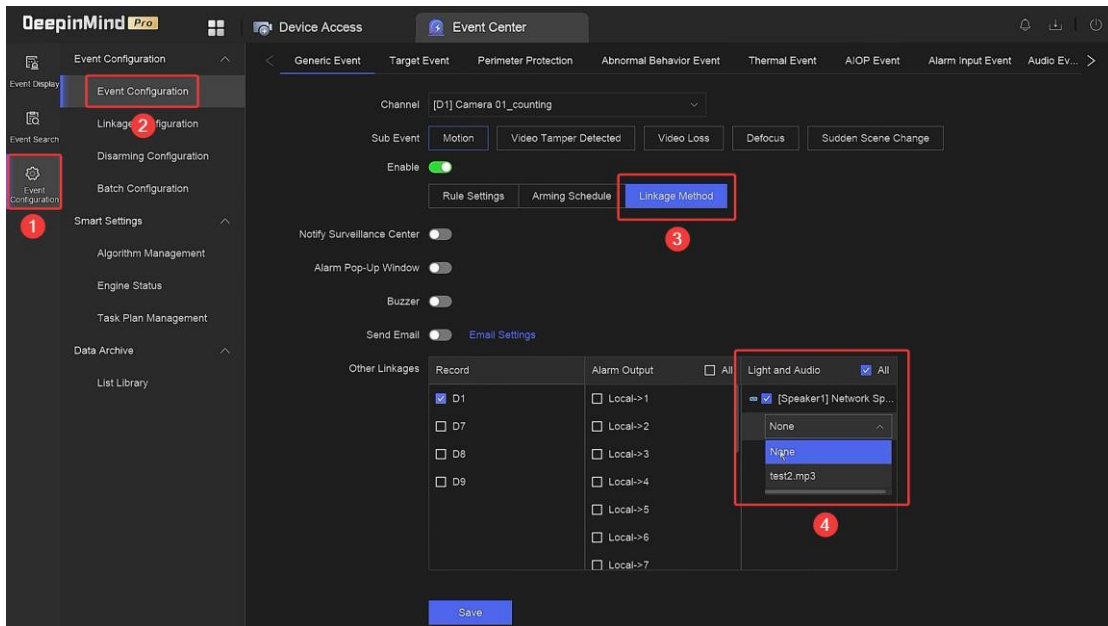


#### 4. Enable Voice Broadcast

Enter **Live View** module, select broadcast icon at the right bottom corner of the interface, tick speakers that users want to broadcast, then click **Start** to start one-way broadcast (from one NVR to multiple speakers).

<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	5 of 5

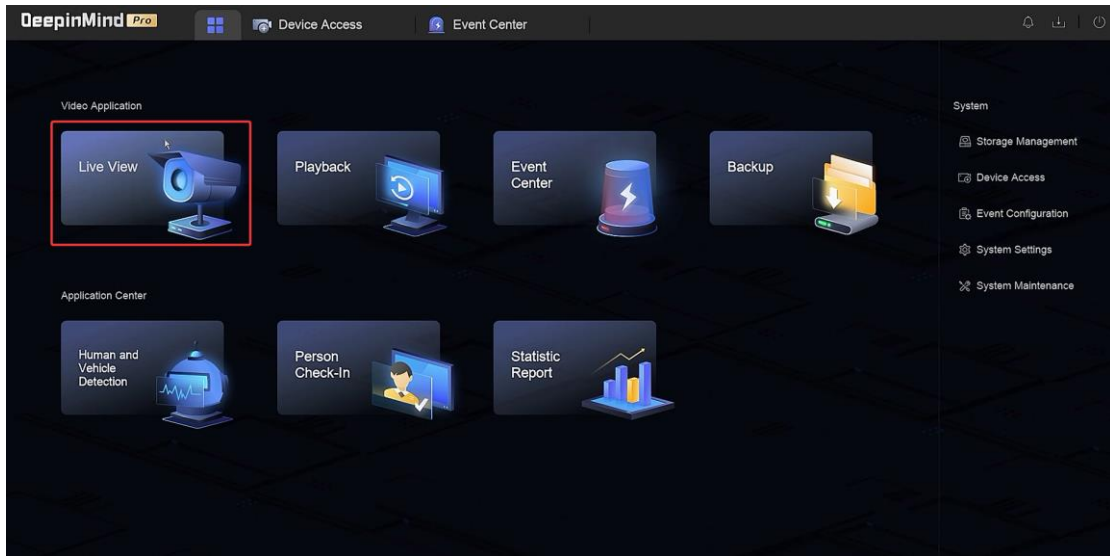

<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	6 of 5

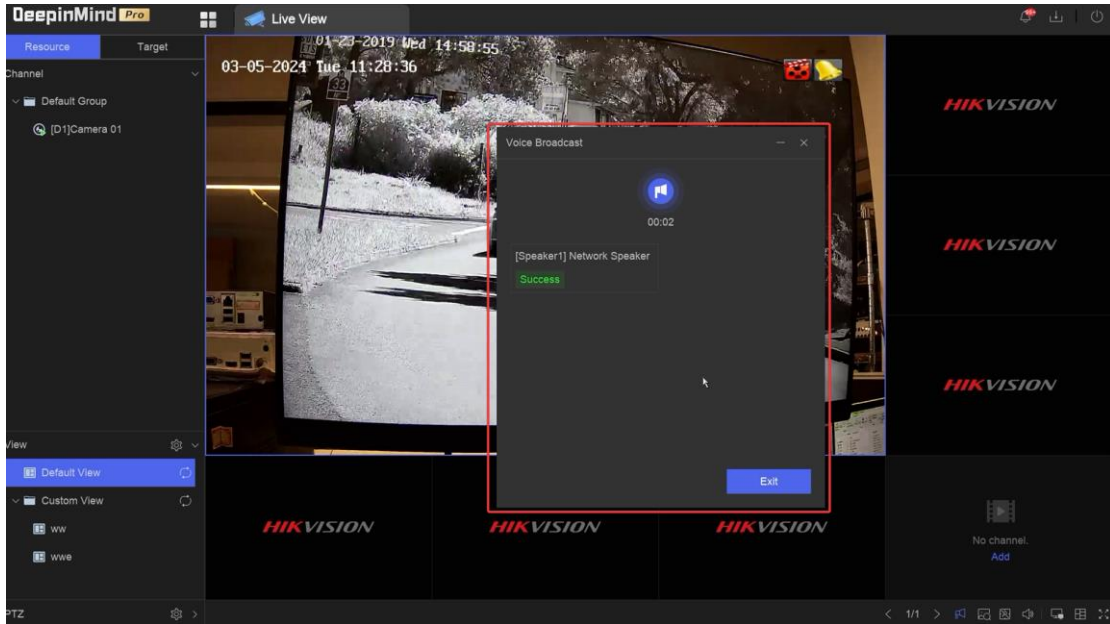

## 5. Enable Two-Way Audio

If users link video channels to speakers when adding speakers to NVR, then users can open two-way audio in live view to do two-way talk between NVR and speaker one on one.

Note: Only network speakers that have built-in mic support two-way audio with NVR.



## WEB Configuration

### 1. Add Speaker to NVR

Log in to NVR's WEB page, select **Device Access-Audio Device-IP Speaker** one by one, then user can add speakers to NVR by inputting parameters of speaker or quick add speakers from **List of Online Devices** if they are under same LAN (speakers' password should be same as default channel password of NVR).

The top screenshot shows the 'Add Device' dialog box in the Hikvision NVR GUI. The dialog box has the following fields and options:

- List of Online Devices (0):** A table with columns: No., IP Address, Device Model, Status, Protocol, Mana..., Si... (No data is shown).
- IP Address\*:** Input field with a 'Test' button.
- Device Name\*:** Input field with 'Speaker 01' entered.
- Protocol:** Dropdown menu set to 'HIKVISION'.
- Management Port\*:** Input field with '80' entered.
- User Name:** Input field with 'admin' entered.
- Password:** Input field with a lock icon and a checkbox for 'Use Default Activation Password'.
- Link Video Channel:** A section with a dropdown set to 'All' and a list of cameras: [D1] Camera 01, [D2] Camera 01, [D3] Camera 02.
- Buttons:** 'OK', 'Continue to Add', and 'Cancel'.

The bottom screenshot shows the 'List of Online Devices' table in the Hikvision NVR GUI. The table has the following columns: Device Name, IP Address, Status, Password ST..., Protocol Type, Manage..., Link Vide..., Added/Total, Serial No., Version, MAC Address, IPv6, and Operation. One device is listed:

Device Name	IP Address	Status	Password ST...	Protocol Type	Manage...	Link Vide...	Added/Total	Serial No.	Version	MAC Address	IPv6	Operation
Speaker 01	10.9.96.100	Online	Weak	HIKVISION				DS-QAZ1203G1-BE20230...	V1.2.2build 240103	3c:1b:f8:80:73:d5	--	+

Users can link video channel to speaker when add speaker to NVR, so that user can apply two-way talk between WEB and speaker in live view page.



<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	8 of 5


## Link Video Channel

All
 

- [D1] Camera 01
  - [D2] Camera 01
  - [D3] Camera 02
  - [D4] test


## 2. Configure Speaker Parameters

Select **Device Access-Device Configuration-Device Parameter-Audio Device** one by one, and then users can configure audio parameters of speaker.

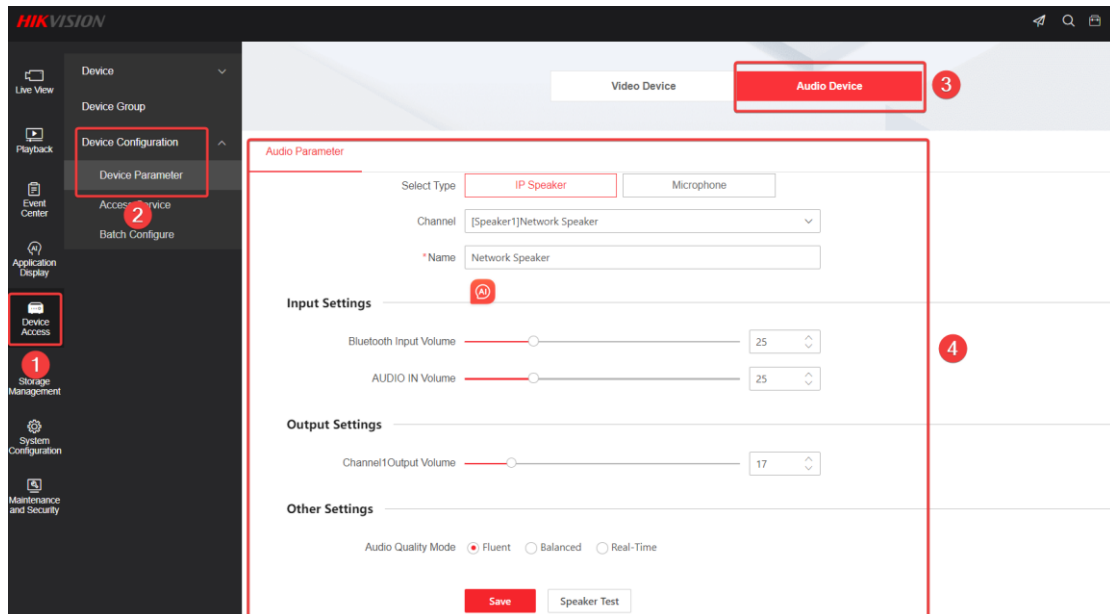


## 3. Configure Event Linkage Audio

Select **Event Center-Event Configuration-Linkage Configuration-IP Speaker** one by one to enter material library, then users can import audio material to network speaker via NVR's WEB.

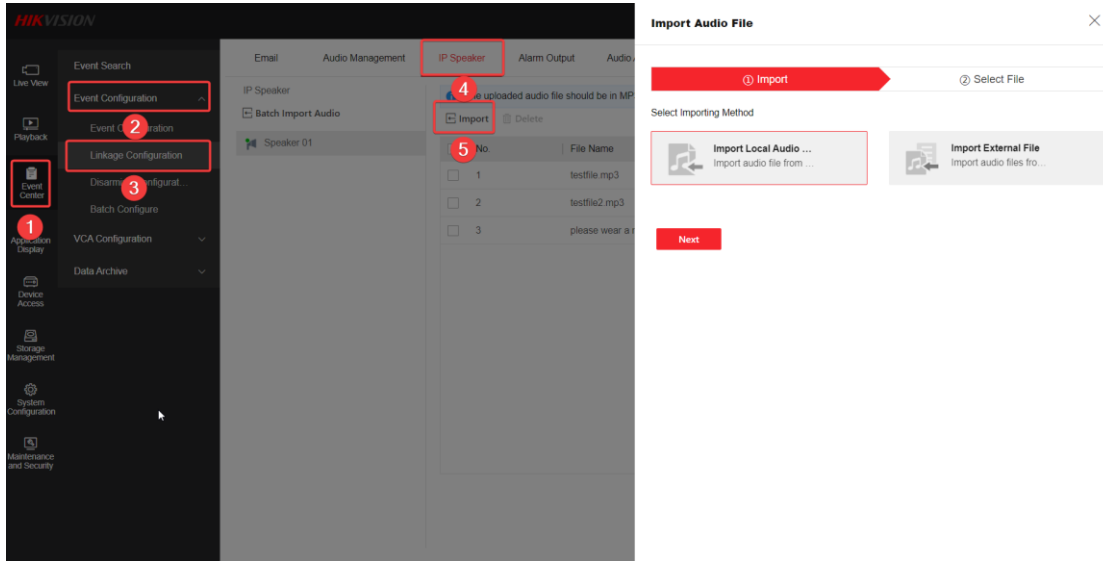

After audio import, select **Event Configuration**, then select an event needed to set **Linkage Method** as **Speaker** with certain audio material, so that corresponding audio will be played when event is triggered.

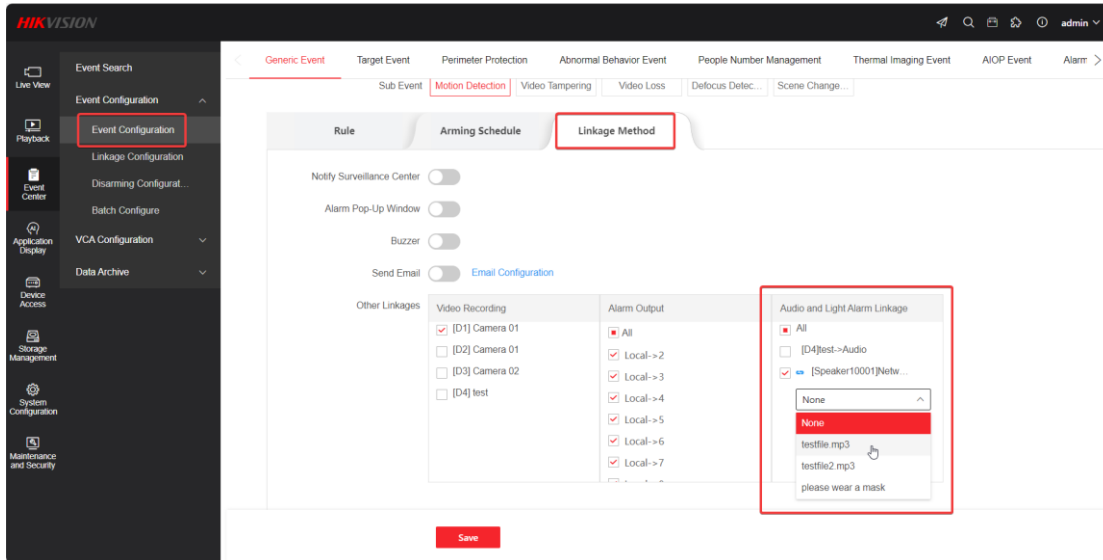


Now only **motion detection**, **line crossing**, **intrusion**, **region entrance** and **region exiting** support speaker linkage.

#### 4. Enable Voice Broadcast

Enter **Live View** module, select broadcast icon at the right bottom corner of the interface, tick speakers that users want to broadcast, then click **Start** to start one-way broadcast (from one NVR's WEB to multiple speakers).

<b>Title:</b>	How to Use Network Speaker with NVR GUI 5.0	<b>Version:</b>	v1.0	<b>Date:</b>	2024/03/07
<b>Product:</b>	NVR			<b>Page:</b>	10 of 5

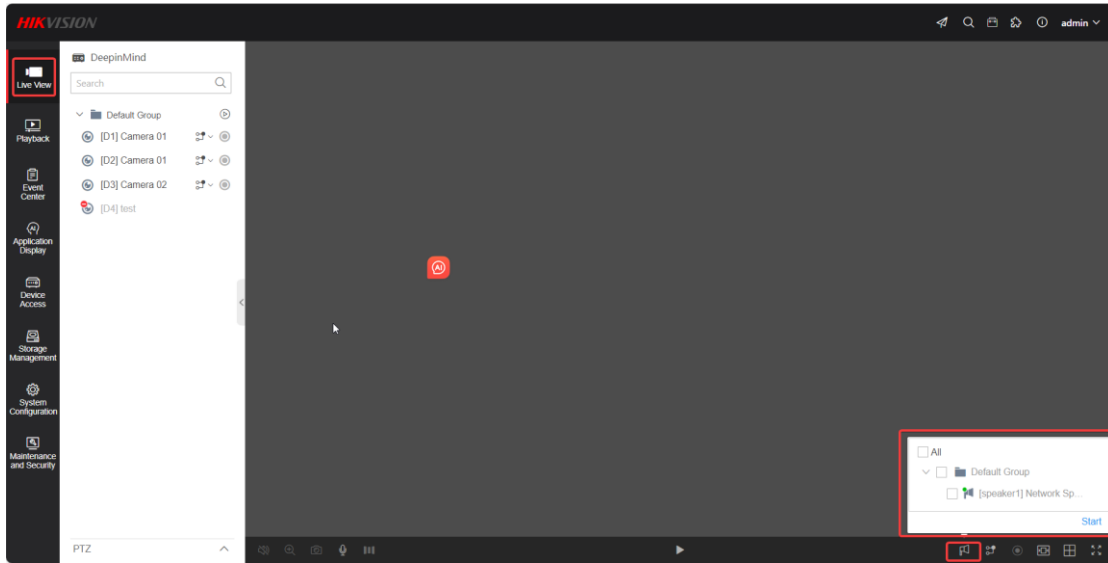

## 5. Enable Two-Way audio

If users link video channels to speakers when adding speakers to NVR, then users can open two-way audio in live view to do two-way talk between NVR and speaker one on one.

Note:

1. To open two way audio with speaker on NVR's WEB, users need choose **Network Camera Two-Way Audio** channel.
2. Only network speakers that have built-in mic support two-way audio with NVR.

