


## How to Configure Face Capture

Face Capture function were added in v5.6.0 build 190130 firmware version for **DS-2DF6Axxx** and **DS-2DF8Axxx** models. This document explains how to configure this function for those models.


### Configuration Steps:

1. Go to Configuration -> System -> System Settings -> VCA Resource, select 'Face Capture', and click 'Save':

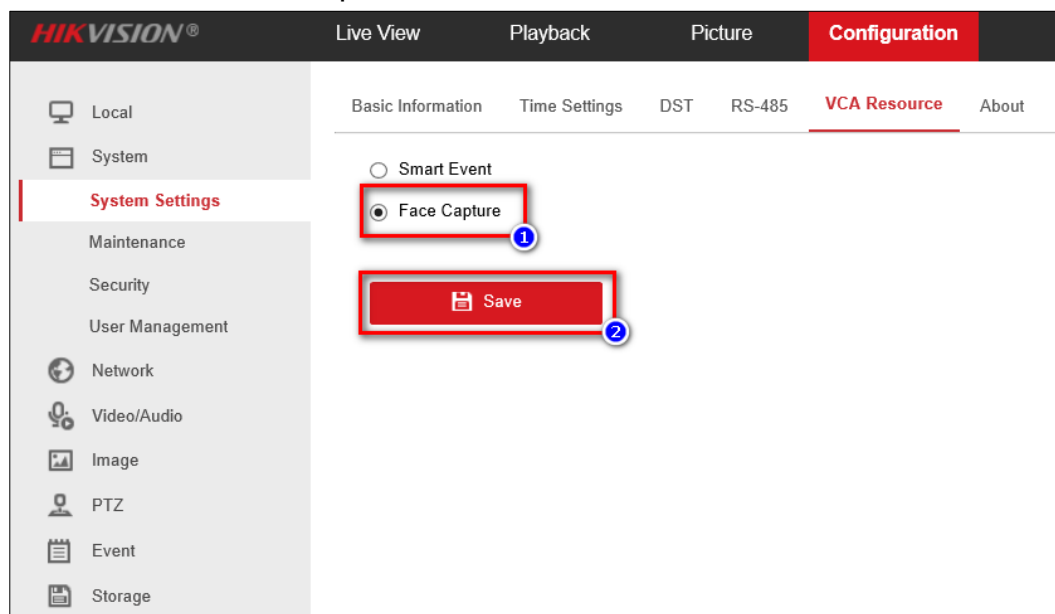


*Note: VCA options are mutually exclusive. A reboot is needed for the settings to take effect.*

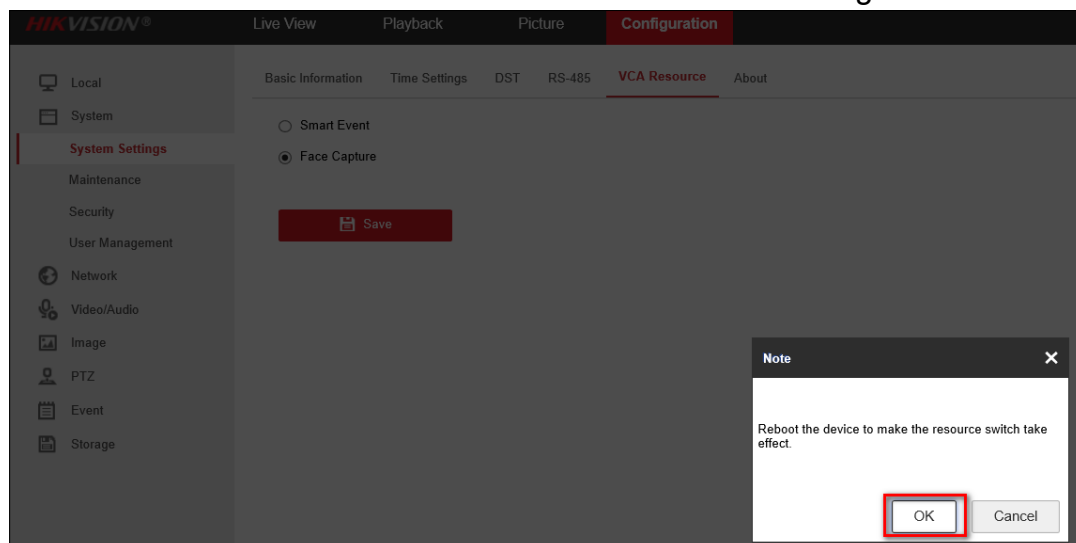

2. Reboot the device to switch the VCA resource settings:

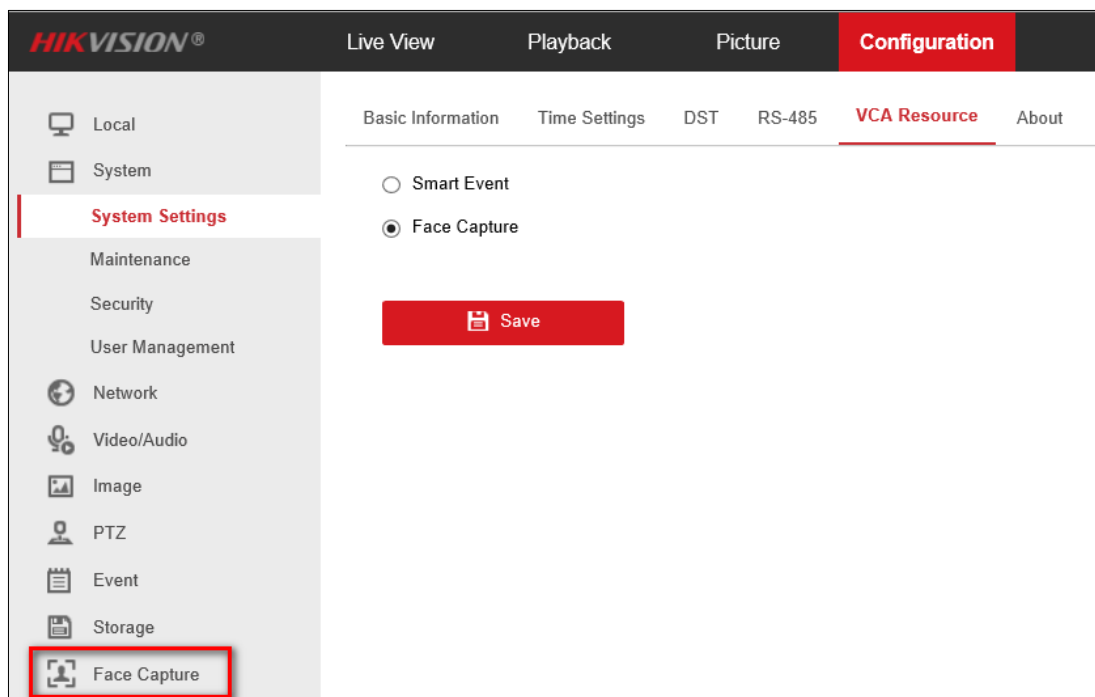


3. After the rebooting is done, re-login the dome, the new 'Face Capture' option is appeared on the left pane:




4. Configure basic Face Capture function in Face capture -> Rule:

- 1) Check **Enable** to enable the function
- 2) Select a **Detection Scene** from the dropdown list. Adjust the live image to a desired scene.
- 3) Click  and draw detection area on live image.
- 4) Click  and draw min. pupil distance on live image.
- 5) Input Mounting Height of the camera.
- 6) Save the settings.

*Note: Up to 8 Detection Scene is supported.*

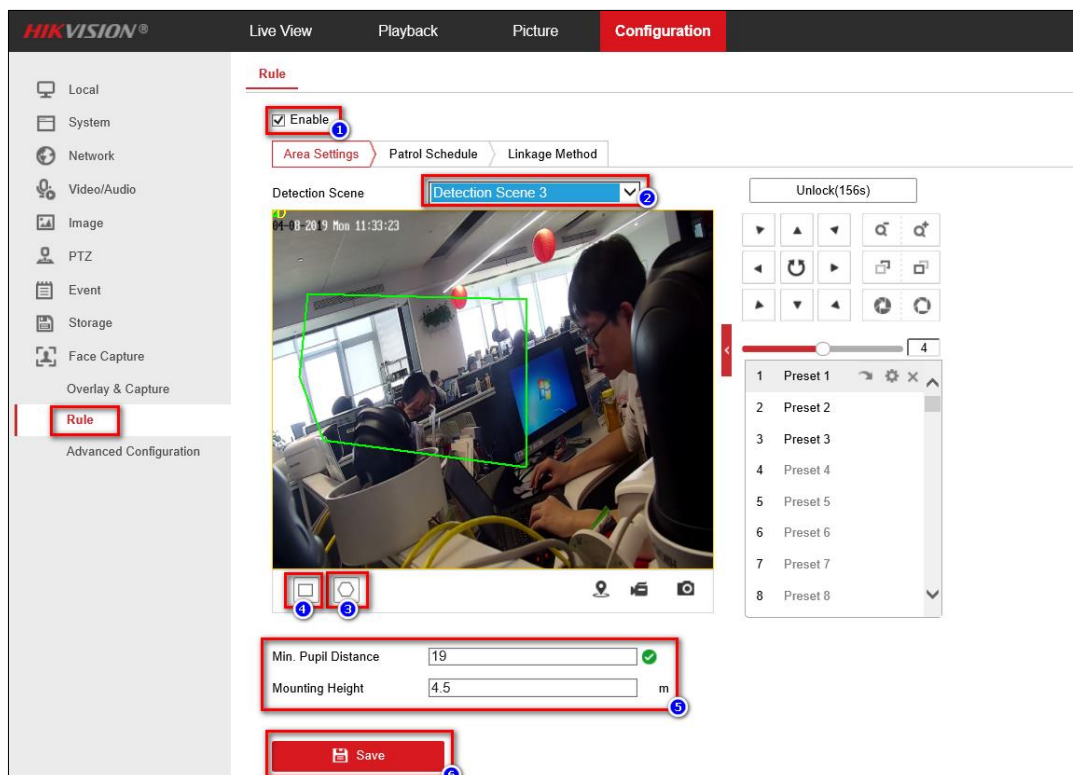

- Configure the Patrol Schedule for the corresponding scene. Click 'Save'. The configuration is finished.

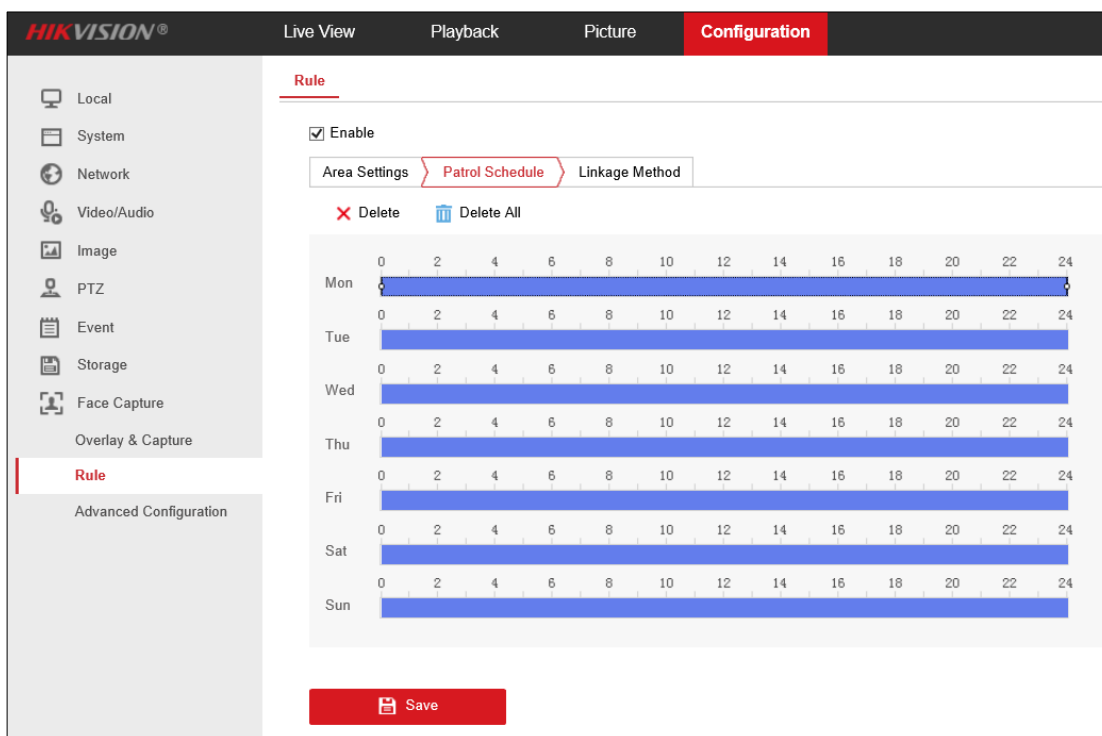

*Note: The face ID appeared on the live view refers to the detected face number since last reboot; and the score is the corresponding face quality (Max: 100).*

**First Choice for Security Professionals**

***HIKVISION* Technical Support**