



How to export video in NVR

Quick Guide

HIKVISION TECHNICAL SUPPORT TEAM


2022-03-02

How to export video in NVR

Notice:

The video in NVR can be exported in local side and web side.


Web side: Goes to the web playback menu:

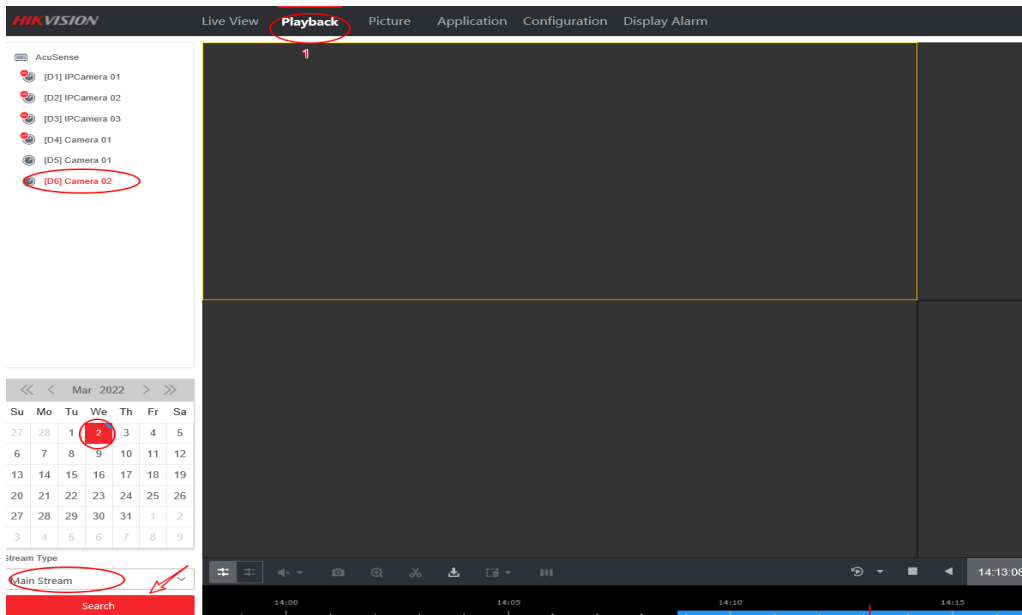

NVR Web side

- 1) Choose the camera you need to export the file, choose the date and the stream type;


Note: the stream type can be find in Configuration-Storage-Schedule Setting-Advanced, see the picture below:

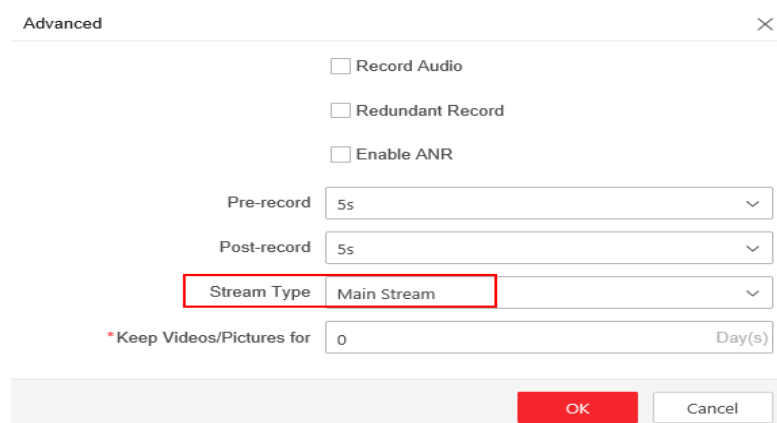


Stream type in storage

- 2) Click the download, then here's the web page about download the files, click search, here will show the files found. See the below picture:



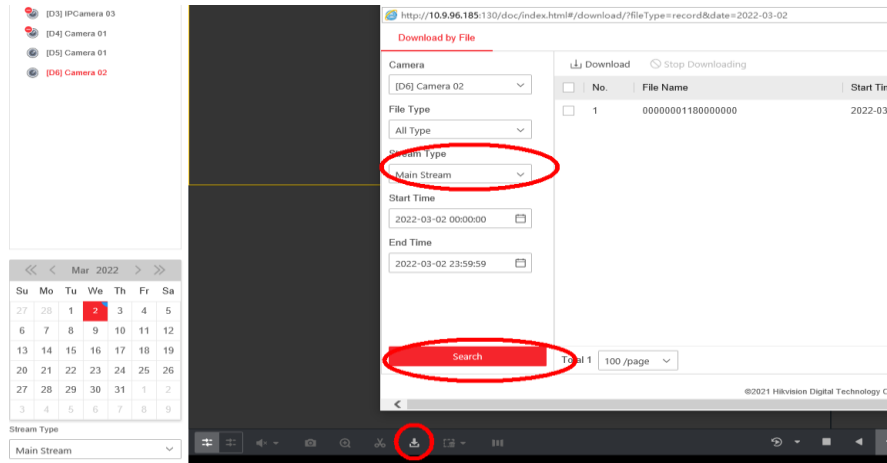

- 3) Choose the files you need to download, then click download, after finish, in right bottom will show the files.

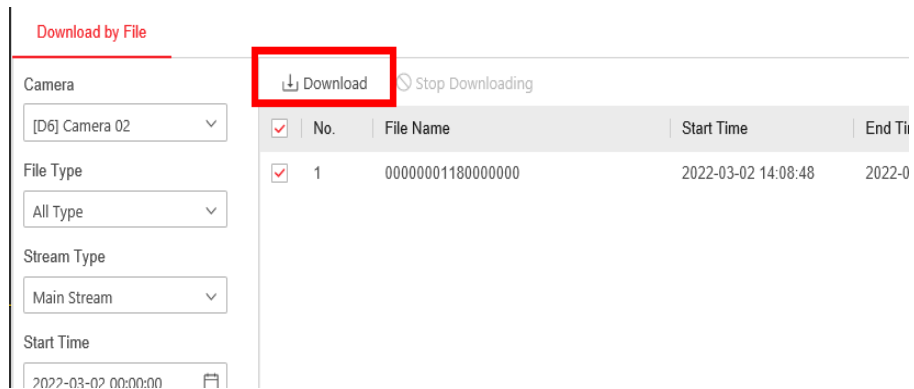

Notice:

You can choose the record files path in laptop. It can be determined in Configuration- Local.

Record File Settings

Record File Size 256M 512M 1G

Save record files to

Save downloaded files to


Local side: Before you export files in local side, you need to insert a U-disk in Format fat.32. Then goes to the local playback menu:

- 1) Choose the channel and the time, click the custom search, see the below picture:






2) Click the export menu in right top.

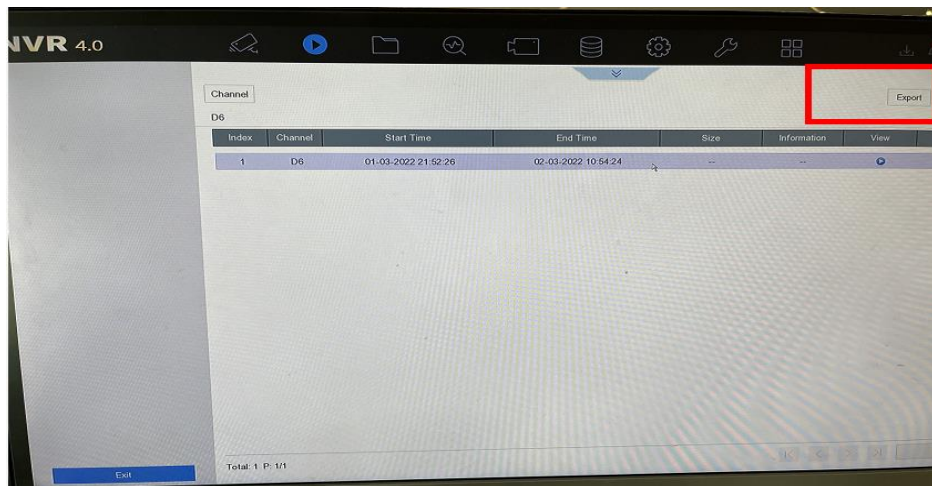


3) Choose the export video and log.

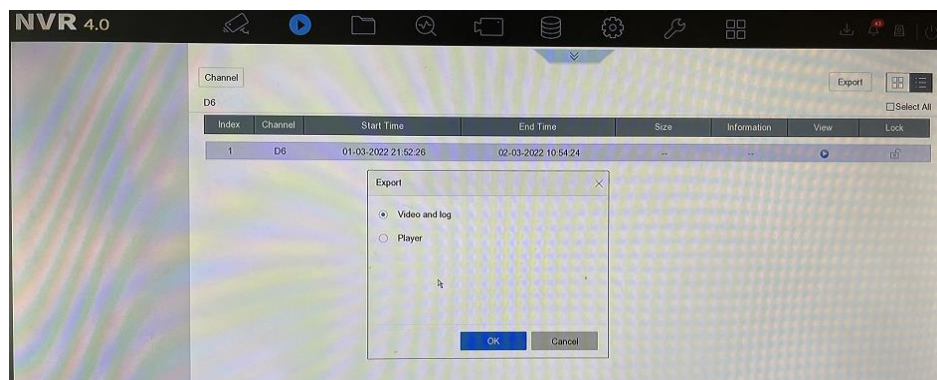

4) Choose the device name and the backup type, click ok. Then the file can be exported.



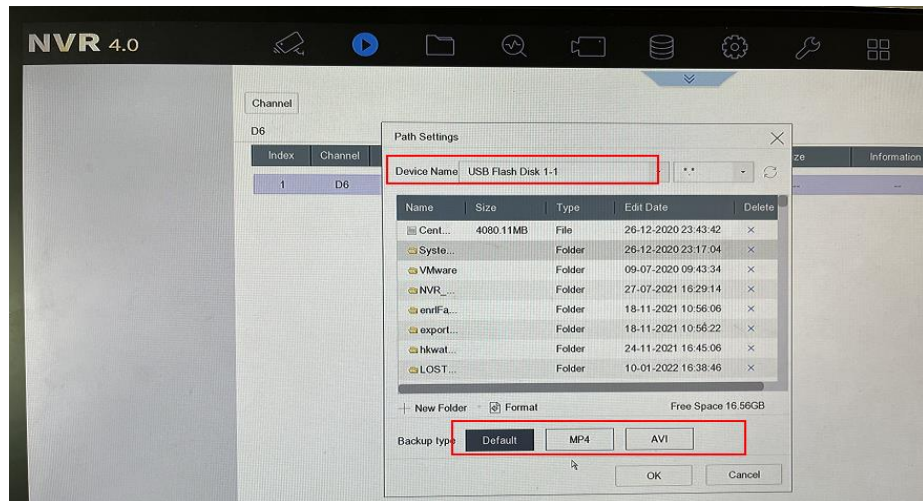

First Choice for Security Professionals
Hikvision Technical Support

